

EMICON

CLIMATE SOLUTIONS

RAS MC Kp / MC VB Kp/ F Kp - GPS Kp- PAS kp
OUTDOOR MONOBLOCK CHILLERS, MULTIFUNCTION UNITS FOR 4-PIPE SYSTEMS AND HEAT PUMPS
AIR CONDENSED
EQUIPPED WITH SEMIHERMETIC RECIPROCATED COMPRESSORS AND AXIAL FANS
(LOW OUTLET FLUID TEMPERATURE VERSION AVAILABLE)
(INTEGRATED FREE COOLING VERSION AVAILABLE)




INSTALLATION, USE AND MAINTENANCE TECHNICAL MANUAL

Incorporated in this document are the following:

- Declaration of conformity
- Technical manual
- Dimensional drawing
- Security data sheets



RETAIN FOR FUTURE REFERENCE

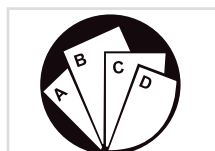

Multiple instructions:
Consult the specific part



Read and understand
the instructions before
undertaking any work on
the unit

Reproduction, data storage and transmission, even partial, of this publication, in any form, without the prior written authorisation of the Company, is prohibited. The Company can be contacted for all inquiries regarding the use of its products.

The Company follows a policy of continuous product development and improvement and reserves the right to modify specifications, equipment and instructions regarding use and maintenance at any time, without notice.

Declaration of conformity

We declare under our own responsibility that the below equipment complies in all parts with the CEE and EN directives.

The declaration of conformity is enclosed to the technical booklet enclosed with the unit. The unit contains fluorinated greenhouse gases.

INDEX

1. INTRODUCTION	5
1.1 Preliminary information	5
1.2 Aim and content of the manual	5
1.3 How to store this manual	5
1.4 Manual updates	5
1.5 How to use this manual	5
1.6 Potential risks	6
1.7 General description of symbols used.....	7
1.8 Safety symbols used.....	8
1.9 Limitations and prohibited use	8
1.10 Unit identification	9
2. SAFETY	10
2.1 Warning re potentially hazardous toxic substances	10
2.2 Refrigerant handling	10
2.3 Prevention of inhalation of high vapor concentrations	12
2.4 Procedures in the event of accidental release of refrigerant	12
2.5 Main Toxicological information on the type of refrigerant used	12
2.6 First aid measures	12
3. TECHNICAL CHARACTERISTICS	13
3.1 Unit description	13
3.2 Other versions	16
3.3 Accessories description	17
3.4 Technical data	20
3.5 Operation limits.....	28
3.6 Correction tables.....	29
3.7 Sound data	30
4. INSTALLATION	32
4.1 General safety guidelines and use of symbols	32
4.2 Workers' health and safety	32
4.3 Personal protective equipment	32
4.4 Inspection	33
4.5 Transport and handling	33
4.6 Storage	34
4.7 Unpacking.....	35
4.8 Lifting and handling.....	35
4.9 Location and minimum technical clearances	36
4.10 Serial interface card RS485 (INSE).....	38
4.11 Hydraulic connections.....	38
4.12 Chemical characteristics of the water	40
4.13 User circuit minimum water content.....	41
4.14 Filling the hydraulic circuit.....	41
4.15 Emptying the installation.....	41
4.15 Microchannel condensing coil.....	42
4.17 Wiring connections: Preliminary safety information	43
4.18 Electric data	44
5. UNIT START UP	46
5.1 Preliminary Checks	46
5.2 Position of the control panel	49
5.3 Description of the control panel	49
5.4 Remote keyboard connection	51
6. USE	52
6.1 Switch the unit on	52
6.2 Stop	53
6.3 How to change the set points	53
6.4 PROBES key	54

6.5 ALARM key	55
6.6 CIRC key	56
6.7 SERVICE key	58
6.8 Acoustic signal silencing	65
6.9 Arresto d'emergenza	65
7. UNIT MAINTENANCE	66
7.1 General warnings	66
7.2 Access to the unit	67
7.3 Routine maintenance	67
7.4 Periodical checks	68
7.5 Refrigerant circuit repair	71
8. DECOMMISSIONING	72
8.1 Unit Isolation & drain down	72
8.2 Disposal, recovery and recycling	72
8.3 RAEE directive (only for EC countries)	72
9. DIAGNOSIS & TROUBLESHOOTING	73
9.1 Fault finding	73
10. DIMENSIONAL DRAWINGS	75
11. SAFETY DATA SHEET OF REFRIGERANT	90
12. SAFETY DATA SHEET REFRIGERATION LUBRICANT PAG 46-68-100-125-150- UNIVERSAL	100

1. INTRODUCTION

1.1 Preliminary information

Reproduction, storage or transmission of any part of this publication in any form, without the prior written consent of the Company, is prohibited.

The unit to which these instructions refer, is designed to be used for the the purposes described and to be operated in accordance with these instructions.

The Company will not be liable for claims for damage caused to persons, animals, material goods or property caused by improper installation, adjustment and maintenance or improper use. Any use not specified in this manual is prohibited.

This document is intended to provide information only and does not form a contract with third parties.

The Company pursues a policy of constant improvement and development of its products and therefore reserves the right to change the specifications and the documentation at any time, without notice and without obligation to update existing equipment.

1.2 Aim and content of the manual

These instructions are intended to provide the information required for the selection, installation, use and maintenance of the unit.

They have been prepared in accordance with the European Union laws and with the technical standards in force at the date of issue of the instructions.

The instructions contain all the necessary information to prevent any reasonably foreseeable misuse.

1.3 How to store this manual

The manual must be kept in a suitable place with easy access for users and operators, protected from dust and damp.

The manual must always accompany the unit during the entire life cycle of the same and therefore must be transferred to any subsequent user.

1.4 Manual Update

It is recommended that the manual is updated to the latest revision available.

If updates are sent to the customer they must be added to this manual.

The latest information regarding the use of its products is available by contacting the Company.

1.5 How to use this manual



The manual is an integral part of the unit.



Users or operators must consult the manual before performing any operation and especially so when transporting, handling, installing, maintaining, or dismantling the unit in order to eliminate uncertainty and reduce risk.

In these instructions symbols have been used (described in the following paragraphs) to draw the attention of operators and users to the operations that have a higher risk and which must be performed safely.

1.6 Potential Risks

Whilst the unit has been designed to minimize any risk posed to the safety of people who will interact with it, it has not been technically possible to eliminate completely the causes of risk. It is therefore necessary to refer to the requirements and symbolism below:

LOCATION OF RISK	POTENTIAL RISK	METHOD OF INJURY	PRECAUTIONS
Thermal heat exchangers.	Small stab wounds.	Contact	Avoid any contact, use protective gloves.
Fan and fan grilles.	Cuts, eye damage, broken bones.	Insertion of sharp objects through the grid while the fans are operating.	Never put objects through the protection grilles.
Internal component: compressors and discharge pipes	Burns.	Contact	Avoid any contact, use protective gloves.
Internal component: electric cables and metallic parts	Electrocution, severe burns.	Defect in the supply cable insulation, live metallic parts.	Adequate protection of power cables, ensure correct earthing of all metal parts.
External to unit: unit enclosure	Poisoning, severe burns.	Fire due to short circuit or overheating of the supply cable external to unit.	Size cables and mains protection system in accordance with iee regulations.
Low pressure safety valve.	Poisoning, severe burns.	High evaporating pressure causing a refrigerant discharge during maintenance.	Carefully check the evaporating pressure during the maintenance operations.
High pressure safety valve.	Poisoning, severe burns, hearing loss.	Activation of the high pressure safety valve with the refrigerant circuit open.	If possible, do not open the refrigerant circuit valve; carefully check the condensing pressure; use all the personal protective equipment required by law.
Entire unit	External fire	Fire due to natural disasters or combustions of elements nearby unit	Provide the necessary fire-fighting equipment
Entire unit	Explosion, injuries, burns, poisoning, folgoramento for natural disasters or earthquake.	Breakages, failures due to natural disasters or earthquake	Plan the necessary precautions both electrical (suitable differential magneto and electrical protection of the supply lines; greatest care during the connections of the metal parts), and mechanical (special anchors or seismic vibrations to prevent breakages or accidental falls).

1.7 General Description of Symbols Used

Safety symbols combined in accordance with ISO 3864-2:



BANNED

A black symbol inside a red circle with a red diagonal indicates an action that should not be performed.



WARNING

A black graphic symbol added to a yellow triangle with black edges indicates danger.



ACTION REQUIRED

A white symbol inserted in a blue circle indicates an action that must be done to avoid a risk.

Safety symbols combined in accordance with ISO 3864-2:



The graphic symbol "warning" is qualified with additional safety information (text or other symbols).

1.8 Safety symbols used



GENERAL RISK

Observe all signs placed next to the pictogram. The failure to follow directions may create a risk situation that may be injurious to the user.



ELECTRICAL HAZARD

Observe all signs placed next to the pictogram.

The symbol indicates components of the unit and actions described in this manual that could create an electrical hazard.



MOVING PARTS

The symbol indicates those moving parts of the unit that could create risk.



HOT SURFACES

The symbol indicates those components with high surface temperature that could create risks.



SHARP SURFACES

The symbol indicates components or parts that could cause stab wounds.



EARTH CONNECTION

The symbol identifies Earthing connection points in the unit.



READ AND UNDERSTAND THE INSTRUCTIONS

Read and understand the instructions of the machine before any operations.



RECOVER OR RECYCLE MATERIAL

1.9 Limitations and prohibited use

The machine is designed and built exclusively for the uses described in "Limitations of use" of the technical manual. Any other use is prohibited because it may pose a potential risk to the health of operators and users.





The unit is not suitable for operations in environments:

- excessively dusty or potentially explosive atmospheres;
- where there are vibrations;
- where there are electromagnetic fields;
- where there are aggressive atmospheres

1.10 Unit identification

Each unit has a rating plate that provides key information regarding the machine. The rating plate may differ from the one shown below as the example is for a standard unit without accessories. For all electrical information not provided on the label, refer to the wiring diagram. A facsimile of the label is shown below:

EMICON CLIMATE SOLUTIONS TEL.+39 0543495611 FAX+39 0543 495612 Via A.Volta 49 Meldola FC ITALY		 NB 0948							
MODELLO MODEL MODÈLE MODEL		ANNO DI COSTRUZIONE / PED CATEGORY MANUFACTURE YEAR / PED CATEGORY JAHR VON KONSTRUKT / PED KATEGORIE ANNÉE DE FABRICAT / CATEGORIE PED	2019 CAT						
MATRICOLA SERIAL NR N° DE SÉRIE STAMM NR		CORRENTE MAX. MAX CURRENT INPUT MAXIMALEN STROM AMPÈRES MAXIMALE	A						
ALIMENTAZIONE ELET. SUPPLY VOLTAGE ALIMENTATION ELECT. SPANNUNG	400 V +/- 10% - 50 Hz +/- 2% - 3 PH - N-GND	ASSORBIMENTO ELETTRICO NOMINALE PUISSANCE ÉLECTRIQUE NOMINALE NOMINAL ABSORBED POWER NOMINALELEISTUNGS-AUFNAHME	kW						
GAS REFRIGERANTE REFRIGERANT RéFRIGÉRANT KALTEMITTEL	R290 / 3,3	CORRENTE CORTO CIRCUITO SHORT CIRCUIT CURRENT COURANT COURT-CIRCUIT STROM KURZSCHLUSS	kA 10						
CARICA REFRIGERANTE REFRIGERANT CHARGE KALTEMITTEL CHARGE FRIGORIGÈNE	<table border="1"> <tr> <td>C1</td> <td>C2</td> <td>kg.</td> </tr> <tr> <td>C1</td> <td>C2</td> <td>CO2 Ton</td> </tr> </table>	C1	C2	kg.	C1	C2	CO2 Ton	PESO OPERATIVO OPERATING WEIGHT POIDS OPERATION. ARBEITSGEWICHT	kg. 
C1	C2	kg.							
C1	C2	CO2 Ton							
LATO BASSA PRESSIONE / LOW PRESSURE SIDE CIRCUIT BASSE PRESSION / NIEDERDRUCKSEITE		LATO ALTA PRESSIONE / HIGH PRESSURE SIDE CIRCUIT HAUTE PRESSION / HOCHDRUCKSEITE							
PRESSIONE DI PROGETTO DESING PRESSURE PRESSION DE PROJET DRUCK DES PROJEKTES		PRESSIONE DI PROGETTO PS DESING PRESSURE PS PRESSION DE PROJET PS DRUCK DES PROJEKTES PS							
-- Bar		-- Bar							
TEMP. MIN PROGETTO MINI DESING TEMPERATURE KLEINSTE TEMP. DES PROJEKTES TEMP. MOINORE DE PROJET		TEMP. MIN PROGETTO MINI DESING TEMPERATURE KLEINSTE TEMP. DES PROJEKTES TEMP. MOINORE DE PROJET							
- 30 °C		- 10 °C							
MAX TEMPERATURA PROGETTO MAX DESING TEMPERATURE MAXIMALE TEMP. DES PROJEKTES MAXIMUN TEMP DE PROJET		MAX TEMPERATURA PROGETTO MAX DESING TEMPERATURE MAXIMALE TEMP. DES PROJEKTES MAXIMUN TEMP DE PROJET							
+ 54 °C		+110 GAS + 65 LIQU °C							
		TARATURA ORGANO SICUREZZA SETTING OF SAFETY DEVISE MISE AU POINT DISPOSITIF DE SECURITE EINSTELLWEERT SICHERHEITSELEMENT							
		-- Bar							




The product label should never be removed from the unit.

2. SAFETY

2.2 Warning on potentially dangerous toxic substances

2.2.1 Identification of the used fluid: R290 (Propane)

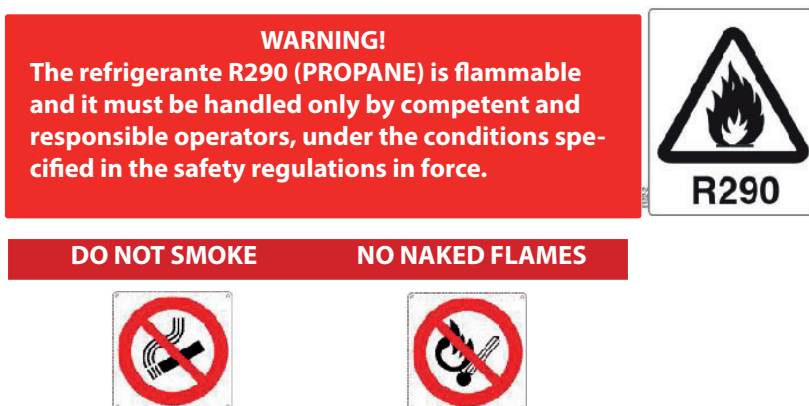

The refrigerant used is Propane (R290). In compliance with 2014/68/EU directive (hereafter: PED), this substance is considered a gas (PED, art. 13) of Group 1 which contains the dangerous fluids (extremely flammable). According EN 378-1, att. F, Propane is classified as a Group 3 substance (low toxicity, high flammability).

Safety information of this refrigerant are listed in the following table

Nome chimico	Propano
Designazione (ISO 817)	R290
Formula chimica	C_3H_8
Gruppo di sicurezza (EN378-1)	A3
Classificazione PED	Group 1 Gas
Limite inferiore di infiammabilità (LFL)	0,038 kg/m ³ – 2,1% m ³ /m ³ ()
Limite superiore di infiammabilità (UFL)	0,177 kg/m ³ – 9,8% m ³ /m ³ (1)
Densità del vapore (a 25°C, 101,3 kPa)	1,832 kg/m ³
Densità relativa	1,56
Massa molecolare	44 kg/kmol
Punto di ebollizione normale	-42°C
Temperatura di autoaccensione	470°C
Temperatura di infiammabilità	-104°C
Potenziale di riduzione dell'ozono (ODP)	0
Potenziale di riscaldamento globale (GWP - orizzonte temporale di 100 anni)	3 (CO ₂ = 1)

Note that Propane has an higher density then the air one, therefore in case of leaks, it will tend to flow down

CHEMICAL COMPOSITION OF PROPAN USED AS A REFRIGERANT:

Refrigerant content	≥ 99,5% by mass
Organic impurities	≤ 0,5% by mass

1,3 Butadiene (for each single unsaturated multiple hydrocarbon)	≤ 5 ppm in mass
Normal Hexane	≤ 50 ppm in mass
Benzene (for each aromatic mixture)	≤ 1 ppm in mass
Sulfur	≤ 2 ppm in mass
Non-condensable gases	≤ 1,5% in volume della fase vapore
Water	≤ 25 ppm in mass
Acid content	≤ 0,02 mg KOH/g per la neutralizzazione
Evaporation residue	≤ 50 ppm in mass
Particles / solids	Nessuno (ispezione visiva)
Evaporating temperature glide	≤ 0,5 K
Practical limit (EN378-1, all.F)	0,008 kg/m ³
Acute Toxicity Exposure Limit (ATEL) / O2 Deprivation Limit	0,09 kg/m ³

Propane highlights compatibility problems with some rubber or plastic types, particularly if chlorurated. Tests on critical materials will be required.

2.1.2 Identification of the Type of Oil Used.

The lubricant used is polyester oil. Please refer to the information provided on the compressor data plate.



For further information regarding the characteristics of the refrigerant and oil used, refer to the safety data sheets available from the refrigerant and oil manufacturers and attached in this manual.

Main Ecological Information Regarding the Types of refrigerants Fluids used.



ENVIRONMENTAL PROTECTION : Read the ecological information and the following instructions carefully.

2.1.3 Persistence and degradation

The refrigerants used decompose in the lower atmosphere (troposphere) relatively quickly. The decomposed products are highly dispersible and therefore have a very low concentration. They do not influence the photochemical smog which is not among the VOC volatile organic compounds (as stipulated in the guidelines to the UNECE). The used constituent refrigerants do not damage the ozone layer. These substances are regulated under the Montreal Protocol (revised 1992) and regulations EC no. 2037/200 of 29 June 2000.

2.1.4 Effects of discharges

Discharges into the atmosphere of this product does not cause a long-term contamination.

2.1.5 Exposure controls and personal protection

Wear protective clothing and gloves, protect your eyes and face

2.1.6 Professional exposure limits

Limit values TLV-TWA: 2500 ppm

2.2 Refrigerant handling



Users and maintenance personnel must be adequately informed about the possible risks of handling potentially toxic substances. Failure to follow such instructions can cause damage to personnel or to the unit.

2.3 Prevent inhalation of high vapor concentration

Atmospheric concentrations of refrigerant must be minimized and kept to a level that is below the occupational exposure limit. Vapor is heavier than air and can form dangerous concentrations near the ground where the ventilation rate is lower. Always ensure adequate ventilation. Avoid contact with open flames and hot surfaces as this can cause toxic and irritating decomposition products to form. Avoid contact between liquid refrigerant and the eyes or skin.

2.4 Procedures to be adopted in the event of accidental release of refrigerant

Ensure suitable personal protection (especially respiratory protection) during cleaning operations.

If deemed safe, isolate the source of the leak. If the leakage is small and if adequate ventilation is provided, allow the refrigerant to evaporate. If the loss is substantial ensure that measures are taken to adequately ventilate the area.

Contain spilled material with sand, earth or other suitable absorbent material.

Do not allow the refrigerant to enter drains, sewers or basements, as pockets of vapor can form.

2.5 Main Toxicological Information Regarding the Type of refrigerant used

2.5.1 Inhalation

A high atmospheric concentration can cause anaesthetic effects with possible loss of consciousness. Prolonged exposure may lead to irregular heartbeat and cause sudden death. Higher concentrations may cause asphyxia due to the reduced oxygen content in the atmosphere.

2.5.2 Contact with skin

Splashes of nebulous liquid can produce frostbite. Probably not hazardous if absorbed through the skin. Repeated or prolonged contact may remove the skin's natural oils, with consequent dryness, cracking and dermatitis.

2.5.3 Contact with eyes

Splashes of liquid may cause frostbite.

2.5.4 Ingestion

While highly improbable, may produce frostbite.

2.6 First Aid Measures



Adhere scrupulously to the warnings and first aid procedures indicated in the REFRIGERANT AND LUBRICANT OIL SAFETY DATA SHEET attached at the end of this manual..

3. TECHNICAL CHARACTERISTICS

3.1 Unit description

The air cooled packaged chillers, multifunction units for 4-pipe systems and the heat pumps of RAS MC Kp, RAS MC VB Kp, RAS F Kp, GPS Kp and PAS Kp series are suitable for outdoor installation and are particularly indicated to cool pure fluid solutions for industrial applications or in air conditioning systems of the service industry where it is necessary to grant excellent performances and a very low environmental impact. The units are designed for external installation, in compliance with the European standard EN 378 and relevant updates.

Depending on the capacity required the units are available with 1 or 2 independent cooling circuits equipped with 1 or 2 compressors for every circuit (tandem configuration).

Thanks to the many available options, these chillers are particularly versatile and are easily adaptable to the different types of plants, where production of chilled or heat water is required.

All the units are completely factory assembled, tested and supplied with refrigerant plus non-freezing oil; so, once on installation site, they only need to be positioned and connected to the hydraulic and power supply lines.

3.1.1 Frame

Strong and compact structure, made of base and frame with high-thickness galvanized steel elements assembled with stainless steel rivets; All galvanized steel surfaces externally positioned are superficially coated by an oven powder-painting with color RAL7035. The technical section which contains compressors and the other cooling circuit elements is closed in a sound-proofed and insulated cabinet. The units in heat pump version are equipped with a drip tray with antifreeze heater.

3.1.2 Compressors

Semi hermetic alternative type compressors optimized to operate with the hydrocarbons and realized in compliance with the regulation on safety in force; the electrical motor, arranged to start with low inrush current (PW option), is equipped with thermal protection module (installed in the electrical cabinet); the lubricating system, of forced type, is equipped with oil filters and check valves to survey the lubricating pressure and is made through a high pressure pump. Each compressor is installed on rubber type vibration dampers and is provided with switch-off valve on suction and discharge side, electronic differential pressure switch for the oil level control, crankcase heater and temperature probe on discharge side to control the compressor discharge temperature. If the compressors are installed in "tandem" version, each one is equipped with oil level sensor and oil recuperator; this device activates automatically when in one compressor the lubricant level goes down then minimum value.

3.1.3 User side exchanger

Stainless steel plates type mono or bi circuits evaporator, thermally insulated using a flexible closed cells mattress of high thickness. The evaporator is equipped with a safety differential pressure switch on water side, which does not allow the unit operation in case of water flow lack or reduction.

3.1.4 Aeraulic Coils

The RAS MC Kp, RAS MC VB Kp series external exchanger coils are made of microchannel aluminium extruded pipes and brazed aluminium fins. Thanks to the reduced whole volume and the high external surfaces, these coils allow a great reduction of refrigerant charge and high heat exchange capacity. In the heat pump (PAS Kp), Free-cooling (RAS F Kp) and in multifunction units for 4-pipe systems (GPS Kp) version, the external exchanger coils are made of micro-finned copper pipes arranged in staggered and mechanically expanded ranks inside of a aluminium finned pack. On multifunction units and heat pumps, the aluminium fin is standard provided with hydrophilic treatment and its profile is designed for the maximum heat exchange efficiency. Free-cooling external coils are made of copper pipes with optimized section able to reduce the glycol side pressure drop and aluminium finned pack. They are fed through a 3 way valve with servomotor, able to open the circuit when the external temperature is 3°K less than the inlet temperature of the fluid to be cooled.

3.1.6 Axial Fans

6 poles axial fans with electrical motor and external rotor directly coupled to the impeller; aluminium blades with wings profile are suitably designed to avoid any turbulence in the air detachment zone, granting in this way the maximum efficiency with the minimum noise level. The fan is equipped with a galvanized steel protection grid painted after the construction; the fan motors are of totally closed type and have a protection factor IP54 and winding-flooded protection thermostat. In the VB and F versions, the fans are equipped with a V/F inverter system, which controls the condensation temperature modulating the fans rotation speed.

On multifunction units, the standard control of condensing fans is made by the variation of fans rotation speed.

3.1.6 Regenerative exchanger

Heat regenerative exchanger gas/fluid of plates type installed on each circuit, to grant a suitable overheating value to the compressor sucked gas and at the same time to increase the cooling circuit efficiency thanks to the higher sub-cooling of condensing coil leaving fluid.

Thermally insulated using a close cells mattress of high thickness.

3.1.7 Cooling circuit

Independent cooling circuits each provided with a shut-off valve for refrigerant charge, antifreeze probe, sight glass, dehydrating filter for R290 with wide filtering surface, high pressure side safety valve equipped with connector to the discharge refrigerant conveying piping, electronic thermostatic valve (for 1001, 2402 and following bigger frames), settable pressure switches and high/low pressure gauges for R290* specifically.

All the components the cooling circuit is made of are suitable to work with hydrocarbons and with Propane specifically.

**The units in heat pump versions, besides the 4-way cycle inversion valve, are equipped with suitable sized gas/liquid separator on suction side and liquid receiver. Multifunction units (GPS Kp) can be provided with a 4-way reversing valve and are complete of refrigerant/liquid separator on suction side and liquid receiver. When necessary, there is an oil separator on discharge side as well.*

3.1.8 Electrical board

The electrical panel is separated from the technical section and is realized in order to avoid the refrigerant entry in case of leak. The inverter compartment is separated as well and equipped with self-ventilation system. The unit is planned in order to activate the actuators block in case of anomalies.

The electrical panel, in compliance with European standards in force, is built inside of a metal container with a protection factor making it suitable for an external installation. Its main features are:

- Three-phase power supply 400V/3ph/50Hz +N in all the units (special requests excluded);
- Control circuit 24Vac with insulation transformer;
- Auxiliary circuit 230V with insulation transformer;
- Compressors protection with magneto thermal switch and fuses and also with thermal module (Kriwan);
- Mechanical main switch with door-locker;
- Signal and control Free-contacts terminal board;

Inside the a.m. electrical cabinet, closed by an access panel equipped with main switch, are installed the following main components:

- Contactors;
- Transformers;
- Numerated conductors;
- Low tension auxiliary circuits;
- Terminal boards;
- Management and control electronic boards.

All the units are subject to the safety cycle with protection circuit continuities tests, insulating heater and tension test (dielectric strength). The group is realized through the management program recorded in the electronic microprocessor.

The microprocessor is made up of:

- A Control electronic board with the terminal boards for the functional parameters transmission and the activation of the control devices;
- User interface card with program keys and alphanumeric display showing the operating status, realizing among the others, the following functions:
 - Unit ON/OFF from keyboard or remotely;
 - Alarm and alert status management;
 - Compressors operating status.

The User interface display of the microprocessor also allows to see the following parameters:

- Set regulation parameters values;
- Functional variables values;
- Digital and analogical input /output status;
- Unit operation status;
- Alarm and alert warning;
- BMS systems interfacing possibility.

3.1.9 Microprocessor

Electronic Microprocessor for unit management installed inside the electrical cabinet, with double evaporator in/out control of the chilled water temperature, as well as control of working parameters and equalization of compressors working hours, failures auto-detection sy-

stem, alarm log, start and set point timeslot programming, possibility of remote management and supervision by enabling standard communication protocols management, complete with compressors hour counter.

3.1.10 Safety gas sensor

At unit start, there is the heating/initializing of the sensor (about 1' duration).

During this period the internal sensor LEDs flash, the refrigerant leakage alarm is signaled, with relevant light alarm on the electrical panel, the 24Vac auxiliary circuit is not powered and the compressor cabinet forced ventilation, made through the washing fans, is activated.

After that, no further signals arrive from the sensor, the control PLC is powered ON and the unit is ready to work.

Without refrigerant leakage alarm, the forced ventilation is cyclically made, 2' per hour, but a different timing can be set through a timer.

With refrigerant leakages, the sensor activates and the leakages signaling led immediately lights, powering the control PLC OFF, and activating the compressors cabinet washing fan. The ventilation keeps ON as long as the leakage sensor signals refrigerant presence.

The sensor has got 2 different alarm levels:

- The first one set at 20% of the LOWER FLAMMABLE LIMIT (LFL) with automatic reset; when the alarm is solved, the extraction fan stops, the PLC is again powered to return to the normal operation;
- The second one set at 30% of the LFL with manual reset; in this case, the extraction fan and the signal led will remain active and the PLC not powered till the alarm will be manually reset (disconnecting the sensor power supply or pressing the reset key inside the sensor itself).

Note: The red lamping signal on the door of the electrical panel indicates the refrigerant leakage and also the washing fan thermal alarm (to be manual reset inside the electrical cabinet), in this case the washing fan will stop, the forced ventilation is done anymore and the unit is stopped (POWER OFF).

Using the calibration tool it is possible to state if the sensor needs to be calibrated (see "Days left until maintenance= negative number")



THE PERIODIC MAINTENANCE OF THE SENSOR AND ITS CALIBRATION IS MANDATORY, SEE SECTION ON SCHEDULED MAINTENANCE. After 200 cumulative days of use (of power supply), the sensor goes in alarm asking for maintenance and stopping the unit.

The alarm is reset only once the maintenance is done.



Recalibration of the sensor is required after each alarm intervention.



The sensor must be replaced if, after calibration, its sensitivity falls below 55% as specified by the manufacturer.



The sensor must be calibrated every 12 months. In any case, if more restrictive, the national legislation in force must also be applied regarding the minimum calibration interval of the sensor.

3.2 Other versions

3.2.1 Standard version

Air cooled liquid chiller equipped with semi hermetic reciprocating compressors able to work on one or two independent cooling circuits in individual or tandem configuration, brazed plates exchanger in AISI 316 stainless steel, external condensing coils completely made of aluminum with microchannel technology, sized to work until 40°C of external air and -2°C of fluid outlet on user side.

3.2.2 Low temperature version (VB)

Air cooled liquid chiller equipped with semi hermetic reciprocating compressors able to work on one or two independent cooling circuits individual or tandem configuration, plates brazed exchanger in AISI 316 steel, external condensing coils completely made of aluminum with microchannel technology, sized to work until 40°C of external air and -14°C of fluid outlet on user side. AC Axial fans equipped with an inverter V/F condensing control system obtained through a fans rotation speed variation, electronic thermostatic valve and exchanger insulation with great thickness material.

3.2.3 Free cooling version (F)

Air cooled liquid chiller equipped with semi hermetic reciprocating compressors able to work on one or two independent cooling circuits individual or tandem configuration, brazed plates exchanger in AISI 316 stainless steel, external condensing coil made of micro finned copper pipes arranged in staggered ranks, mechanically expanded inside of a aluminum finned pack with integrated free-cooling section. The free-cooling is powered by a modulating 3-way valve with 0-10V signal and starts when the external temperature goes down of 3°K lower than the water inlet temperature. Axial fans AC equipped with an inverter V/F condensing control system, obtained by the fans rotation speed variation.

3.2.4 Heat pump version

Air cooled heat pumps equipped with semi-hermetic reciprocating compressors, working on 1 or 2 independent cooling circuits in single or tandem configuration, user side exchanger, brazed plates exchanger in AISI 316 stainless steel, external evapo-condensing coils made of micro finned copper pipes arranged in staggered ranks, mechanically expanded inside of a aluminum finned pack, in aluminum fins with hydrophilic treatment. Cycle inversion on Freon side through a 4 way-Valve. They are sized in cooling mode until 40°C of external air and -5°C of water outlet temperature at user side and in heating mode till -15°C with water outlet temperature 35°C.

3.2.5 Version of multifunction units for 4-pipe systems

Air cooled multifunction units with reciprocating compressors working on one or two independent cooling circuits.

The user side exchangers are of AISI 316 stainless steel plate type, external evaporating/condensing coils made with micro-finned copper tubes positioned in staggered rows, mechanically expanded into an aluminium finned pack with hydrophilic treatment.

Suitably sized to work up to 40°C external air (summer mode) and down to -5°C outlet on user side and down to -15°C with outlet water at 35°C (winter mode).

3.3 Options

A+V	Amperometer and voltmeter: Electrical devices used to measure the electrical current absorbed and the electrical supply voltage of the unit.
AE	Electrical supply different from standard
AXT	Axial fan diffuser : It allow a reduction of energetic consumption and of noise pressure thanks to the optimization of the air flow.
BT	Low ambient temperature operation: Electronic device for the continuous modulating voltage control of the condensing pressure through the variation of the fan rotation speed, which allows the operation till -10°C (Available as an option on standard version and standard provided for heat pumps and multifunction units for 4-pipe systems).
BF	Low ambient temperature operation (inverter): Electronic device, frequency converter type, for the continuous modulating control of the condensing pressure through the variation of the fan rotation speed, which allows the operation till -20°C external air temperature(standard included in VB and F Version).
CFU	Soundproofed compressors cabinet with higher thickness sound-proofed material insulation: Insulation of all the technical section with higher thickness soundproofed material
CS	Compressors inrush counter: Electromechanical device positioned inside the electrical board, recording the total inrush starts of compressors.
EC	Axial fans with electronic commutated motor: with external rotor directly coupled to a three-phase electronically commutated motor (EC) they have the possibility of a continuous regulation of the speed by means of a 0-10V signal completely managed by the microprocessor. Aluminum blades with wings profile are suitably designed to avoid any turbulence in the air detachment zone, granting in this way the max efficiency with the minimum noise level. The fan is equipped with galvanized steel protection grid painted after the construction. Thanks to a more accurate adjustment of air flow, they allow operation of the unit with external temperature down to -20°C.
ECP	Anticorrosive electro coating protection of condensing coils: Treatment of the coils composed by electro deposition process of epoxy paint particle forming an uniform and continuous film over the whole surface of exchanger, creating a flexible and smooth coating that is particularly resistant to corrosive agents. This type of treatment is indicated in case of installation in high contaminants concentration industrial environments (>100ppm), high atmospheric pollution urban areas (>125 ug/m³) or near costal areas.
GP	Condensing coil protection grid: Metal grid to protect against accidental impacts. (Alternative to GP1).
HRV2	High pressure double safety valve
I1	Victaulic insulation on pump side: Insulation of the joints by close-cell polyurethane material, to prevent condensation, pump side.
I2	Victaulic insulation buffer tank side: Insulation of the joints by close-cell polyurethane material, to prevent condensation, buffer tank side.
IH	RS 485 Serial interface: Electronic card to be connected to the microprocessor to allow connection of the units to supervision systems, for a remote control and monitoring of the unit. (Alternative to IH BAC).

IH-BAC	BACNET Protocol Serial Interface: Gateway to be connected to the microprocessor to allow the connection of the unit to external supervision system with BACNET Protocol in order to fully and remotely assistance (alternative to IH).
IWG	SNMP or TCP/IP Protocol serial interface: Electronic card to be connected to the microprocessor to allow the connection of the unit to external supervision system with SNMP or TCP/IP Protocol for a remote control and monitoring of the unit. (Alternative to IH or IHBAC).
MF	Phase monitor: Electronic device that checks the correct sequence and/or the lack of one of the 3 phases, switching off the unit if necessary.
MV	Buffer tank module: Of suitable capacity complete with expansion vessel, safety valve, water gauge, water charge and discharge valves, air purging valves, check valves for filter service operations.
P1	Pump group: Chilled water pump group made of a single pump, expansion vessel, safety valve water gauge, water charge and discharge valves, air purging valves, electric control of the pump. The pump is of enbloc 2-pole type.
P1H	Higher available pressure pump group: Chilled water pump group made of a single pump, expansion vessel, safety valve water gauge, water charge and discharge valves, air purging valves, electric control of the pump. The pump is of enbloc 2-pole type.
P2	Double pump group (only one working): Chilled water pump group made by two pumps in parallel, expansion vessel, safety valve, water gauge, water charge and discharge valves, air purging valves, water shut-off valve on suction and check valve on discharge for each single pump, electric control of the pump. The pump is of enbloc 2-pole type.
P2H	Higher available pressure double pump group (only one working): Chilled water pump group made by two higher available pressure pumps in parallel, expansion vessel, safety valve, water gauge, water charge and discharge valves, air purging valves, water shut-off valve on suction and check valve on discharge for each single pump, electric control of the pump. The pump is of enbloc 2-pole type.
PA	Rubber-type vibration dampers: Vibration bell type dampers for insulating the unit from the support base (supplied in kit), composed of a bell base in galvanized steel and rubber compound.
PCP	Anti-corrosive protection of the condensing coils (Powder coating): painting of the exchanger surface by application of a black colored epoxy resin suitable to ensure a protection against atmospheric agents, for coastal installations, industrial environments with an average concentration of pollutant (< 100 ppm) and urban areas with lower middle levels of atmospheric pollution (< 125 ug/m3). (Alternative to ECP).
PM	Spring-type vibration dampers: Spring-type vibration dampers support, for insulating the unit (supplied in kit), mainly indicated for installation in difficult and aggressive environments. Made of two steel plates containing a suitable quantity of harmonic steel springs.
PQ	Remote display: Remote interface displaying temperature values detected by probes, alarm digital inputs, outputs, remote ON/OFF of the unit. It also gives the possibility to change and program parameters and report/display alarms.
PW	Part-Winding: Equipment for step compressors starting, reducing of about 35% the inrush current of each compressor.
RA	Anti-freeze heater on evaporator: Electrical heater installed on the evaporator, in order to prevent freezing and provided with thermostat.
RF	Power factor correction system cosfi $\geq 0,9$: Electrical device made by suitable condensers for compressor rephasing that ensure a cosfi value $\geq 0,9$, so to reduce absorption from electrical network.
RL	Compressor overload relays: Electromechanical protection devices against compressors overload.

- RP** **Partial heat recovery:** Refrigerant/water plate exchanger (desuperheater) in series to the compressors. It is used to partially recover condensing heat capacity (about 20%) for production of sanitary water.
- RR** **Copper/Copper coil:** Special condensing coils with copper pipes and fins. (Available for free-cooling version, only).
- RV** **Personalized frame painting in alternative RAL colour.**
- TDS** **Electronic thermostatic valve:** of epoxy type of the finned pack and its frame, to be used in industrial very corrosive environments or where there is an high concentration of chlorides. . (Available for free-cooling version, only).
- TE** **Termostatica Elettronica:** Electronic thermostatic valve that reduces the response times of the unit. Useful in case of frequent changes on cooling demand, so as to improve efficiency. (standard included in model 1001, from model 2402 on and in all the units included in the VB version).
- V** **Voltmeter:** Electrical device measuring the electrical voltage of the unit power supply.
- VB** **Brine Version:** Unit suitable for working with evaporator outlet water temperatures lower than 0°C. A 20 mm evaporator insulation will be provided.
- VSC** **Inverter on compressor:** installation of inverter for the compressor frequency control (on 2-compressor units). On 4-compressor units, you will have 2 inverters.
- VSP** **Inverter for pump:** This option provides the installation of an inverter combined to user pump/s module.

3.4 Technical data

3.4.1 RAS MC VB Kp

RAS MC VB Kp		521	591	721	871	1001	1402
Nominal cooling capacity	kW	31,8	35,6	43,8	53,5	60,7	87,1
Total input power	kW	12,4	14,2	17,4	21,1	25,4	34,6
Total nominal current	A	31,0	32,4	35,5	44,6	53,7	71,0
EER	-	2,56	2,51	2,52	2,54	2,39	2,52
SEPR*	-	3,58	3,51	3,38	3,70	3,42	3,35
Refrigerant circuits	n°	1	1	1	1	1	2
Compressors	n°	1	1	1	1	1	2
Refrigerant data R290							
Refrigerant charge	kg	4	4	7	7	8	14
Global warming potential (GWP)		3	3	3	3	3	3
Equivalent CO ₂ charge	t	12	12	21	21	24	42
Axial fans ⁽¹⁾							
Number	n°	2	2	2	2	2	4
Total air flow	m ³ /h	16250	16650	18700	31200	32600	37400
Total fan power input	kW	1,2	1,2	1,2	3,9	3,9	2,4
Total fan current	A	5,2	5,2	5,2	7,8	7,8	10,5
Evaporator ⁽²⁾							
Number	n°	1	1	1	1	1	1
Water flow	m ³ /h	6,2	6,9	8,5	10,4	11,8	17,0
Pressure drop	kPa	27	34	16	23	29	18
Water connections diameter		1"1/4 Gas M	1"1/4 Gas M	2" Vic	2" Vic	2" Vic	2"1/2 Vic
Weights							
Transport weight	kg	1052	1056	1164	1242	1252	1942
Operating weight	kg	1056	1060	1170	1248	1258	1956
Dimensions							
Length	mm	2590	2590	2590	2590	2590	4840
Depth	mm	1370	1370	1370	1370	1370	1370
Height	mm	2570	2570	2570	2570	2570	2570
Sound data							
Sound pressure level ⁽³⁾	dB(A)	86,3	88,1	88,1	92,2	92,2	92,6
Sound power level ⁽⁴⁾	dB(A)	54,3	56,1	56,1	60,2	60,2	60,4
Power supply							
Voltage/Phase/Frequency	V/ph/Hz	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE

Performances are referred to the following conditions:

(1) Air temperature 35°C

(2) Fluid: water - in/out temperature: 12/7°C

(3) Sound power level in accordance with ISO 3744.

(4) Sound pressure level at 10 mt from the unit in free field conditions in accordance with ISO 3744.

*SEPR values stated in the data sheet are referred to MEDIUM TEMPERATURE process chillers (leaving water down to -8°C) and are calculated in compliance with 2015/1095 European Regulations



The refrigerant data may change without notice. It is therefore necessary to refer always to the silver label placed on the unit.

RAS MC VB Kp		1702	2102	2402	2902	3402	3702
Nominal cooling capacity	kW	106,1	124,1	149,2	172,0	207,6	235,3
Total input power	kW	41,9	51,3	57,4	71,7	85,5	103,2
Total nominal current	A	88,9	107,7	124,6	138,4	172,6	208,9
EER	-	2,53	2,42	2,60	2,40	2,43	2,28
SEPR*	-	3,75	3,49	3,75	3,38	3,68	3,47
Refrigerant circuits	n°	2	2	2	2	2	2
Compressors	n°	2	2	4	4	4	4
Refrigerant data R290							
Refrigerant charge	kg	14	15	16	18	23	24
Global warming potential (GWP)		3	3	3	3	3	3
Equivalent CO ₂ charge	t	42	45	48	54	69	72
Axial fans ⁽¹⁾							
Number	n°	4	4	4	4	6	6
Total air flow	m ³ /h	62000	63600	68200	73000	101400	101400
Total fan power input	kW	7,8	7,8	7,8	7,8	11,6	11,6
Total fan current	A	15,6	15,6	15,6	15,6	23,4	23,4
Evaporator ⁽²⁾							
Number	n°	1	1	1	1	1	1
Water flow	m ³ /h	20,7	24,2	29,1	33,5	40,4	45,8
Pressure drop	kPa	26	24	31	24	35	35
Water connections diameter		2"1/2 Vic	3" Vic	3" Vic	3" Vic	3" Vic	3" Vic
Weights							
Transport weight	kg	2096	2162	2518	2600	3102	3120
Operating weight	kg	2110	2188	2540	2632	3134	3152
Dimensions							
Length	mm	4840	4840	4840	4840	4430	4430
Depth	mm	1370	1370	1370	1370	2260	2260
Height	mm	2570	2570	2570	2570	2480	2480
Sound data							
Sound pressure level ⁽³⁾	dB(A)	95,7	95,7	96,0	96,0	99,2	99,7
Sound power level ⁽⁴⁾	dB(A)	63,4	63,4	63,7	63,7	66,9	67,4
Power supply							
Voltage/Phase/Frequency	V/ph/Hz	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE

Performances are referred to the following conditions:

(1) Air temperature 35°C

(2) Fluid: water - in/out temperature: 12/7°C

(3) Sound power level in accordance with ISO 3744.

(4) Sound pressure level at 10 mt from the unit in free field conditions in accordance with ISO 3744.

*SEPR values stated in the data sheet are referred to MEDIUM TEMPERATURE process chillers (leaving water down to -8°C) and are calculated in compliance with 2015/1095 European Regulations



The refrigerant data may change without notice. It is therefore necessary to refer always to the silver label placed on the unit.

3.4.1 RAS MC VS Kp

RAS MC VS Kp		521	591	721	871	1001	1402
Nominal cooling capacity	kW	54,2	61,0	74,8	92,9	107,1	155,5
Total input power	kW	16,4	19,2	23,3	29,2	34,1	47,5
Total nominal current	A	35,1	38,2	42,5	52,1	63,2	85,5
EER	-	3,30	3,19	3,21	3,18	3,15	3,27
SEPR*	-	4,17	4,12	4,24	4,17	4,14	4,15
Refrigerant circuits	n°	1	1	1	1	1	2
Compressors	n°	1	1	1	1	1	2
Refrigerant data R290							
Refrigerant charge	kg	4	4	8	8	8	15
Global warming potential (GWP)		3	3	3	3	3	3
Equivalent CO ₂ charge	t	12	12	24	24	24	45
Axial fans ⁽¹⁾							
Number	n°	2	2	2	2	2	4
Total air flow	m ³ /h	17760	17690	20020	40220	40070	80770
Total fan power input	kW	1,2	1,2	1,2	3,9	3,9	7,8
Total fan current	A	5,2	5,2	5,2	7,8	7,8	15,6
Evaporator ⁽²⁾							
Number	n°	1	1	1	1	1	1
Water flow	m ³ /h	9,3	10,5	12,9	16,0	18,4	26,7
Pressure drop	kPa	29	35	17	24	31	21
Water connections diameter		1"1/4 Gas M	1"1/4 Gas M	2" Vic	2" Vic	2" Vic	2"1/2 Vic
Weights							
Transport weight	kg	1094	1096	1206	1304	1310	2002
Operating weight	kg	1098	1100	1212	1310	1316	2016
Dimensions							
Length	mm	2590	2590	2590	2590	2590	4840
Depth	mm	1370	1370	1370	1370	1370	1370
Height	mm	2570	2570	2570	2570	2570	2570
Sound data							
Sound pressure level ⁽³⁾	dB(A)	86,3	88,1	88,1	92,2	92,2	92,6
Sound power level ⁽⁴⁾	dB(A)	54,3	56,1	56,1	60,2	60,2	60,4
Power supply							
Voltage/Phase/Frequency	V/ph/Hz	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE

Performances are referred to the following conditions:

(1) Air temperature 35°C

(2) Fluid: water - in/out temperature: 12/7°C

(3) Sound power level in accordance with ISO 3744.

(4) Sound pressure level at 10 mt from the unit in free field conditions in accordance with ISO 3744.

*SEPR values stated in the data sheet are referred to MEDIUM TEMPERATURE process chillers (leaving water down to -8°C) and are calculated in compliance with 2015/1095 European Regulations



The refrigerant data may change without notice. It is therefore necessary to refer always to the silver label placed on the unit.

RAS MC VS Kp		1702	2102	2402	2902	3402
Nominal cooling capacity	kW	182,8	215,7	252,1	289,7	352,9
Total input power	kW	56,4	68,2	77,0	96,5	114,1
Total nominal current	A	103,7	126,6	145,5	166,3	205,7
EER	-	3,24	3,16	3,28	3,00	3,09
SEPR*	-	4,14	4,12	4,26	4,13	4,24
Refrigerant circuits	n°	2	2	2	2	2
Compressors	n°	2	2	4	4	4
Refrigerant data R290						
Refrigerant charge	kg	15	17	17	16	21
Global warming potential (GWP)		3	3	3	3	3
Equivalent CO ₂ charge	t	45	51	51	48	63
Axial fans ⁽¹⁾						
Number	n°	4	4	4	4	6
Total air flow	m ³ /h	80470	80110	79850	79400	119920
Total fan power input	kW	7,8	7,8	7,8	7,8	11,6
Total fan current	A	15,6	15,6	15,6	15,6	23,4
Evaporator ⁽²⁾						
Number	n°	1	1	1	1	1
Water flow	m ³ /h	31,4	37,1	43,4	49,8	60,7
Pressure drop	kPa	28	26	33	26	36
Water connections diameter		2"1/2 Vic	3" Vic	3" Vic	3" Vic	3" Vic
Weights						
Transport weight	kg	2098	2156	2522	2598	3100
Operating weight	kg	2112	2178	2544	2630	3132
Dimensions						
Length	mm	4840	4840	4840	4840	4430
Depth	mm	1370	1370	1370	1370	2260
Height	mm	2570	2570	2570	2570	2480
Sound data						
Sound pressure level ⁽³⁾	dB(A)	95,7	95,7	96,0	96,0	99,2
Sound power level ⁽⁴⁾	dB(A)	63,4	63,4	63,7	63,7	66,9
Power supply						
Voltage/Phase/Frequency	V/ph/Hz	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE

Performances are referred to the following conditions:

(1) Air temperature 35°C

(2) Fluid: water - in/out temperature: 12/7°C

(3) Sound power level in accordance with ISO 3744.

(4) Sound pressure level at 10 mt from the unit in free field conditions in accordance with ISO 3744.

*SEPR values stated in the data sheet are referred to MEDIUM TEMPERATURE process chillers (leaving water down to -8°C) and are calculated in compliance with 2015/1095 European Regulations



The refrigerant data may change without notice. It is therefore necessary to refer always to the silver label placed on the unit.

3.4.1 RAS F Kp

RAS F Kp		521	591	721	871	1001	1402
Nominal cooling capacity	kW	50,9	60,1	73,8	89,1	103,8	146,6
Total input power	kW	18,2	20,2	23,9	30,8	35,3	47,5
Total nominal current	A	35,1	37,2	41,8	55,2	65,0	83,4
EER	-	2,80	2,98	3,08	2,89	2,94	3,08
SEPR*	-	5,32	5,33	5,34	5,49	5,47	5,41
Refrigerant circuits	n°	1	1	1	1	1	2
Compressors	n°	1	1	1	1	1	2
Refrigerant data R290							
Refrigerant charge	kg	4	6	7	7	11	13
Global warming potential (GWP)		3	3	3	3	3	3
Equivalent CO ₂ charge	t	12	18	21	21	33	39
Axial fans ⁽¹⁾							
Number	n°	1	1	1	2	2	2
Total air flow	m ³ /h	24120	22870	22910	46960	43780	45350
Total fan power input	kW	2,5	2,5	2,5	5,0	5,0	5,0
Total fan current	A	5,2	5,2	5,2	10,3	10,3	10,3
Evaporator ⁽²⁾							
Number	n°	1	1	1	1	1	1
Water flow	m ³ /h	9,7	11,4	14,0	16,9	19,7	27,8
Pressure drop	kPa	35	47	22	31	41	26
Water connections diameter		1/2" Gas	3/4" Gas	3/4" Gas	3/4" Gas	1"1/4 Gas	2x 3/4" Gas
Free cooling							
Free Cooling capacity	kW	31,5	32,8	26,3	63,6	66,2	52,1
Water flow	m ³ /h	9,7	11,4	14,0	16,9	19,7	27,8
Pressure drop	kPa	20	27	25	42	54	23
Weights							
Transport weight	kg	1066	1102	1131	1451	1517	1739
Operating weight	kg	1088	1124	1150	1492	1558	1776
Dimensions							
Length	mm	1730	1730	1730	2770	2770	2770
Depth	mm	1370	1370	1370	1370	1370	1370
Height	mm	2420	2420	2420	2420	2420	2420
Sound data							
Sound pressure level ⁽³⁾	dB(A)	88,9	90,1	91,8	94,5	94,5	94,7
Sound power level ⁽⁴⁾	dB(A)	57,0	58,2	60,0	62,5	62,5	62,7
Power supply							
Voltage/Phase/Frequency	V/ph/Hz	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE

Performances are referred to the following conditions:

(1) Air temperature 35°C

(2) Fluid: water - in/out temperature: 12/7°C

(3) Sound power level in accordance with ISO 3744.

(4) Sound pressure level at 10 mt from the unit in free field conditions in accordance with ISO 3744.

*SEPR values stated in the data sheet are referred to MEDIUM TEMPERATURE process chillers (leaving water down to -8°C) and are calculated in compliance with 2015/1095 European Regulations



The refrigerant data may change without notice. It is therefore necessary to refer always to the silver label placed on the unit.

RAS F Kp		1702	2102	2402	2902	3402
Nominal cooling capacity	kW	174,9	208,5	222,0	283,3	332,6
Total input power	kW	59,5	70,2	83,6	96,5	118,5
Total nominal current	A	105,7	127,1	153,5	168,6	206,5
EER	-	2,94	2,97	2,65	2,94	2,81
SEPR*	-	5,41	5,34	5,23	5,28	5,24
Refrigerant circuits	n°	2	2	2	2	2
Compressors	n°	2	2	4	4	4
Refrigerant data R290						
Refrigerant charge	kg	15	19	14	19	24
Global warming potential (GWP)		3	3	3	3	3
Equivalent CO ₂ charge	t	45	57	42	57	72
Axial fans ⁽¹⁾						
Number	n°	3	3	4	4	4
Total air flow	m ³ /h	67380	67670	100610	95900	89990
Total fan power input	kW	7,4	7,4	9,9	9,9	9,9
Total fan current	A	15,5	15,5	20,6	20,6	20,6
Evaporator ⁽²⁾						
Number	n°	1	1	1	1	1
Water flow	m ³ /h	33,2	39,5	42,1	53,7	63,1
Pressure drop	kPa	35	33	41	34	45
Water connections diameter		2x 3/4" Gas	2x 3/4" Gas	2x 1"1/4 Gas	2x 1"1/4 Gas	2x 1"1/4 Gas
Free cooling						
Free Cooling capacity	kW	103,2	82,6	103,1	112,4	119,2
Water flow	m ³ /h	33,2	39,5	42,1	53,7	63,1
Pressure drop	kPa	69	61	46	64	58
Weights						
Transport weight	kg	2180	2220	2703	2874	3100
Operating weight	kg	2246	2280	2794	2974	3178
Dimensions						
Length	mm	3810	3810	4850	4850	4850
Depth	mm	1370	1370	1370	1370	1370
Height	mm	2420	2420	2420	2420	2420
Sound data						
Sound pressure level ⁽³⁾	dB(A)	94,7	96,7	96,5	97,1	99,2
Sound power level ⁽⁴⁾	dB(A)	62,6	64,6	64,3	64,8	66,9
Power supply						
Voltage/Phase/Frequency	V/ph/Hz	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE

Performances are referred to the following conditions:

(1) Air temperature 35°C

(2) Fluid: water - in/out temperature: 12/7°C

(3) Sound power level in accordance with ISO 3744.

(4) Sound pressure level at 10 mt from the unit in free field conditions in accordance with ISO 3744.

*SEPR values stated in the data sheet are referred to MEDIUM TEMPERATURE process chillers (leaving water down to -8°C) and are calculated in compliance with 2015/1095 European Regulations



The refrigerant data may change without notice. It is therefore necessary to refer always to the silver label placed on the unit.

3.4.1 PAS Kp

GPS Kp / PAS Kp		451	521	651	731	881	1001	1201
Nominal cooling capacity	kW	36,6	44,9	53,9	61,0	76,4	90,9	104,3
Total input power	kW	12,5	14,4	16,4	19,1	24,0	29,3	35,4
Total nominal current	A	25,9	27,8	34,0	37,0	42,8	52,0	63,8
EER	-	2,94	3,12	3,28	3,19	3,18	3,10	2,94
Refrigerant circuits	n°	1	1	1	1	1	1	1
Compressors	n°	1	1	1	1	1	1	1
Refrigerant data R290								
Refrigerant charge	kg	5,5	6,5	9,5	9,5	10	13	13
Global warming potential (GWP)		3	3	3	3	3	3	3
Equivalent CO ₂ charge	t	16,5	19,5	28,5	28,5	30	39	39
Axial fans ⁽¹⁾								
Number	n°	1	1	2	2	2	2	2
Total air flow	m ³ /h	21620	20920	10460	10460	21560	20850	20850
Total fan power input	kW	1,9	1,9	3,8	3,8	3,8	3,8	3,8
Total fan current	A	3,9	3,9	7,8	7,8	7,8	7,8	7,8
Evaporator ⁽²⁾								
Number	n°	1	1	1	1	1	1	1
Water flow	m ³ /h	6,3	7,7	9,3	10,5	13,1	15,6	17,9
Pressure drop	kPa	35	47	28	35	17	23	29
Water connections diameter		1"1/4 Gas M	1"1/4 Gas M	1"1/4 Gas M	1"1/4 Gas M	2" Vic	2" Vic	2" Vic
Heat pump mode ⁽³⁾								
Nominal heating capacity	kW	43,0	50,7	61,1	69,4	84,8	103,3	119,5
Total input power	kW	13,1	15,0	16,6	19,1	24,0	29,3	34,4
Total nominal current	A	26,9	28,9	34,7	37,5	43,0	52,3	62,5
SCOP	-	3,28	3,38	3,69	3,63	3,54	3,53	3,48
COP	-	3,28	3,27	3,56	3,47	3,37	3,45	3,35
Weights								
Transport weight	kg	882	946	1258	1280	1350	1416	1466
Operating weight	kg	884	948	1262	1284	1356	1422	1472
Dimensions								
Length	mm	1620	1620	2660	2660	2660	2660	2660
Depth	mm	1370	1370	1370	1370	1370	1370	1370
Height	mm	2420	2420	2420	2420	2420	2420	2420
Sound data								
Sound pressure level ⁽⁴⁾	dB(A)	84,3	84,6	84,8	88,6	91,0	93,2	93,2
Sound power level ⁽⁵⁾	dB(A)	52,4	52,7	52,9	56,6	59,0	61,2	61,2
Power supply								
Voltage/Phase/Frequency	V/ph/Hz	400/3/50+N+PE 400/3/50+N+PE 400/3/50+N+PE 400/3/50+N+PE 400/3/50+N+PE 400/3/50+N+PE 400/3/50+N+PE						

Performances are referred to the following conditions:

(1) Air temperature 35°C

(2) Fluid: water - in/out temperature: 12/7°C

(3) Air temperature 7°C, RH 87%, water 40/45°C.

(4) Sound power level in accordance with ISO 3744.

(5) Sound pressure level at 10 mt from the unit in free field conditions in accordance with ISO 3744.



The refrigerant data may change without notice. It is therefore necessary to refer always to the silver label placed on the unit.

GPS Kp / PAS Kp		1502	1702	2102	2502	2902	3402
Nominal cooling capacity	kW	129,7	148,4	180,6	209,5	248,2	296,8
Total input power	kW	40,0	47,5	58,7	70,9	78,4	96,0
Total nominal current	A	74,8	83,6	104,0	128,2	145,5	169,8
EER	-	3,24	3,13	3,08	2,96	3,17	
Refrigerant circuits	n°	2	2	2	2	2	2
Compressors	n°	2	2	2	2	4	4
Refrigerant data R290							
Refrigerant charge	kg	14,5	19,5	37,5	38	45	57
Global warming potential (GWP)		3	3	3	3	3	3
Equivalent CO ₂ charge	t	43,5	58,5	112,5	114	135	171
Axial fans ⁽¹⁾							
Number	n°	3	3	4	4	5	5
Total air flow	m ³ /h	21570	20860	20850	20850	20850	25050
Total fan power input	kW	5,7	5,7	7,6	7,6	9,5	12,4
Total fan current	A	11,7	11,7	15,6	15,6	19,5	25,8
Evaporator ⁽²⁾							
Number	n°	1	1	1	1	1	1
Water flow	m ³ /h	22,3	25,5	31,1	36,0	42,7	51,1
Pressure drop	kPa	15	19	27	24	32	26
Water connections diameter		3" Vic	3" Vic	3" Vic	3" Vic	3" Vic	3" Vic
Heat pump mode ⁽³⁾							
Nominal heating capacity	kW	142,2	168,0	209,3	239,8	280,1	333,8
Total input power		38,7	46,2	58,8	68,0	76,7	94,2
Total nominal current		73,6	82,2	104,5	123,9	144,1	168,4
SCOP	m ³ /h	3,68	3,63	3,56	3,53	3,65	3,54
COP	kPa	3,30	3,25	3,29	3,29	3,38	3,27
Weights							
Transport weight	kg	1798	1876	2246	2366	2918	3106
Operating weight	kg	1812	1890	2260	2388	2940	3138
Dimensions							
Length	mm	3700	3700	4850	4850	5890	5890
Depth	mm	1370	1370	1370	1370	1370	1370
Height	mm	2420	2420	2420	2420	2420	2420
Sound data							
Sound pressure level ⁽⁴⁾	dB(A)	93,7	93,7	95,2	95,2	95,2	95,5
Sound power level ⁽⁵⁾	dB(A)	61,6	61,6	63,0	63,0	62,9	63,1
Power supply							
Voltage/Phase/Frequency	V/ph/Hz	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE	400/3/50+N+PE

Performances are referred to the following conditions:

(1) Air temperature 35°C

(2) Fluid: water - in/out temperature: 12/7°C

(3) Air temperature 7°C, RH 87%, water 40/45°C.



(4) Sound power level in accordance with ISO 3744.

(5) Sound pressure level at 10 mt from the unit in free field conditions in accordance with ISO 3744.



The refrigerant data may change without notice. It is therefore necessary to refer always to the silver label placed on the unit.

3.5 Operational limits

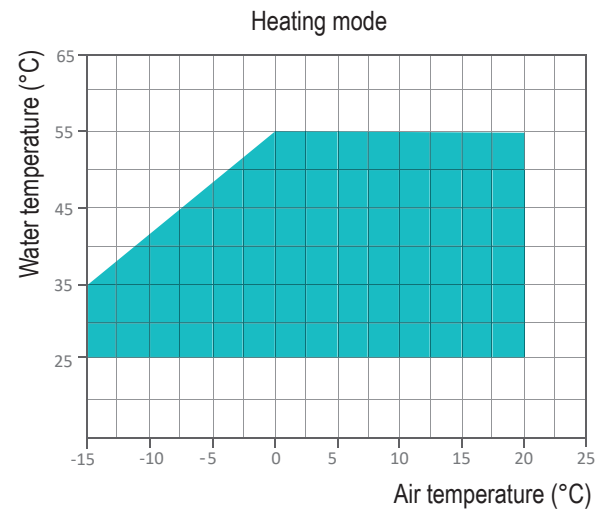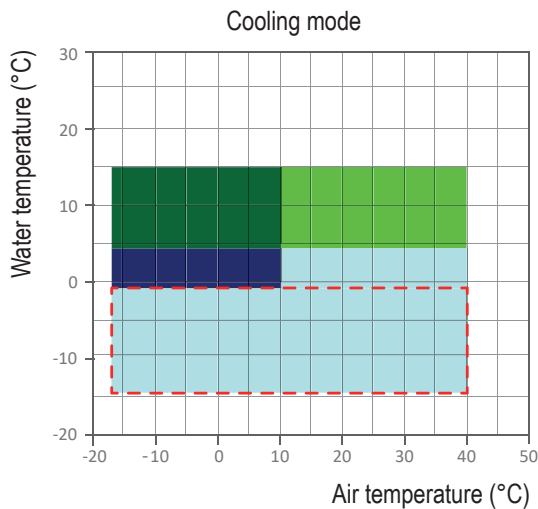

- Standard unit, cooling mode with fan speed control
- Standard unit, cooling mode
- Standard unit, cooling mode with glycol and fan speed control
- Standard unit, cooling mode with glycol
- VB version, cooling mode

3.5.1 User heat exchanger water flow rate

The nominal water flow rate provided, relates to a ΔT of 5,5°C. The maximum flow rate allowed is one that provides a ΔT of 3,5°C. Higher values may cause too high a pressure drop. The minimum water flow rate allowed is that which results in a ΔT of 8°C. Insufficient flow will result in evaporating temperatures that are too low leading to the operation of safety devices that will prevent unit operation.



Units are designed and manufactured to European safety and technical standards. The units have been designed exclusively for cooling and DHW production. The units must be used for this specific purpose only. The Company will not be liable for claims for damage caused to persons, animals or material goods or property caused by improper installation, adjustment and maintenance or improper use. Any use not specified in this manual is prohibited.



In case of operations outside of these values, please contact the company.



If the unit is installed in particularly windy areas, it will be necessary to provide some windbreaker barriers to avoid any malfunction. We suggest to install the barriers only if the wind exceeds 2,5m/s.



The units, in their standard configuration, are not suitable for installation in saline environments.



If it's required cooling operation at outdoor temperatures below 10°C, is required an evaporating/condensing pressure control (BT). The device monitors the evaporating/condensing pressure and maintains it at a constant level by modulating the airflow. It can also be used to reduce noise emission when ambient temperatures are lower (eg. at night).

3.8 Correction tables

3.8.1 Operation with glycol

Glycol percentage	Freezing point (°C)	CCF	IPCF	WFCF	PDCF
10	-3.2	0.985	1	1.02	1.08
20	-7.8	0.98	0.99	1.05	1.12
30	-14.1	0.97	0.98	1.09	1.22
40	-22.3	0.965	0.97	1.14	1.25
50	-33.8	0.955	0.965	1.2	1.33

CCF: Capacity correction factor

IPCF: Input power correction factor

WFCF: Water flow correction factor

PDCF: Pressure drops correction factor

The water flow rate and pressure drop correction factors are to be applied directly to the values given for operation without glycol. The water flow rate correction factor is calculated in order to maintain the same temperature difference as that which would be obtained without glycol. The pressure drop correction factor takes into account the different flow rate obtained from the application of the flow rate correction factor.

3.8.2 Correction tables different Δt

Water temperature diff.(°C)	3	5	8
CCCP	0.99	1	1.02
IPCF	0.99	1	1.01

CCCP = Cooling capacity correction factor

IPCF = Input power correction factor

3.8.3 Correction tables different Fouling factors

Fouling factor	0.00005	0.0001	0.0002
CCCP	1	0.98	0.94
IPCF	1	0.98	0.95

CCCP = Cooling capacity correction factor

IPCF = Input power correction factor

3.8 Sound data

3.7.1 RAS MC Kp / RAS MC VB Kp

RAS MC Kp / RAS MC VB Kp											
Mod.	Octave bands (Hz)								Lw	Lp1	Lp10
	63	125	250	500	1K	2K	4K	8K			
	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)
RAS 521 MC Kp	56,5	72,4	71,5	77,8	81,9	80,9	76,2	72,8	86,3	67,8	54,3
RAS 591 MC Kp	54,5	73,4	71,0	77,3	84,4	83,4	75,7	75,3	88,1	69,6	56,1
RAS 721 MC Kp	54,5	73,4	71,0	77,3	84,4	83,4	75,7	75,3	88,1	69,6	56,1
RAS 871 MC Kp	58,8	67,7	73,7	85,2	87,1	88,2	78,8	75,4	92,2	73,6	60,2
RAS 1001 MC Kp	58,8	67,7	73,7	85,2	87,1	88,2	78,8	75,4	92,2	73,6	60,2
RAS 1402 MC Kp	59,0	77,9	75,5	81,8	88,9	87,9	80,2	79,8	92,6	72,9	60,4
RAS 1702 MC Kp	62,3	71,2	77,2	88,7	90,6	91,7	82,3	78,9	95,7	75,9	63,4
RAS 2102 MC Kp	62,3	71,2	77,2	88,7	90,6	91,7	82,3	78,9	95,7	75,9	63,4
RAS 2402 MC Kp	63,8	75,1	81,5	87,8	91,9	90,9	83,2	82,9	96,0	76,2	63,7
RAS 2902 MC Kp	63,8	75,1	81,5	87,8	91,9	90,9	83,2	82,9	96,0	76,2	63,7
RAS 3402 MC Kp	64,6	74,8	80,7	92,2	94,1	95,3	85,8	82,4	99,2	79,1	66,9
RAS 3702 MC VB Kp (only VB version)	65,1	75,3	81,2	92,7	94,6	95,8	86,3	82,9	99,7	79,6	67,4

Lw: Sound power level according to ISO 3744.

Lp1: Sound pressure level measured at 1 mt from the unit in free field conditions direction factor Q=2 according to ISO 3744.

Lp10: Sound pressure level measured at 10 mt from the unit in free field conditions direction factor Q=2 according to ISO 3744.

3.7.2 RAS F Kp

RAS F Kp											
Mod.	Octave bands (Hz)								Lw	Lp1	Lp10
	63	125	250	500	1K	2K	4K	8K			
	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)
RAS 521 F Kp	61,4	67,2	72,2	80,9	85,8	83,0	74,9	71,3	88,9	71,0	57,0
RAS 591 F Kp	60,9	67,6	74,7	80,4	87,4	83,4	78,7	75,3	90,1	72,2	58,2
RAS 721 F Kp	63,9	70,6	74,7	83,4	88,3	86,4	80,4	75,3	91,8	73,9	60,0
RAS 871 F Kp	63,9	69,7	74,7	88,7	90,6	88,7	80,4	75,9	94,5	75,9	62,5
RAS 1001 F Kp	63,9	69,7	74,7	88,7	90,6	88,7	80,4	75,9	94,5	75,9	62,5
RAS 1402 F Kp	66,2	74,1	80,0	85,7	90,9	89,9	82,7	78,8	94,7	76,1	62,7
RAS 1702 F Kp	64,7	70,5	78,5	87,7	89,6	90,7	81,3	77,9	94,7	75,6	62,6
RAS 2102 F Kp	66,7	72,5	80,5	89,7	91,6	92,7	83,3	79,9	96,7	77,6	64,6
RAS 2402 F Kp	67,2	75,1	81,5	89,7	91,9	90,9	86,2	82,9	96,5	76,8	64,3
RAS 2902 F Kp	67,9	74,6	81,7	87,4	94,4	90,4	85,7	82,4	97,1	77,4	64,8
RAS 3402 F Kp	67,4	74,8	81,2	92,2	94,1	95,3	85,8	82,4	99,2	79,5	66,9

Lw: Sound power level according to ISO 3744.

Lp1: Sound pressure level measured at 1 mt from the unit in free field conditions direction factor Q=2 according to ISO 3744.

Lp10: Sound pressure level measured at 10 mt from the unit in free field conditions direction factor Q=2 according to ISO 3744.

3.7.3 PAS Kp

GPS Kp / PAS Kp											
Mod.	Octave bands (Hz)								Lw	Lp1	Lp10
	63	125	250	500	1K	2K	4K	8K			
	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)	dB(A)
PAS 451 Kp	56,6	63,5	68,0	75,1	81,5	77,9	71,9	69,8	84,3	66,5	52,4
PAS 521 Kp	56,6	63,5	68,0	75,1	81,5	78,9	71,9	70,8	84,6	66,8	52,7
PAS 651 Kp	55,1	71,3	70,0	76,3	80,4	79,4	74,7	71,3	84,8	66,3	52,9
PAS 731 Kp	55,1	71,3	71,5	77,8	84,9	83,9	76,2	75,8	88,6	70,1	56,6
PAS 881 Kp	61,6	71,1	76,0	83,1	87,9	83,9	79,9	75,8	91,0	72,5	59,0
PAS 1001 Kp	61,6	68,7	76,0	86,2	88,1	89,2	79,9	76,4	93,2	74,7	61,2
PAS 1201 Kp	61,6	68,7	76,0	86,2	88,1	89,2	79,9	76,4	93,2	74,7	61,2
PAS 1502 Kp	63,4	71,1	77,8	84,9	90,9	86,9	82,2	78,8	93,7	74,6	61,6
PAS 1702 Kp	63,4	71,1	77,8	84,9	90,9	86,9	82,2	78,8	93,7	74,6	61,6
PAS 2102 Kp	63,6	70,7	78,0	88,2	90,1	91,2	81,9	78,4	95,2	75,6	63,0
PAS 2502 Kp	63,6	70,7	78,0	88,2	90,1	91,2	81,9	78,4	95,2	75,6	63,0
PAS 2902 Kp	65,6	74,1	80,5	87,1	90,9	89,9	85,2	81,9	95,2	75,1	62,9
PAS 3402 Kp	67,7	74,1	80,5	88,5	90,9	89,9	85,2	81,9	95,5	75,4	63,1

Lw: Sound power level according to ISO 3744.

Lp1: Sound pressure level measured at 1 mt from the unit in free field conditions direction factor Q=2 according to ISO 3744.

Lp10: Sound pressure level measured at 10 mt from the unit in free field conditions direction factor Q=2 according to ISO 3744.

4. INSTALLATION

4.1 General safety guidelines and use of symbols



Before undertaking any task the operator must be fully trained in the operation of the machines to be used and their controls. They must also have read and be fully conversant with all operating instructions.



All maintenance must be performed by TRAINED personnel and be in accordance with all national and local regulations.



The installation and maintenance of the unit must comply with the local regulations in force at the time of the installation.



Avoid contact and do not insert any objects into moving parts.

4.2 Health and safety Considerations



The workplace must be kept clean, tidy and free from objects that may prevent free movement. Appropriate lighting of the work place shall be provided to allow the operator to perform the required operations safely. Poor or too strong lighting can cause risks.



Ensure that work places are always adequately ventilated and that respirators are working, in good condition and comply fully with the requirements of the current regulations.

4.3 Personal protective equipment



When operating and maintaining the unit, use the following personal protective equipment listed below as required by law.



Protective footwear.



Eye protection.



Protective gloves.



Respiratory protection.



Hearing protection.

4.4 Inspection

When installing or servicing the unit, it is necessary to strictly follow the rules reported on this manual, to conform to all the specifications of the labels on the unit, and to take any possible precautions of the case. Not observing the rules reported on this manual can create dangerous situations. After receiving the unit, immediately check its integrity. The unit left the factory in perfect conditions; any eventual damage must be questioned to the carrier and recorded on the Delivery Note before it is signed. The company must be informed, within 8 days, of the extent of the damage. The Customer should prepare a written statement of any severe damage.

Before accepting the unit check:

- The unit did not suffer any damage during transport;
- The delivered goods are conforming to what shown in the delivery note.

In Case of Damage

- List the damage on the delivery note
- Inform the Company of the extent of the damage within 8 days of receipt of the goods. After this time any claim will not be considered.
- A full written report is required for cases of severe damage.

4.5 Transport and handling

In compliance with the EN 378-1, the unit can be identified as an indirect closed system,

The refrigerant charge and type are indicated on the unit identification tag.

The unit positioning must be done considering the charge limits imposed by the EN 378-1, annex C and, in particular, by what stated in Table C1 for the refrigerant included in the group 3.

In this case, the unit has been designed to be installed outside and in adequate ventilated areas only.

Around the unit, in all its sides, leave at least 2 m of free spaces. For safety reasons, inside this area, no further devices, systems or ignition sources must be installed. Inside this area, the surfaces must not reach a temperature higher than 100 K from the auto-ignition temperature of the used refrigerant.

If the unit is installed in a zone with Class A (Generic) or Class B (with Supervision) presences, in compliance with the EN 378-1, par. 4.1, only the authorized person must be allowed near the unit, inside the spaces to be left free.

The unit must be positioned as much far as possible, and anyway at 3 m minimum, from drainage or electrical systems, in order to avoid the spread of potentially explosive atmospheres, in case of refrigerant leakages.

In any case, all the systems nearby the unit, must be filled with sand or equipped with siphon. The underground pipelines must be positioned at 0.80 m under the ground level at least.

The systems must be inspected every 6 months at least, in order to verify that the taken precaution to avoid the propagation of explosive atmospheres are efficient.

The group must be installed so that any possible refrigerant leakage cannot penetrate inside any building or closed ambient.

The unit handling must be done by skilled personnel only, with suitable equipment to the unit weight and dimensions. During the handling operations, keep the unit in vertical position (i.e. with the basement parallel to the ground)



The transport company is always responsible for any possible damage during the transport of the goods. Before installing the unit and preparing it for the commissioning, accurately sight inspect the unit to verify the packaging integrity or that the unit has no visible damage, and oil or refrigerant leakage. Also verify that the unit complies what required in phase of order.



Any possible damage or claim must be communicated to the Manufacturer or to the carrier by means of registered mail within 8 days from goods receipt.



If one or more components are damaged, do not start the unit, and immediately inform the manufacturer, in order to agree any intervention on the unit.



It is suggested to unpack the unit at effective unit installation place. The internal handling must be done with care, avoiding using the equipment components as holds. Avoid any damage during the unit handling.



The hydraulic circuit must be fully empty before anyhow move the unit.



The units lifting must be vertical, preferably done by means of a forklift. Use a distribution beam if straps or ropes are used for the harness, carefully checking that no pressure is done on the higher edges of the unit or of the packaging.

PAY ATTENTION:

The refrigerant contained in the unit is flammable.

The unit can be installed outside only, away from any kind of possible ignition source and from direct sunlight.

Max external air temperature: +40°C (in operation)



4.6 Storage

If it is necessary to store the unit, leave it packed in a closed place. If for any reason the machine has already been unpacked, follow these instructions to prevent damage, corrosion and/or deterioration:

- Make sure that all openings are properly closed or sealed;
- Never use steam or other cleaning agents to clean the unit that could damage it;
- Remove any keys needed to access the control panel and entrust them to the site manager.



The unit can be stored at temperatures between -10°C and 60°C. When not in use, in order to prevent corrosion, deposits or breakage due to the ice formation, it is essential that the heat exchangers, on the user side, are completely empty or completely filled with water properly glycol.

4.6 Unpacking



Packaging could be dangerous for the operators.

It is advisable to leave packaged units during handling and remove it before the installation.
The packaging must be removed carefully to prevent any possible damage to the machine.
The materials constituting the packaging may be different in nature (wood, cardboard, nylon, etc.).



The packaging materials should be separated and sent for disposal or possible recycling to specialist waste companies.


4.7 Lifting and handling

When unloading the unit, it is strongly recommended that sudden movements are avoided in order to protect the refrigerant circuit, copper tubes or any other unit component. Units can be lifted by using a forklift or, alternatively, using belts. Take care that the method of lifting does not damage the side panels or the cover. It is important to keep the unit horizontal at all time to avoid damage to the internal components.




The Source heat exchangers fins are sharp. Use protection gloves.


4.8.1 Unit with 2 fans

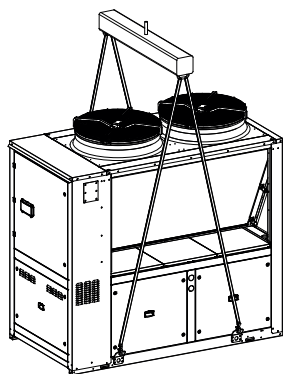

4.8.2 Unit with 4 fans

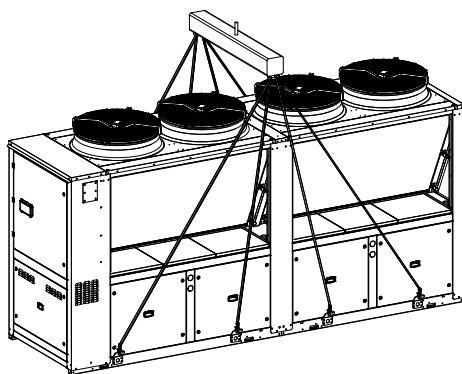

4.8.3 Unit with 6 fans

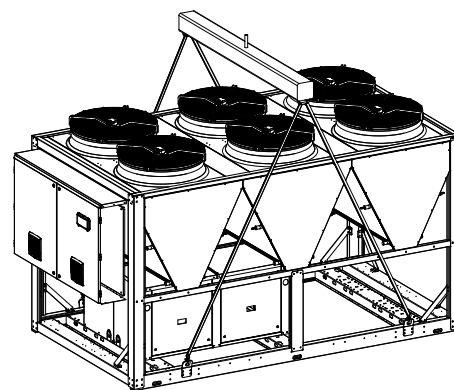

4.8 Location and minimum technical clearances


All units are designed for external installation : any overhang above the unit and location near trees, if they partially cover the unit, must be avoided in order to prevent air by-pass. It is advisable to create a proper mounting plinth, with a size similar to the unit foot-print. Unit vibration level is very low: it is advisable however, to install vibration dampers (spring or rubber) between the plinth and the unit base-frame to keep vibrations at a very low level. It is vital to ensure adequate air volume to the source fan. Re-circulation of discharge air must be avoided; failure to observe this point will result in poor performance or activation of safety controls. For these reasons it is necessary to observe the following clearances:




The unit has to be installed such that maintenance and repair is possible. The warranty does not cover costs for the provision of lifting apparatus, platforms or other lifting systems required to perform repairs during warranty period.



The installation site should be chosen in accordance with EN 378-1 and 378-3 standards. When choosing the installation site, all risks caused by accidental refrigerant leakage should be taken into consideration.

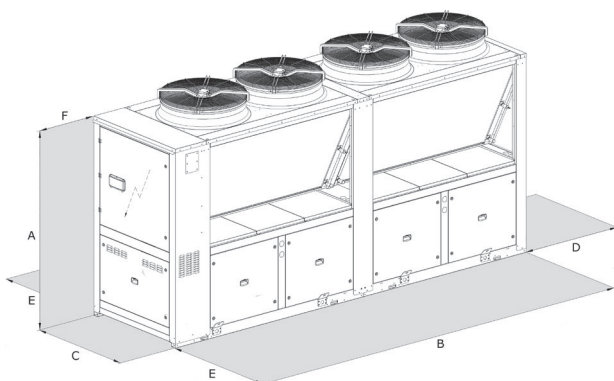

Img 1

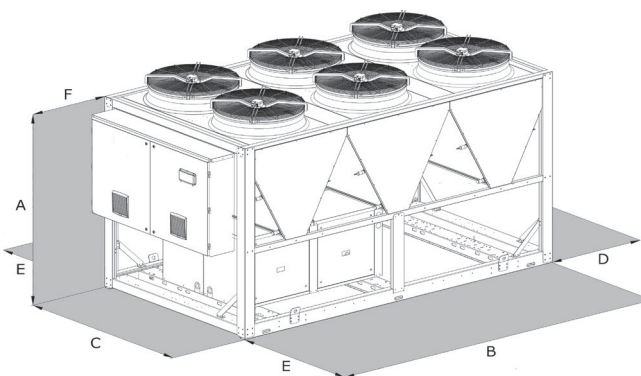

*img 2

RAS MC Kp RAS MC VB Kp	A	B	C	D	E	F
521	2570	2590	1370	2000	2000	2000
591	2570	2590	1370	2000	2000	2000
721	2570	2590	1370	2000	2000	2000
871	2570	2590	1370	2000	2000	2000
1001	2570	2590	1370	2000	2000	2000
1402	2570	4830	1370	2000	2000	2000
1702	2570	4830	1370	2000	2000	2000
2102	2570	4830	1370	2000	2000	2000
2402	2570	4830	1370	2000	2000	2000
2902	2570	4830	1370	2000	2000	2000
*3402	2480	4420	2260	2000	2000	2000
*3702 MC VB Kp	2480	4420	2260	2000	2000	2000

RAS F Kp	A	B	C	D	E	F
521	2420	1730	1370	2000	2000	2000
591	2420	1730	1370	2000	2000	2000
721	2420	1730	1370	2000	2000	2000
871	2420	2770	1370	2000	2000	2000
1001	2420	2770	1370	2000	2000	2000
1402	2420	2770	1370	2000	2000	2000
1702	2420	3810	1370	2000	2000	2000
2102	2420	3810	1370	2000	2000	2000
2402	2420	4850	1370	2000	2000	2000
2902	2420	4850	1370	2000	2000	2000
3402	2420	4850	1370	2000	2000	2000

GPS Kp PAS Kp	A	B	C	D	E	F
451	2420	1620	1370	2000	2000	2000
521	2420	1620	1370	2000	2000	2000
651	2420	2660	1370	2000	2000	2000
731	2420	2660	1370	2000	2000	2000
881	2420	2660	1370	2000	2000	2000
1001	2420	2660	1370	2000	2000	2000
1201	2420	2660	1370	2000	2000	2000
1502	2420	3700	1370	2000	2000	2000
1702	2420	3700	1370	2000	2000	2000
2102	2420	4850	1370	2000	2000	2000
2502	2420	4850	1370	2000	2000	2000
2902	2420	5890	1370	2000	2000	2000
3402	2420	5890	1370	2000	2000	2000

4.10 Serial interface card RS485 (IH) (Optional)


Supervision system interface (MODBUS RS485 available only)

This system allows you to remotely monitor all parameters of the unit and change their values.

It is necessary to respect the polarity of the wiring as shown in the diagram. Any reversal of polarity will result in the non-functioning unit.

The supervision connectivity cable must be telephone one type 2x0, 25 mm².

The unit is configured at the factory with serial address 1. In case of using the MODBUS system, you can request the list of variables by contacting the assistance.

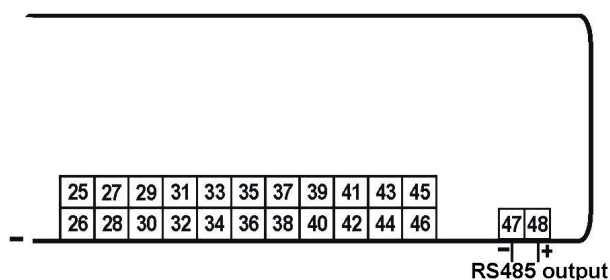

4.11 Hydraulic connections

The water pipe-work must be installed in accordance with national and local regulation and can be made from copper, steel, galvanized steel or PVC. The Pipework must be designed to cater for the nominal water flow and the hydraulic pressure drops of the system, a maximum pressure drop of 300 Pa/m run being typical. All pipes must be insulated with closed-cell material of adequate thickness. The hydraulic piping should includes:

- Pockets for temperature sensor to measure the temperature in the system.
- Flexible joints, to isolate the unit from the rest of the system.
- Temperature and pressure gauges for maintenance and servicing operations.
- Shut-off manual valves to isolate the unit from the hydraulic circuit.
- Metallic filters to be mounted on the inlet pipe with a mesh not larger than 1 mm (supplied as standard).
- Vent valves, expansion tank with water filling, discharge valve.



The hydraulic connection diameters are specified in the "Technical Data" table.



System return water must be fitted to the connection labelled: "USER WATER IN" as incorrect connection can damage the heat exchanger by freezing.



It is compulsory to install on the USER WATER IN connection, a water strainer with a mesh not larger than 1 mm. Fitting this filter is **COMPULSORY** and the warranty will be invalidated if it is removed. The filter must be kept clean and checked periodically.


The connection of the unit to the hydraulic circuit must be carried out by an experienced and qualified technician in accordance with the local regulations in force.



The connection of the unit to the system must be carried out in such a way that the fluid to be cooled circulates in the evaporator in the correct direction. To this purpose, the pipes must be connected in compliance with the instructions given in the connection on the unit.

To connect the pipes to the evaporator, take care of the following advises:

- Connect the pipes as shown in picture

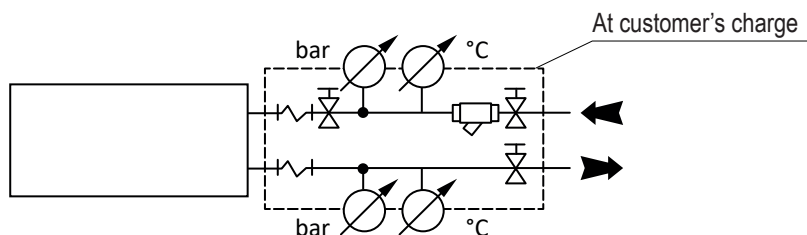

- To avoid any vibration transmission and permit the thermal expansions, anti-vibration fittings must be installed on the pipes. ;
- To avoid the inlet of foreign bodies and particles, you need to install, on unit inlet, a cleanable mechanic filter, with mesh dimension not larger than 2mm and with suitable nominal diameter, to reduce pressure drops;
- The installation of shut-off valve up and down stream of the filter is recommended, in order to make the cleaning operation simpler and quicker;
- The installation of thermometers and gauges near the inlet and outlet connection of the device, make the check of the unit operation easier;
- The chilled water system must be coated with close-cells anti-condensation material, with thermal insulation characteristics, vapor impermeability and with suitable thickness for the worst foreseeable conditions, in operation and stand-by mode;
- Use the pre-arranged connection shown in the attached dimensional drawing to connect the unit to the hydraulic system;
- Once the circuit is done and the unit installed, seal test of the whole system must be done, in order to find out any possible leakage and repair it, before the circuit filling and commissioning.



After the seal test, if the start-up of the system is planned after a long period of stop or if the ambient temperature can go down till values near to 0°C or lower, you need to drain the water from the circuit or enter a suitable percentage of glycol.



If the pump group for the fluid circulation inside the evaporator is not supplied with the unit, be sure that the compressors start only after that the pump group is on.



In case of breaking of the user side exchanger, the refrigerant can enter the water circuit. Position then the vent valves of the system in airy zone and far from manholes where the refrigerant could be concentrated, creating potentially explosive atmospheres. If not possible, the closed ambient where these vent valves are present, must be arranged with the precautions stated in the EN-378.



All units are factory supplied with a flow switch; the flow switch **MUST BE FITTED** in the pipework connection labelled "USER WATER OUT". If the flow switch is altered, removed, or the water filter omitted on the unit, the warranty will be invalidated.



The water flow through the heat exchangers of the unit should not be fall below Δt 8K measured at the following conditions:

Cooling mode: 35°C dry bulb ambient temperature, 7°C water outlet temperature.



When starting the unit for the first time, it is necessary to load it with clean water with chemical-physical characteristics such as to prevent corrosive phenomena or deposits of any kind. For this purpose, it is advisable to check annually the stability of the pH.

4.12 Chemical characteristics of the water

In the following table there are, just as an indication, the main values of chemical and physical properties of the water to be respected to avoid corrosion or any sediment. To this purpose it is advisable yearly check PH stability.

EXPLANATIONS:

- + Good resistance under normal conditions
- 0 Corrosion problems may occur especially when more factors are valued 0
- Use is not recommended

WATER CONTENT	CONCENTRATION (mg/l or ppm)	TIME LIMITS Analyze before	Plate Material			Brazing Material		
			AISI 304	AISI 316	254 SMO	COPPER	NICKEL	STAINLESS STEEL
Alkalinity (HCO_3^-)	< 70	Within 24 h	+	+	+	0	+	+
	70-300		+	+	+	+	+	+
	> 300		+	+	+	0/+	+	+
Sulphate ^[1] (SO_4^{2-})	< 70	No limit	+	+	+	+	+	+
	70-300		+	+	+	0/-	+	+
	> 300		+	+	+	-	+	+
$\text{HCO}_3^- / \text{SO}_4^{2-}$	> 1.0	No limit	+	+	+	+	+	+
	< 1.0		+	+	+	0/-	+	+
Electrical conductivity	< 10 $\mu\text{S/cm}$	No limit	+	+	+	0	+	+
	10-500 $\mu\text{S/cm}$		+	+	+	+	+	+
	> 500 $\mu\text{S/cm}$		+	+	+	0	+	+
pH ^[2]	< 6.0	Within 24 h	0	0	0	0	+	0
	6.0-7.5		+	+	+	0	+	+
	7.5-9.0		+	+	+	+	+	+
	> 9.0		+	+	+	0	+	+
Ammonium (NH_4^+)	< 2	Within 24 h	+	+	+	+	+	+
	2-20		+	+	+	0	+	+
	> 20		+	+	+	-	+	+
	> 20		+	+	+	-	+	+
Chlorides (Cl^-) <i>Please also see table below</i>	< 100	No limit	+	+	+	+	+	+
	100-200		0	+	+	+	+	+
	200-300		-	+	+	+	+	+
	> 300		-	-	+	0/+	+	-
Free chlorine (Cl_2)	< 1	Within 5 h	+	+	+	+	+	+
	1-5		-	-	0	0	+	-
	> 5		-	-	-	0/-	+	-
Hydrogen sulfide (H_2S)	< 0.05	No limit		+	+	+	+	+
	> 0.05			+	+	0/-	+	+
Free (aggressive) carbon dioxide (CO_2)	< 5	No limit	+	+	+	+	+	+
	5-20		+	+	+	0	+	+
	> 20		+	+	+	-	+	+
Total hardness ($^\circ\text{dH}$)	4.0-8.5	No limit	+	+	+	+	+	+
Nitrate ^[1] (NO_3^-)	< 100	No limit	+	+	+	+	+	+
	> 100		+	+	+	0	+	+
Iron ^[3] (Fe)	< 0.2	No limit	+	+	+	+	+	+
	> 0.2		+	+	+	0	+	+
Aluminium (Al)	< 0.2	No limit	+	+	+	+	+	+
	> 0.2		+	+	+	0	+	+
Manganese ^[3] (Mn)	< 0.1	No limit	+	+	+	+	+	+
	> 0.1		+	+	+	0	+	+


^[1] Sulfates and nitrates works as inhibitors for pitting corrosion caused by chlorides in pH neutral environments

^[2] In general low pH (below 6) increase corrosion risk and high pH (above 7.5) decrease the corrosion risk

^[3] Fe^{3+} and Mn^{4+} are strong oxidants and may increase the risk for localised corrosion on stainless steels

^[4] in combination with brazing material copper

SiO_2 above 150ppm increase the risk of scaling

CHLORIDE CONTENT	MAXIMUM TEMPERATURE				
	30°C	60°C	80°C	120°C	130°C
	SS 304	SS 304	SS 304	SS 304	SS 316
	SS 304	SS 304	SS 304	SS 316	SS 316 ^[4]
	SS 304	SS 304	SS 316	SS 316	Ti / 254 SMO
	SS 316	SS 316	SS 316	SS 316 ^[4]	Ti / 254 SMO
	SS 316	SS 316	SS 316 ^[4]	Ti / 254 SMO	Ti / 254 SMO
= 150 ppm	SS 316	SS 316	SS 316 ^[4]	Ti / 254 SMO	Ti / 254 SMO
= 300 ppm	SS 316	SS 316 ^[4]	Ti / 254 SMO	Ti / 254 SMO	Ti / 254 SMO
> 300 ppm	Ti / 254 SMO	Ti / 254 SMO	Ti / 254 SMO	Ti / 254 SMO	Ti / 254 SMO

pS logarithm of the suspended solids expressed in ppm and measured at water temperature in the falling point

pAlc logarithm of the alkalinity factor expressed in ppm CaCo₃

pCa logarithm of the limestone hardness expressed in ppm CaCo₃

In order to prevent corrosive phenomena or deposits of any nature it is recommended to:

- Empty the evaporator before any maintenance work is carried out;
- Do not clean the evaporator with unsuitable mechanical systems, such as drill bits or high-pressure jets;
- Do not clean with too aggressive cleaning agents. Before using a chemical detergent, check the compatibility with the construction materials of the exchanger.
- During winter stops, carefully empty the heat exchanger.



In case of long stops, leave the heat exchanger completely filled with adequate glycol water or completely empty.

4.13 User circuit minimum water content



Each chiller requires a minimum water content within the hydraulic circuit of the user, in order to ensure proper operation of the unit, preventing a large number of starts and stops of the compressors that could reduce the life cycle of the unit itself.

RAS MC KP /VB KP / F Kp	521	591	721	871	1001	1402	
Minimum (I)	900	900	900	1200	1200	1500	
RAS MC KP /VB KP / F Kp	1702	2102	2402	2902	3402	3702 VB Kp	
Minimum (I)	1500	1500	2800	2800	2800	2800	
GPS Kp / PAS Kp	451	521	651	731	881	1001	
Minimum (I)	900	900	900	900	900	1200	
GPS Kp / PAS Kp	1201	1502	1702	2102	2502	2702	3402
Minimum (I)	1200	1200	1500	1500	1500	2800	2800

4.14 Filling the hydraulic circuit

- Before filling, check that the installation drain valve is closed.
- Open all pipework, heat pump and terminal unit air vents.
- Open the shut off valves.
- Begin filling, slowly opening the water valve in the filling group outside the unit.
- When water begins to leak out of the terminal air vent valves, close them and continue filling until the pressure gauge indicates a pressure of 1.5 bars.

The installation should be filled to a pressure of between 1 and 2 bars. It is recommended that this operation be repeated after the unit has been operating for a number of hours (due to the presence of air bubbles in the system). The pressure of the installation should be checked regularly and if it drops below 1 bar, the water content should be topped-up. If frequent top-ups are required, check all connections for leaks.

4.15 Emptying the installation

- Before emptying, place the mains switch in the “Off” position.
- Make sure the filling group valve is closed.
- Open the drainage valve outside the unit and all the installation and terminal air vent valves.



If the fluid in the circuit contains anti-freeze, it MUST not be allowed to run away to drain. It must be collected for possible re-cycling or for correct disposal.

4.15 Microchannel condensing coil

The condensing coils are made up of a series of flat rectangular-shape tubes containing micro channels, to favourite heat exchange tubes are in contact through an aluminium sheet with a suitable window to favourite the thermal exchange with air. On each side of the coil there is a manifold receiving refrigerant in gaseous state from compressor discharge and in liquid state after condensation. All the components of the air/Freon heat exchanger are made up of aluminium alloy, the condensing coils are totally made up of aluminium alloy expressly developed to increase the resistance to corrosive agents and the thermal exchange with air. All the parts the exchanger is made up of, are connected by joints brazed in inert atmosphere, to grant the maximum chemical stability, so minimizing the galvanic effect.

Aluminium is considered an "active" metal because if in contact with oxygen, oxidizes in very short time, creating a very hard surface film, strong and able to be regenerated, which protect the material from deterioration. In normal conditions, so with an atmosphere with PH between 5 and 8 free from acidity and basicity peaks, if the oxide layer is not removed, aluminium is not damaged by corrosion phenomena. The microstructure used to build the exchanger, but especially the ambient conditions it works in, are consequently fundamental factors to grant exchanger corrosion resistance.

The coil is protected against corrosion thanks to the high quality of the aluminium alloy and to the special surface protection given by spray deposition of epossidic coating.

If the environment of the unit installation site is strongly aggressive, a special surface coating obtained by electrodeposition is also available as an option.

4.15.1 Corrosive environmental conditions

Areas that can prove the aluminium coils corrosion resistance include coastal areas, high populated urban areas and industrial sites; there also are some special applications which, even if not included in the a.m. areas, can also be dangerous, like ports and airports, high traffic zones, sewage plants, power plants, areas near to chemical industries, breweries, food processing or incineration plants. In these circumstances, the high presence of pollution agents in the air, favourites the formation of electrolytes, conductors of electricity if dissolved in water favouring in this way the activation of corrosive phenomena. In the a.m. circumstances, protect the aluminium exchangers surface with special treatments which increase their lifetime without compromising the heat exchange efficiency.

Near the coastal areas for example, the humidity in the air is rich of sodium chloride and sulphur, which in contact with metal can easily start corrosion phenomena. Moreover the saline atmosphere, which is itself high corrosive, acts as activator in presence of industrial emissions. This is the reason why the industrial/marine context is the worst situation in terms of corrosion.

Industrial areas, high populated urban ones and those near port and airports, are instead characterized from an high concentration in the air of Sulphur (SO₂ –SO₃) and Nitrogen (NO_x) derived from carbon and fossil hydrocarbons combustion. These airborne substances, fall down to the ground as acid rain and low PH dews. Besides near industrial areas, there are in the air also parcels of metal oxides, chlorides, sulphates, sulphuric acid, carbon and its compounds, parcels that in contact with oxygen, water or steam can be high corrosive, able so to corrode many materials, among which aluminium, iron, steel, brass, copper and nickel.

4.15.2 Microchannel aluminium condensing coils with AiAX Coating treatment (Optional ECP)

They are made up of aluminium alloy and assembled using brazed joints. Coils, after a washing and drying process, and after the application of a primer, are black spray painted. The water-based substance is composed of very high chemical resistance resins which grant flexibility to resist to thermal contractions/expansions and UV rays granting a mechanical resistance as well. The surface applied material thickness is about 25 µm and involves a heat transmission lost of about 2%.



The exchangers treated with surface protection paint, even if protected again corrosion, must anyway be periodically inspected (never more frequently than 6 months under non-aggressive operating conditions, 3 months otherwise) to check the real condition of the surface protection. If it has been scratched or totally or partially damaged, the uncovered area must be once more protected with a new protective treatment.



If the unit is installed in strongly windy areas, near coasts or deserts or in areas subjects to wind and/or sand storms, inspect the unit more frequently (every three months) to check the real condition of the surface protection.

4.20 Electric connections: preliminary safety information

The electric panel is located inside the unit at the top of the technical compartment where the various components of the refrigerant circuit are also to be found. To access the electrical board, remove the front panel of the unit:



Power connections must be made in accordance to the wiring diagram enclosed with the unit and in accordance to the norms in force.



Make sure the power supply upstream of the unit is (blocked with a switch). Check that the main switch handle is padlocked and it is applied on the handle a visible sign of warning not to operate.



It must be verified that electric supply is corresponding to the unit electric nominal data (tension, phases, frequency) reported on the label in the front panel of the unit.



Power cable and line protection must be sized according to the specification reported on the form of the wiring diagram enclosed with the unit.



The cable section must be commensurate with the calibration of the system-side protection and must take into account all the factors that may influence (temperature, type of insulation, length, etc.).



Power supply must respect the reported tolerances and limits: If those tolerances should not be respected, the warranty will be invalidated.



Flow switches must be connected following the indication reported in the wiring diagram. Never bridge flow switches connections in the terminal board. Guarantee will be invalidated if connections are altered or not properly made.



Make all connections to ground provided by law and legislation.



Before any service operation on the unit, be sure that the electric supply is disconnected.



The power line and the unit external safety devices must be sized in order to ensure the correct voltage at the maximum operating conditions of the unit reported in the wiring diagram of the unit.



FROST PROTECTION

If opened, the main switch cuts the power off to any electric heater and antifreeze device supplied with the unit, including the compressor crankcase heaters. The main switch should only be disconnected for cleaning, maintenance or unit repair.

The unit must be powered by a 4-wire cable (3 phases +GND), if the power supply is 400 V/3PH/50 Hz +GND. On demand, power supplies different from standard are available (check on the unit nameplate and wiring diagram).

Connect the phases to the input clamp of the main switch and the ground conductor to the dedicated clamp. Use a power supply cable with suitable section and as short as possible to avoid voltage drops.

Protect the power supply cable upstream the unit by means of an automatic switch with suitable size and features. The power supply cable section and the automatic switch size, can be found in the electrical components table attached, as well as the main switch size.

The cable entry is shown in the dimensional drawing of the unit attached to the Handbook. It must be suitably protected in compliance with the local regulations in force.

If the power supply cable entry is from the top, make a drop-break fold.



Before anyhow intervene on the unit, slightly verify that the electrical circuits of the device have not been damaged during the transport. Especially check that all the screws of the clamps are correctly tightened, and that the cable insulation is intact and in good conditions.

The conductors for the phases power supply cable, must be connected to the free clamps to the unit main switch entry; the ground conductor must be connected to the dedicated pre-arranged clamp (PE).

4.18 Electric data



The electrical data reported below refer to the standard unit without accessories.
In all other cases refer to the data reported in the attached electrical wiring diagrams.



The line voltage fluctuations can not be more than $\pm 10\%$ of the nominal value, while the voltage unbalance between one phase and another can not exceed 1%, according to EN60204. If those tolerances should not be respected, please contact our Company. **The use of the unit with a power supply with higher variations than those indicated will invalidate the warranty.**

RAS MC Kp / VB Kp		521	591	721	871	1001	1402
Power supply	V/~ / Hz	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND
Control board	V	24	24	24	24	24	24
Auxiliary circuit	V/~ - V	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24
Fans power supply	V/~	230/1	230/1	230/1	400/3	400/3	400/3
Line section	mm ²	16	16	16	25	35	35
PE section	mm ²	16	16	16	16	25	25

RAS MC Kp / VB Kp		1702	2102	2402	2902	3402	3702 RAS VB Kp
Power supply	V/~ / Hz	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND
Control board	V	24	24	24	24	24	24
Auxiliary circuit	V/~ - V	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24
Fans power supply	V/~	400/3	400/3	400/3	400/3	400/3	400/3
Line section	mm ²	70	95	120	120	150	2x185
PE section	mm ²	50	50	70	70	95	185

RAS F Kp		521	591	721	871	1001	1402
Power supply	V/~ / Hz	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND
Control board	V	24	24	24	24	24	24
Auxiliary circuit	V/~ - V	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24
Fans power supply	V/~	400/3	400/3	400/3	400/3	400/3	400/3
Line section	mm ²	16	16	16	25	35	35
PE section	mm ²	16	16	16	16	25	25

RAS F Kp		1702	2102	2402	2902	3402
Power supply	V/~ / Hz	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND
Control board	V	24	24	24	24	24
Auxiliary circuit	V/~ - V	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24
Fans power supply	V/~	400/3	400/3	400/3	400/3	400/3
Line section	mm ²	70	95	120	120	150
PE section	mm ²	50	50	70	70	95

GPS Kp / PAS Kp		451	521	651	731	881	1001	1201
Power supply	V/~ / Hz	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND
Control board	V	24	24	24	24	24	24	24 VAC
Auxiliary circuit	V/~ - V	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24
Fans power supply	V/~	400/3	400/3	230/1	230/1	230/1	400/3	400/3
Line section	mm ²	16	16	16	16	16	25	35
PE section	mm ²	16	16	16	16	16	16	25

GPS Kp / PAS Kp		1502	1702	2102	2502	2902	3402
Power supply	V/~ / Hz	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND	400/3/50+N+GND
Control board	V	24	24	24	24	24	24
Auxiliary circuit	V/~ - V	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24	230/1 - 24
Fans power supply	V/~	400/3	400/3	400/3	400/3	400/3	400/3
Line section	mm ²	35	35	70	95	120	150
PE section	mm ²	25	25	35	50	70	95



Electric data may change for updating without notice. It is therefore necessary to refer always to the wiring diagram present in the units.

5. UNIT START UP

5.1 Preliminary checks

Before starting the unit the checks detailed in this manual of the electric supply and connections, the hydraulic system and the refrigerant circuit, should be performed.



Start-up operations must be performed in accordance with the instructions detailed in the previous paragraphs.



If it is required to switch the unit on and off, never do this using the main isolator: this should only be used to disconnect the unit from the power supply when the unit is to be permanently off. Isolation will result in no supply for the crankcase heater and on start up the compressor could be seriously damaged.

5.1.1 Before start-up



Damage can occur during shipment or installation. It is recommended that a detailed check is made, before the installation of the unit, for possible refrigerant leakages caused by breakage of capillaries, pressure switch connections, tampering of the refrigerant pipework, vibration during transport or general abuse suffered by the unit.

- Verify that the unit is installed in a workmanlike manner and in accordance with the guidelines in this manual.
- Check that all power cables are properly connected and all terminals are correctly fixed.
- The operating voltage between phases R S T is the one shown on the unit labels.
- Check that the unit is connected to the system earth.
- Check that there is no refrigerant leakage.
- Check for oil stains, sign of a possible leak.
- Check that the refrigerant circuit shows the correct standing pressure on the pressure gauges (if present) otherwise use external ones.
- Check that the Schrader port caps are the correct type and are tightly closed.
- Check that crankcase heaters are powered correctly (if present).
- Check that all water connections are properly installed and all indications on unit labels are observed.
- The system must be flushed, filled and vented in order to eliminate any air.
- Check that the water temperatures are within the operation limits reported in the manual.
- Before start up check that all panels are replaced in the proper position and locked with fastening screws.
- Before start-up, check that all the water taps on the compressor outlets are open.



Do not modify internal wiring of the unit as this will immediately invalidate the warranty.



Crankcase heaters must be powered at least 12 hours before start up (pre-heating period) To do this, isolate the compressor(s), fans and pump(s) in the electrics box and then switch on the main isolator (heaters are automatically supplied when the main switch is closed). The crankcase heaters are working properly if, after several minutes, the compressor crankcase temperature is about 10÷15°C higher than ambient temperature.



During the 12 hours pre-heating period it is also important to check that the label OFF is shown on the display or that the unit is on stand-by mode. If there is an accidental start-up before the 12 hours pre-heating period has elapsed, the compressors could be seriously damaged and therefore the warranty will immediately terminate .

5.1.2 Commissioning

The unit commissioning must be carried-out by a skilled refrigeration technician authorized by the manufacturer.



Before switching the unit ON check that all the shut-off valves on compressors discharge side are open.



Before starting the unit for the first time or after a long period of stop, verify that the parameters set on the microprocessor are coherent with the required working conditions.

To switch the device ON, turn the main switch to ON, to power the unit. Then press the ON/OFF key on the microprocessor keyboard, positioning it on ON.

If the remote ON/OFF contact is closed, the circulation water pump, if present, will immediately start. After a delay time, settable by microprocessor, also the fans will start and then the different compressors in relation to the required cooling capacity to satisfy the present thermal load.

Once the unit has reached a stable operation regime, the technicians must verify the group working parameters and verify that:

- a) the safety high pressure switches are right installed and calibrated;
- b) on the external safety valves it is shown the calibration pressure and that the value is the one foreseen.
- c) No refrigerant leakage is present

The collected data must to be recorded on the commissioning report attached to this manual.



A copy of the commissioning report, duly filled, must be sent to the manufacturer, to make the warranty valid.



During the commissioning, the technician must check that the safety (high and low pressure switches, water differential pressure switch, anti-freeze thermostat etc.) and control devices (regulation thermostat, condensation pressure regulation device etc) properly work.

5.1.3 Device and security Set-point

Device		Set-point	Differential	Reset
Cooling mode	°C	23	2	----
DHW mode	°C	50 * **	2	----
Anti-freeze thermostat	°C	4,5	2	Manual
High-pressure safety valve	Bar	23	----	----
High pressure switch	Bar	22	----	Manual
Low pressure switch	Bar	2,3***	0,7	Automatic

* Default values. Different values can be set on request

** With RP accessory

*** Water outlet +7 °C



If the unit is required for heating/cooling only (without domestic hot water production) the internal parameter of the microprocessor FS1 has to be modified from 2 to 1 in order to avoid configuration alarms. Please contact the company for support.

5.1.4 Controls during unit operation

- Check the rotation of the compressors and fans. If the rotation is incorrect, disconnect the main switch and change over any two phases of the incoming main supply to reverse motor rotation (only for units with three-phase fan motors).
- After several hours of operation, check that the sight glass has a green colour core: if the core is yellow moisture is present in the circuit. In this event it is necessary for dehydration of the circuit to take place. This must be performed by qualified people only. Check that there are no continuous vapour bubbles present at the sight glass. This would indicate a shortage of refrigerant. A few vapour bubbles are acceptable.

5.1.5 Safety valves

The outlet connections of the safety valves installed on the unit are provided with a threaded connection, which must be connected to a safe area at a height of not less than 3 metres from the condenser or at a distance of at least 3 metres from the machine and any other sources of ignition. If provided, the valves must be individually directed in metal piping, to an area where the refrigerant spill cannot damage people or things.



The refrigerant spilled from safety valves is an high pressure, high temperature and high speed discharged gas. Its flow may damage things and people coming in direct contact with it.



The opening of safety valves comes with a noise whose intensity may damage hearing capabilities of surrounding people.

The piping diameter must be no smaller than the safety valves draining pipe ones; refrigerant leaks in the line must be as small as possible and in any case should not cause a reduction in the discharge rate of the valves.

The piping outlet connection must be done so to avoid that rain water, snow, ice, and dirt can accumulate and obstruct the pipeline.


The valve discharge must be at a suitable distance from other equipments, systems or ignition sources; the discharged refrigerant must not accidentally enter buildings.

In any case, any pipes on the safety valves discharge must be made in compliance with current laws and regulation.

5.2 Position of the control panel



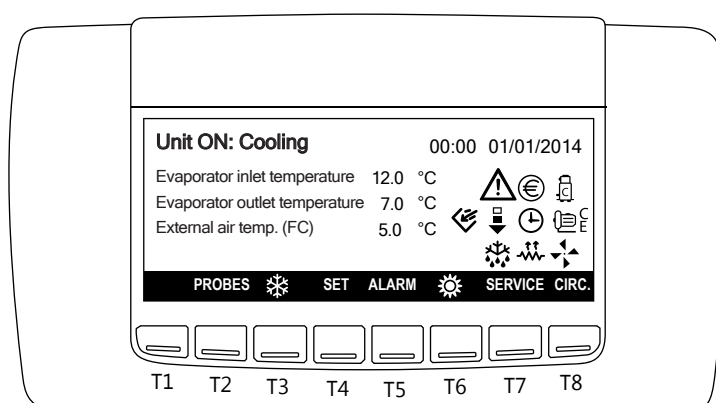

5.3 Description of the control panel




5.3.1 Display icons

Icon	Meaning	Icon	Meaning
	Number of compressors in operation.		Indicates that the electric heaters are active.
	Water pump		Economy or ON/OFF by timetable.
	Indicates that the fans are working.		Free cooling is active (not available).
	Indicates that an alarm is active.		Domestic hot water (not available).
	Economy function		Indicates that the defrost is active.
	Unloading function (not available).		

5.3.2 Key function


T2:	PROBES	Allows to read the value of the probes configured
T3:		Allows to switch on the unit in cooling mode
T4:	SET	Allows to read and modify the set point
T5:	ALARM	Allows to read and reset the alarms
T6:		Allows to switch on the unit in heating mode (not available).
T7:	SERVICE	Allows to enter the SERVICE menu
T8:	CIRC	Allows to read the main information of the circuits (compressor status, water pump status, pressure probe value,...)

When the unit is turned on, the display will be as follows:

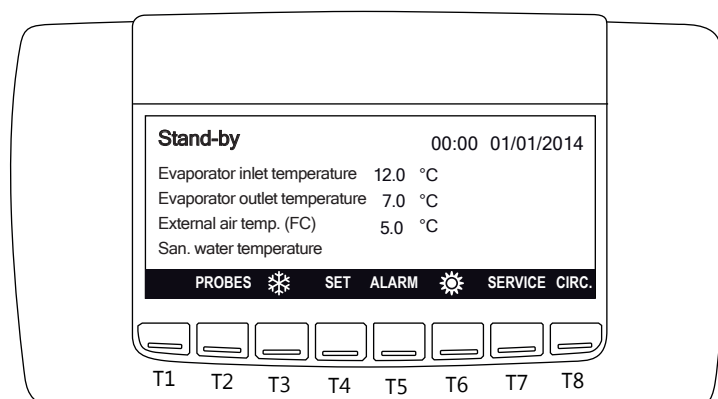

5.4 To remote the control


5.4.1 Remote keyboard connection (VGI890)

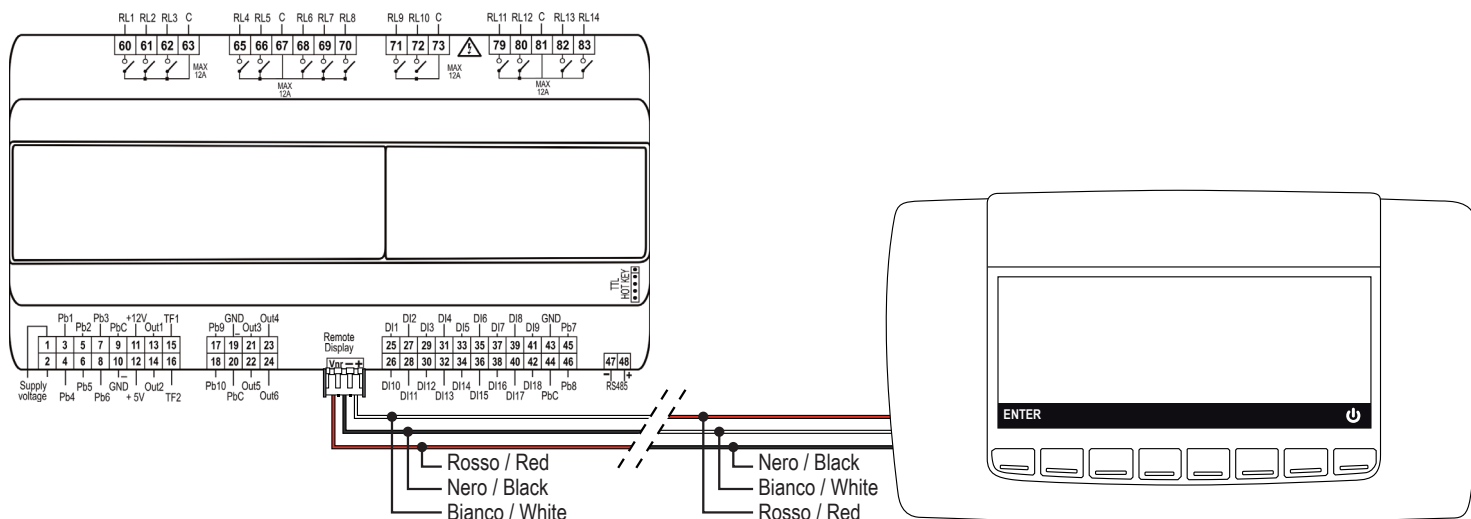


Special care must be taken when connecting the keyboard to the I chill200D, to avoid irreparable damage to the controller or/and keyboard

- In case of power supply failure (wire black or red), the keyboard doesn't work.
- In case of communication problems, the display shows "noL" message.

5.4.2 Panel mounting connection diagram

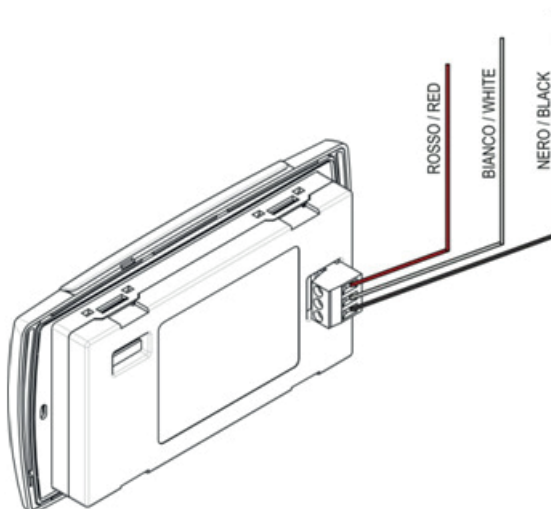

5.4.3 Wall mounting connection diagram

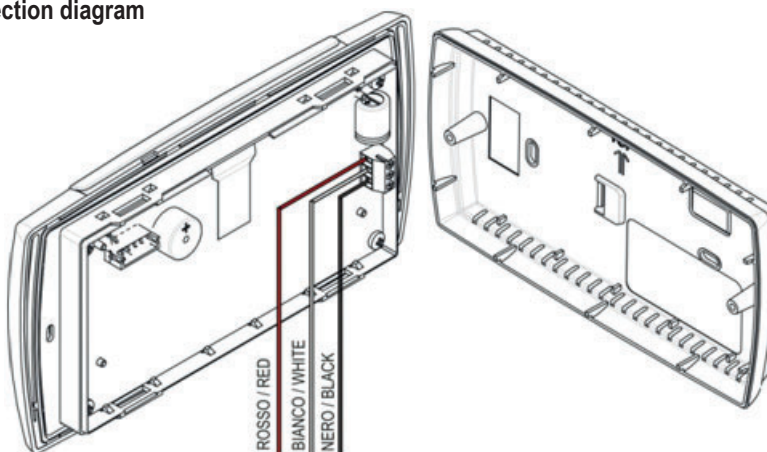

6. USE

6.1 Switch the unit on

Unit switch-on and switch-off can take place:

- From the keyboard
- From digital input configured as remote ON/OFF

6.1.1 Switch the unit on from the keyboard

6.1.2 Cooling mode

To start the unit in the cooling mode, press the  key. The icon  appears on the display.

If requested, the compressor safety delay countdown starts and the compressor icon flashes. The water pump will be activated after few seconds, and then, once the compressor countdown has finished, the compressor starts and the icon remains on. The display shows the user water inlet temperature and Domestic hot water inlet temperature.


In stand-by mode, the controller gives the possibility to:

- display the set values
- manage alarms, they display and reports.



If it is required to switch the unit on and off, never do this using the main isolator: this should only be used to disconnect the unit from the power supply when the unit is to be permanently off. Isolation will result in no supply for the crankcase heater and on start up the compressor could be seriously damaged.

The display shows the typical visualization during the unit working:

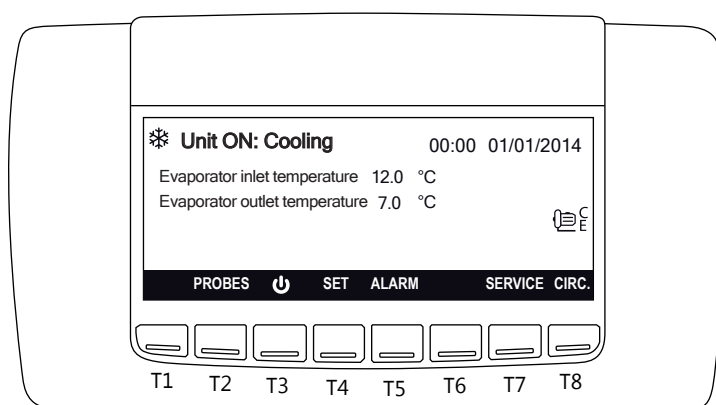


6.1.3 Heating mode

To switch the unit on in heating mode, press the  key. The icon  appears on the display.

If required, the compressor start delay timer count starts and the compressor icon flashes. The water pump will be activated after a few seconds and then, once the compressor count is finished, the compressor will start and the icon will remain on. The display shows the user water inlet temperature and the domestic hot water inlet temperature.

6.1.4 Switch the unit on from from digital input

If the unit is switch off by remote digital input, the display shows:

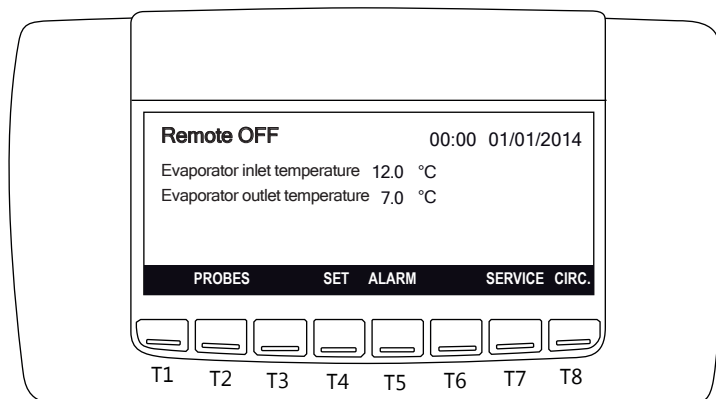


When the digital input is not active, the unit is in OFF mode

- The remote input has the priority with respect to the keyboard
- The unit can only be switched-on and off if the remote input is activated


6.2 Stop

To switch the unit off press the key T3 .

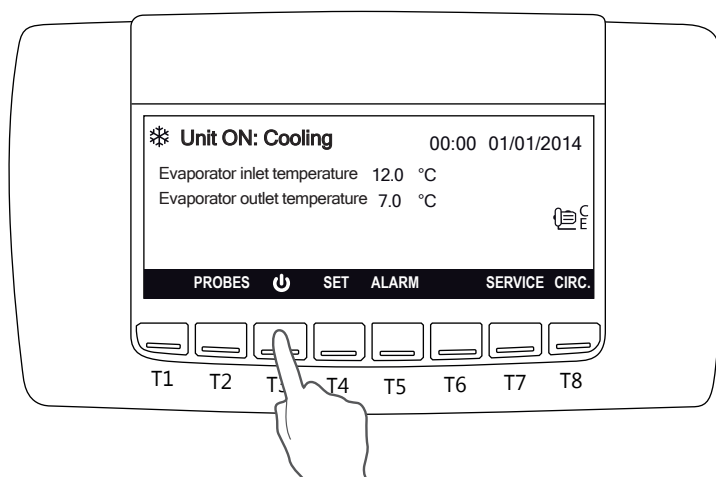

6.3 Set point

To change the set-point from the main screen, press **SET**.

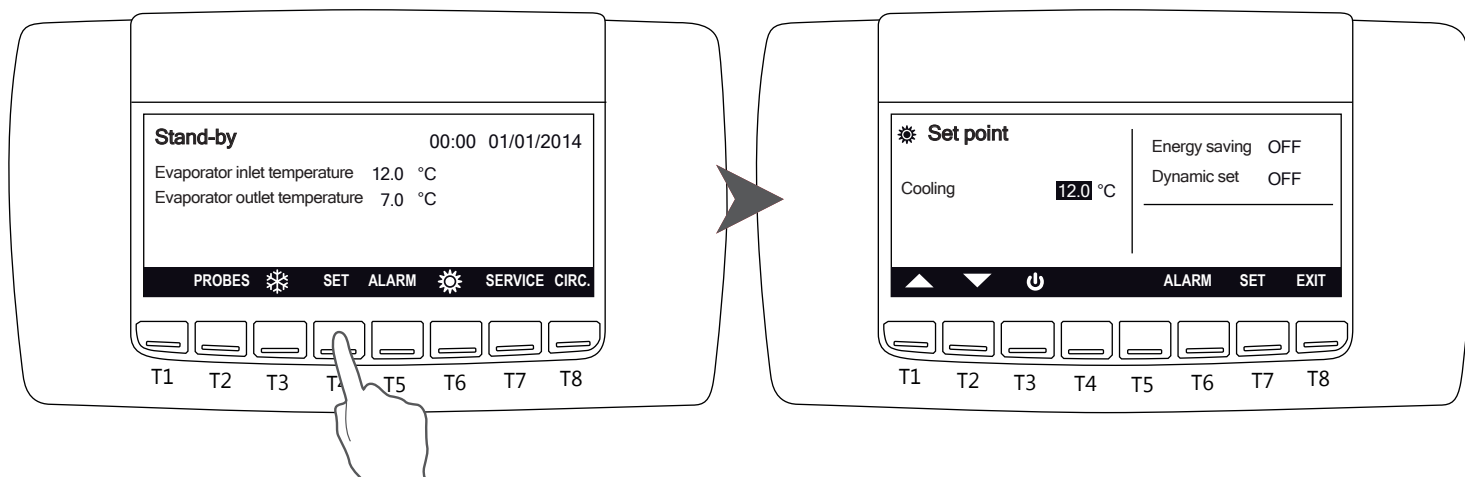

To modify the values, move the cursor with T1; press **SET** to select, the value starts blinking, change the data pressing T1 and T2. Once the required value is reached, press again **SET** to confirm.

The cursor will automatically position itself on the next value, to modify it, repeat the operation just described.

In this screen it is also possible to verify (but not modify) whether the energy saving mode and dynamic set are active.

Press **EXIT** to go back to the main menu.



All set points refer to the return temperature from the plant. In case hot water at 45°C is requested and the Δt is 5°C, then the set point must be set at 40°C. In case the Δt is 8°C, then the set point must be set at 37°C. In case cold water is requested, for example at 15°C and the Δt is 5°C, then the set point must be set at 20°C. If the Δt is 8°C, then the set point must be set at 23°C.

6.3.1 Adjustable parameters

The adjustable set point that can be modified by the end user are:


Function	Adjustment limit	Default value
Cooling set-point	10÷25°C	23°C
Password	(Contact the company)	




The units are supplied with a very sophisticated control system with many other parameters that are not adjustable by the end user; these parameters are protected by a manufacturer password.

6.4 PROBES key

To view all the parameters measured by the sensors of the unit press **PROBES**;

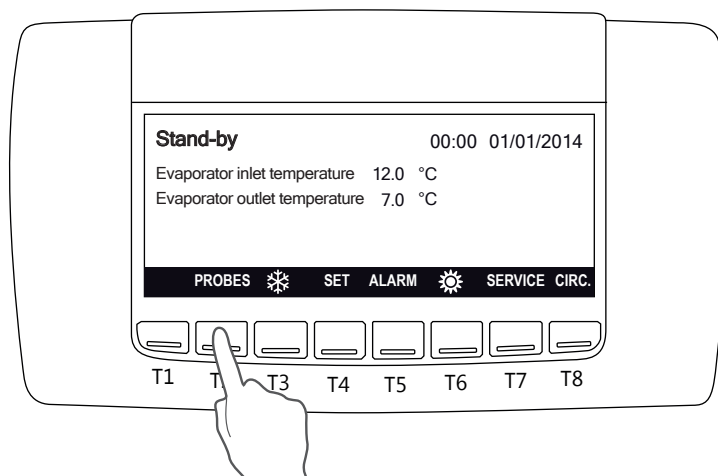

By pressing the T5 key, all relevant values of the circuit will be displayed

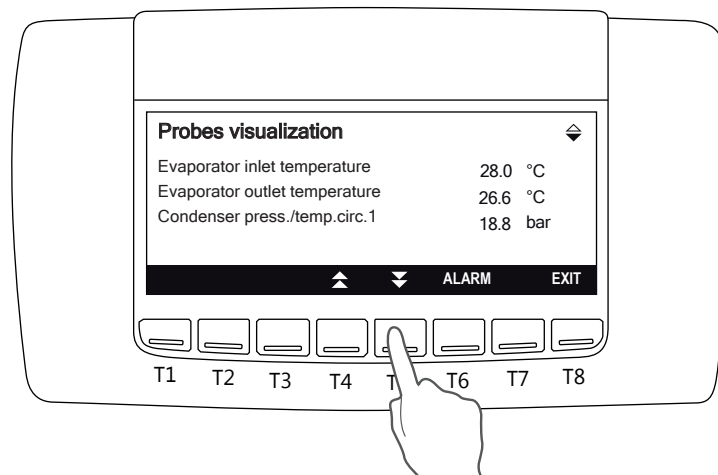


Press **EXIT** to go back to the main menu.

6.5 ALARM key

When the alarm occurs, the display shows the icon  blinking.

Press **ALARM** key to read the alarm status:

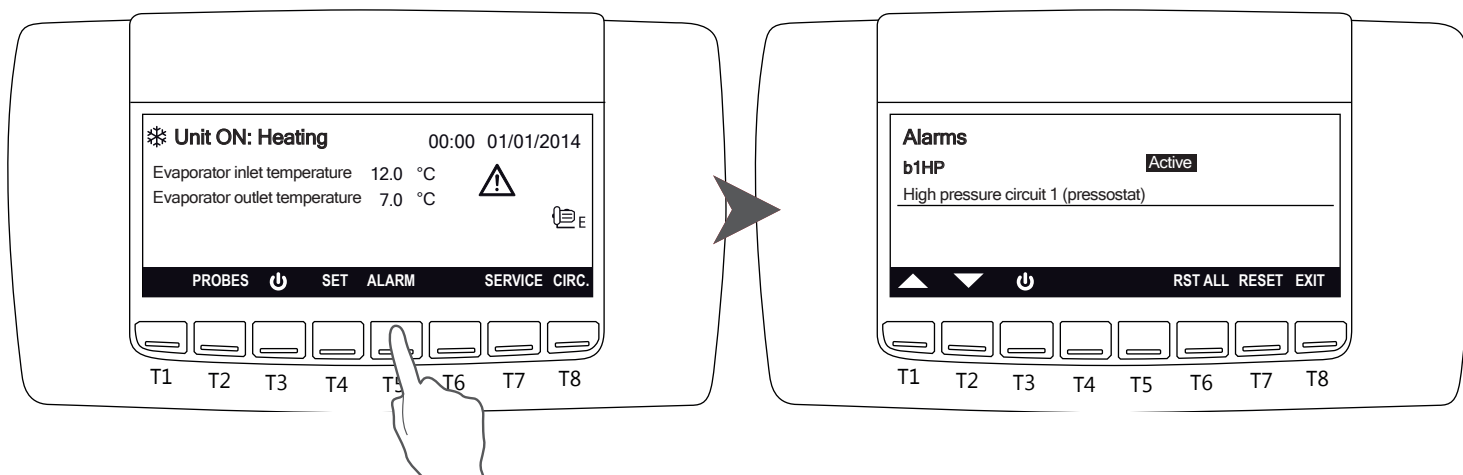

The alarm status can be:

- **Reset:** the alarm is not active and it is possible to reset it. Press T1 and T2 keys to select the alarm to select it and press **RESET** key to reset the alarm.
- **Password:** in this case the alarm is no longer active, but you need a password to reset it (please contact the Company).
- **Active:** the alarm is still active and it is not possible to reset it.

In case more resettable alarms are present, it's possible to reset all of them at once pressing **RST ALL** key.

In any case, even if all the alarms are reset, they remain present in the alarm history.

6.6 CIRC key

Pressing **CIRC** can view the different parameters of the unit:

Pressing T4 and T5 you move from one screen to another while with T1 and T2 you scroll through the menu items. Press **ENTER** key to view the values.


State of the compressors; the display shows compressors present in each circuit and the activation status of each one.

Color black: compressor running


Color white: compressor on standby

In case of use of compressors in part-loading (typically screw compressors) an icon appears to the right of the compressor showing the level of step control.


In case of use of On/Off compressors (Scroll) no icon appear to the right of the compressor.

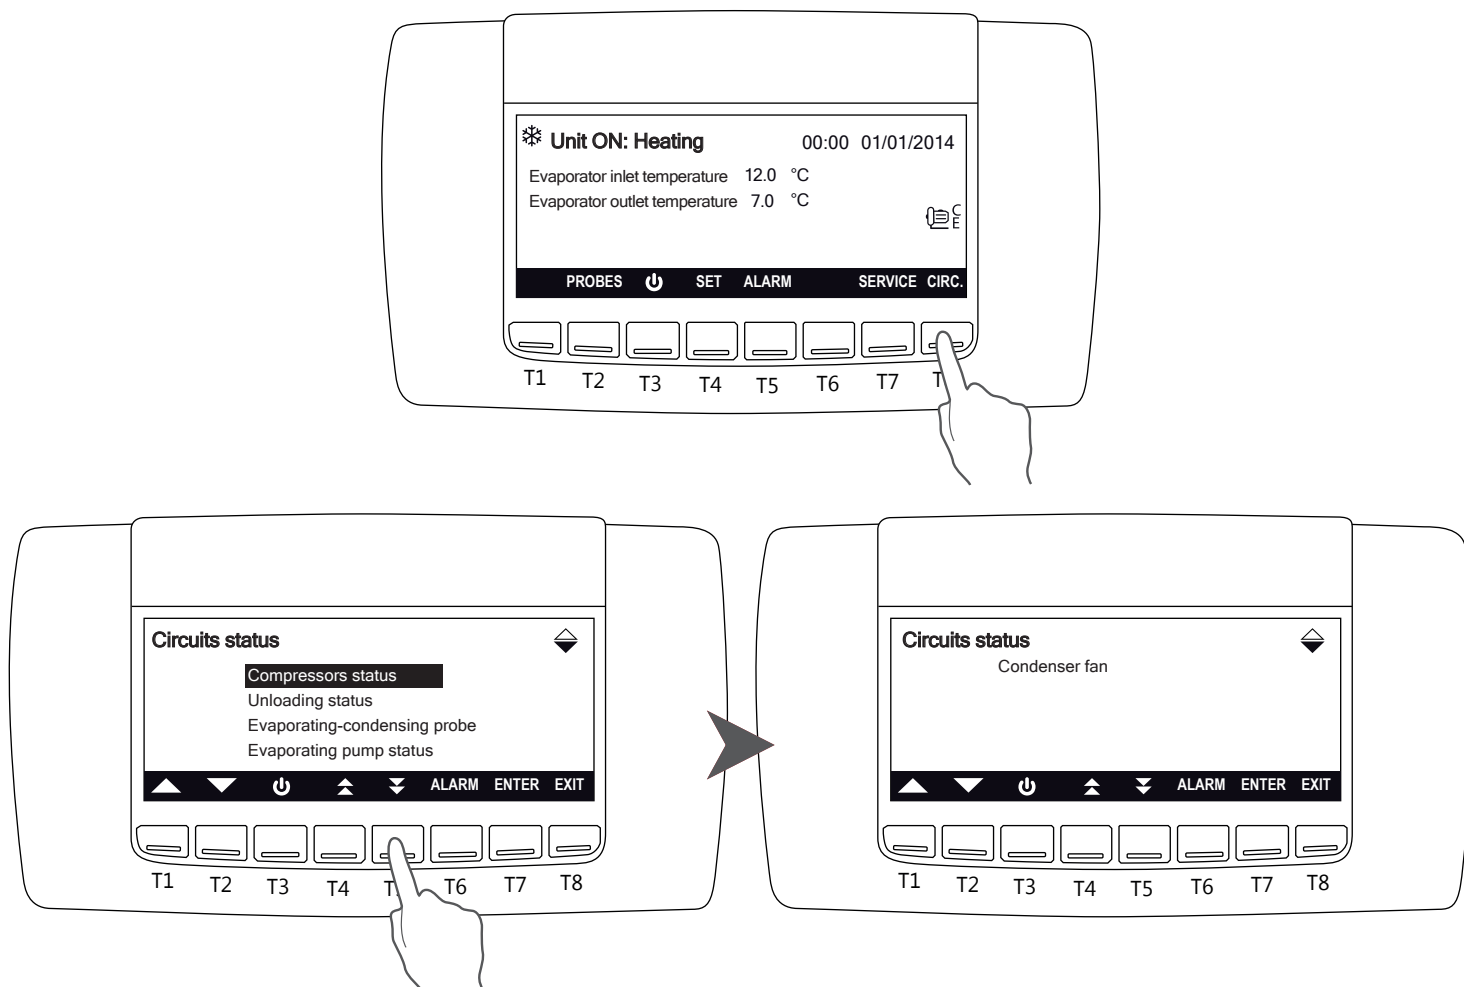


Compressor status

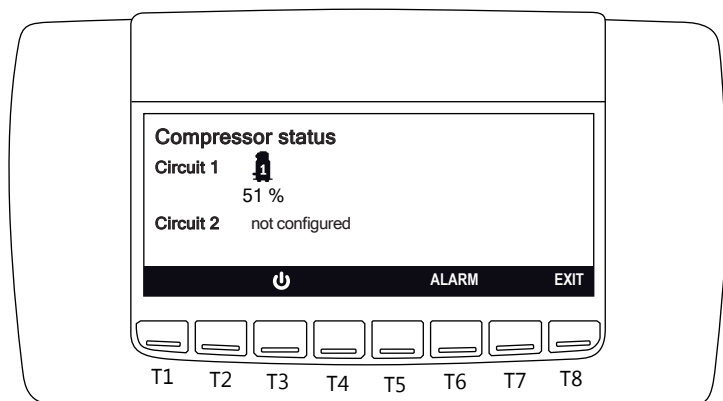


Unloading status

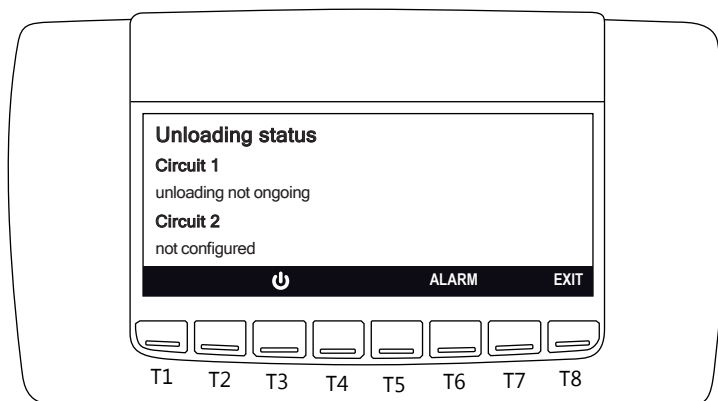


Evaporating-condensing probe

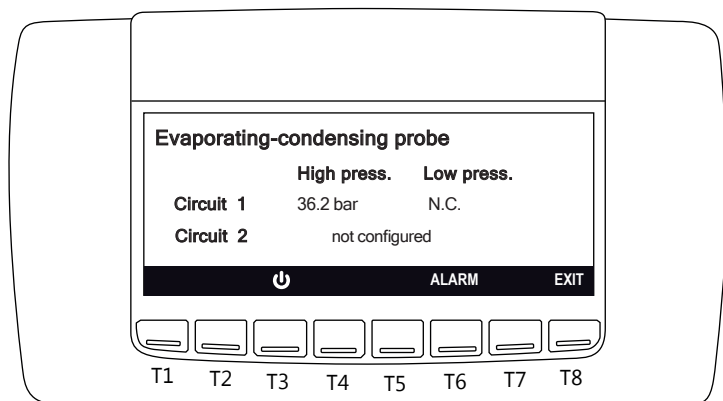


Evaporator pump status

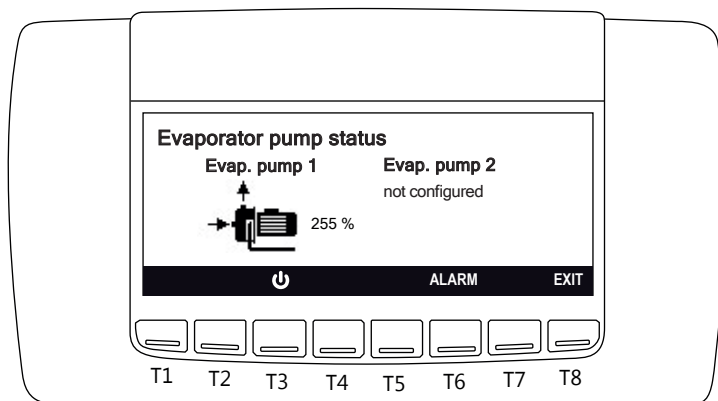

Condenser fan

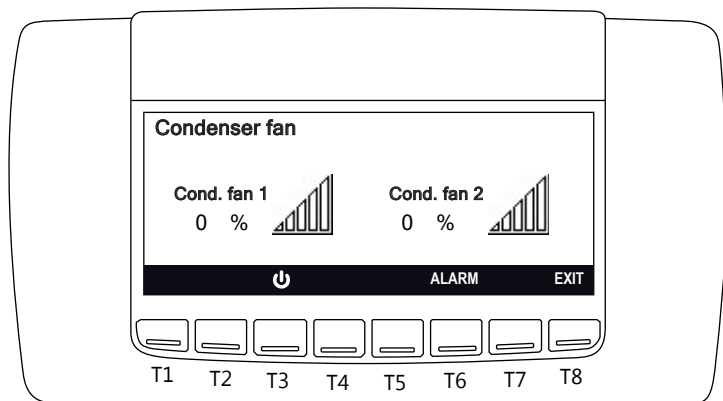

6.7 SERVICE key

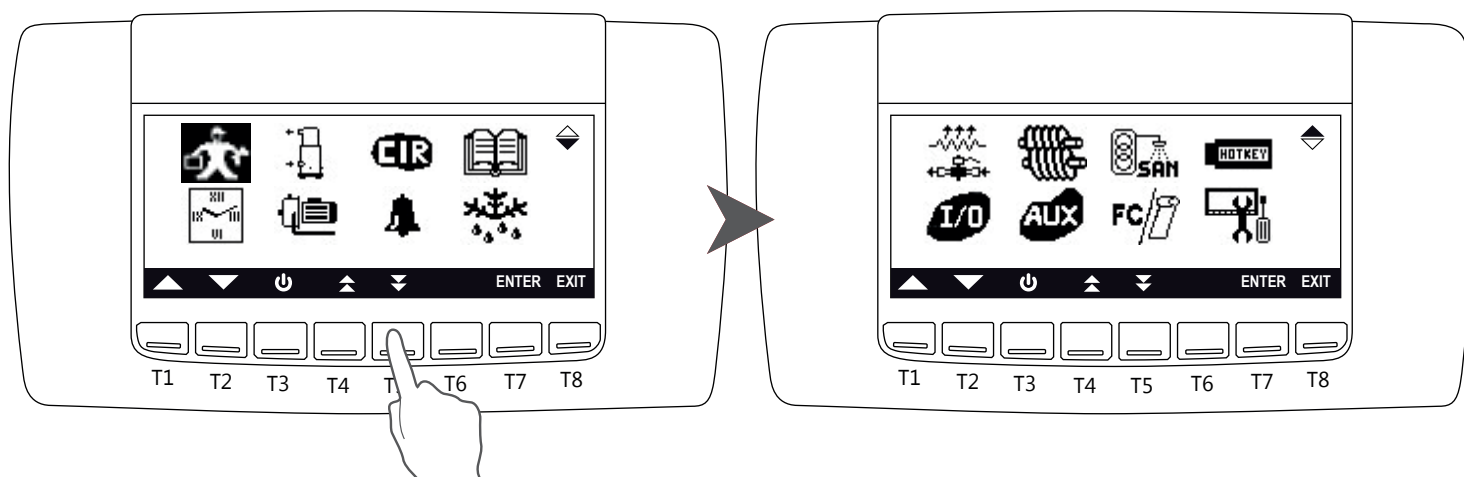

Press the **SERVICE** key to access the following menus:

	Setting parameters (for service only)		Electrical heater and pump down valve status
	Time and date setting		I/O status (Inputs and Outputs)
	Compressors status		Screw compressor information (Not configured)
	Pumps		Auxiliary outputs
	Circuit maintenance		Domestic hot water (if available)
	Display of alarms		Free cooling and Solar panel visualization (if available)
	Alarm history		Upload and download parameter map with Hot Key
	Defrost (if available)		Control panel

Press T4 key to display all the menu available.

To modify and set the parameters move the cursor using the T1 and T2, press **ENTER**, to select the required menu, and then **SET** to select the desired value.


Change the parameters by pressing the T1 and T2, and then press **SET** again to confirm.

Press the **EXIT** key to return to the main menu.

6.7.1 Service parameters setting


To enter service menu select  moving between the icons with T1 and T2 keys and press **ENTER**.

The system prompts you to enter the password to access to different levels of security.

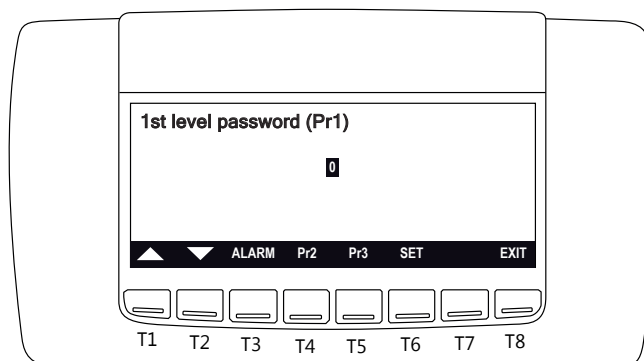

The first level allow to modify some parameters as for example heating and cooling set points and dynamic set points. Press **SET** key, with T1 modify the password to 1 then press **SET** again to confirm.

The display show:

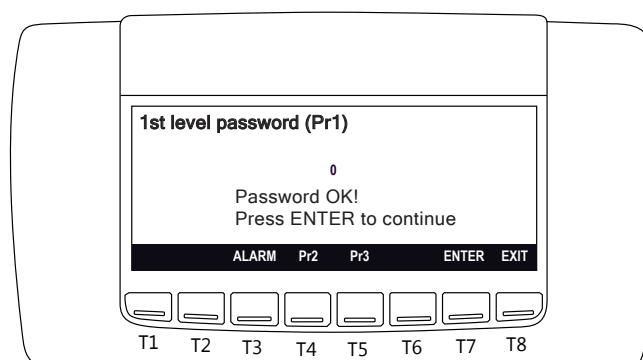


Press T1 and T2 to scroll through different groups of parameters. With password level 1 you could only change the Set Point (**St**), dynamic Set point (**Sd**), and parameters of sanitary circuit (**FS**); the unit must be switched on. Press **ENTER** to enter in the group of parameters. Other parameters can only be modified by service with a dedicated password. Other parameters could be modified by service people only with a dedicated password.

Parameters list:

Code	Meaning	Code	Meaning
St	Set point	US	Auxiliary output
dP	Main visualization	FA	Fan
CF	Configuration	Ar	Antifreeze
Sd	Dynamic set	dF	Defrost
ES	Energy saving	FS	Sanitary water
Cr	Compressor racks	AL	Alarms
CO	Compressor		


To modify the value of the parameter: press T1 or T2 to select the parameter to modify then press **SET** the value start to blinking, press T1 and T2 to modify, than press **SET** again to confirm.

The values available in the group of parameters "Set point" (**St**) are: summer set point (St01), winter set point (St04), summer regulation band (St07) and winter regulation band (St08).

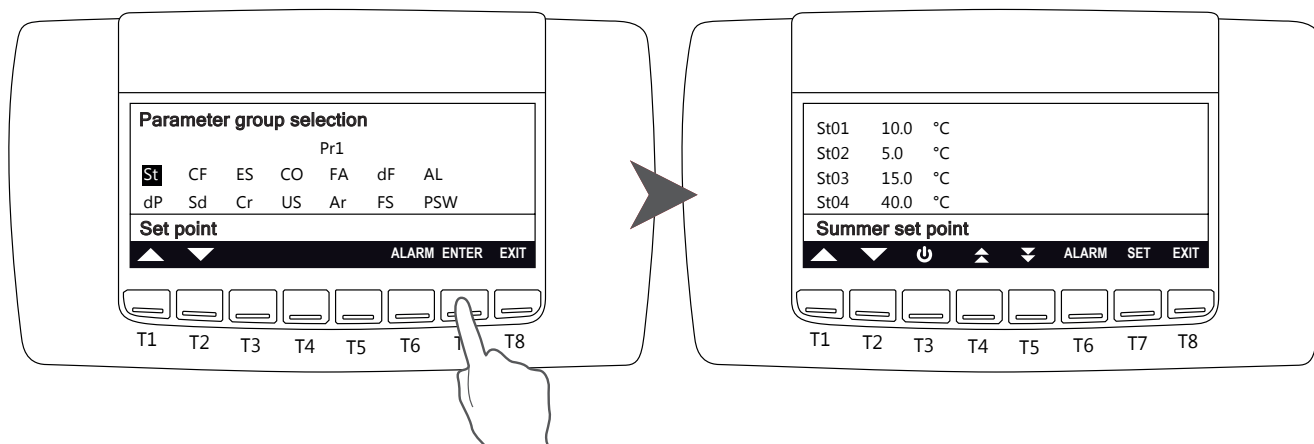


The values available in the group of parameters "Dynamic set point" (**Sd**) are: dynamic set point: summer offset (Sd01), dynamic set point: winter offset (Sd02), dynamic set point: summer outside temp. (Sd03), dynamic set point: winter outside temp. (Sd04), dynamic set point: summer differential temp. (Sd05) and dynamic set point: winter differential temp. (Sd06).

For more informations about the parameters see par. 6.3.1 and 6.3.2.

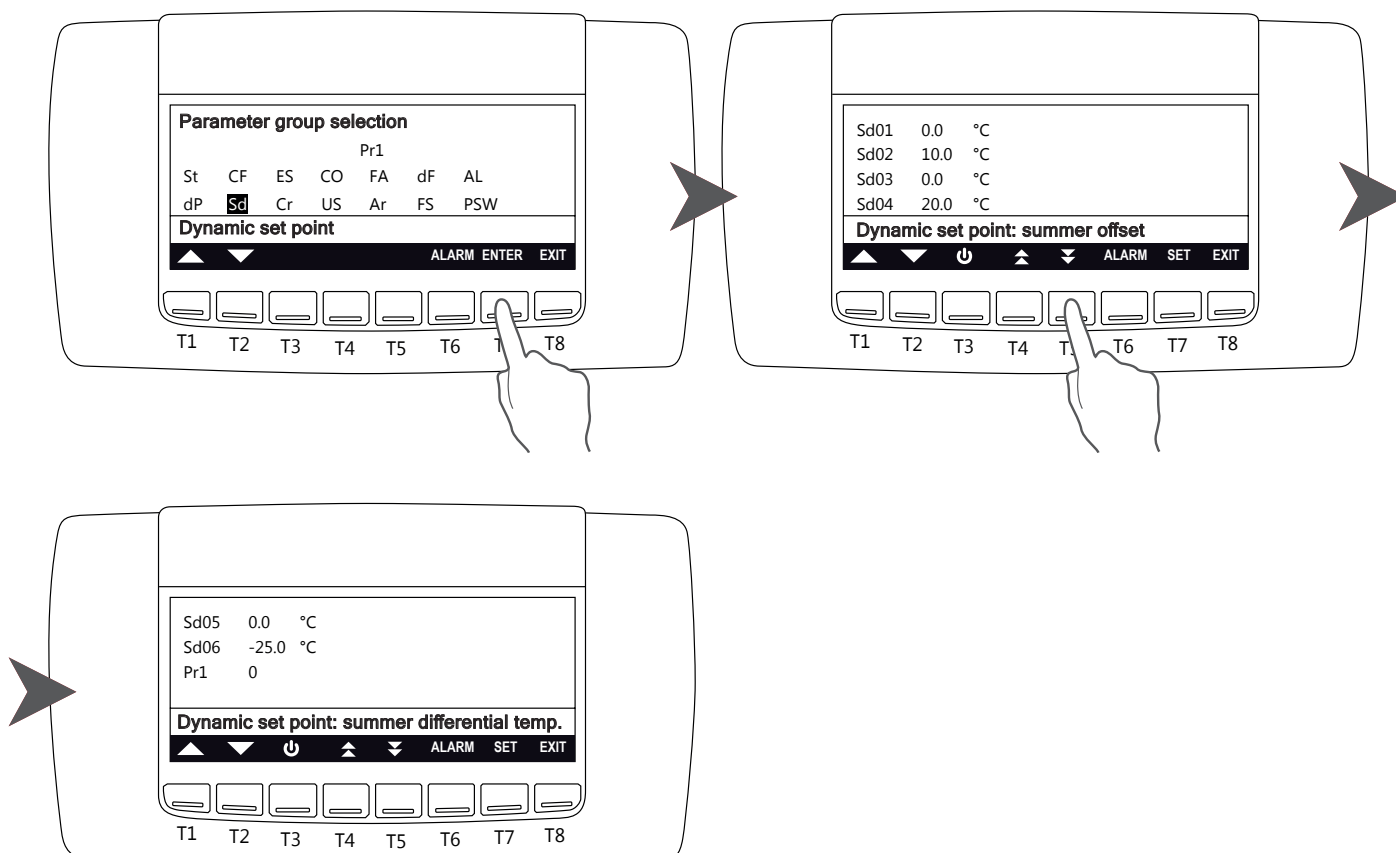


6.7.2 Setting date and time

To enter this menu select  moving between the icons with the keys T1 and T2 and press **ENTER**.

Press T1 and T2 to select the value you want to edit than press **SET**. The selected parameter will start blinking, press T1 and T2 to set the value and than press **SET** to confirm.

Pressing T5 it is possible to read the information about the Energy saving, ON/OFF scheduling and time bands. To modify the hour of the time band and to enable the function is necessary to insert the password, in case you do not have a password, you can only view the different parameters..

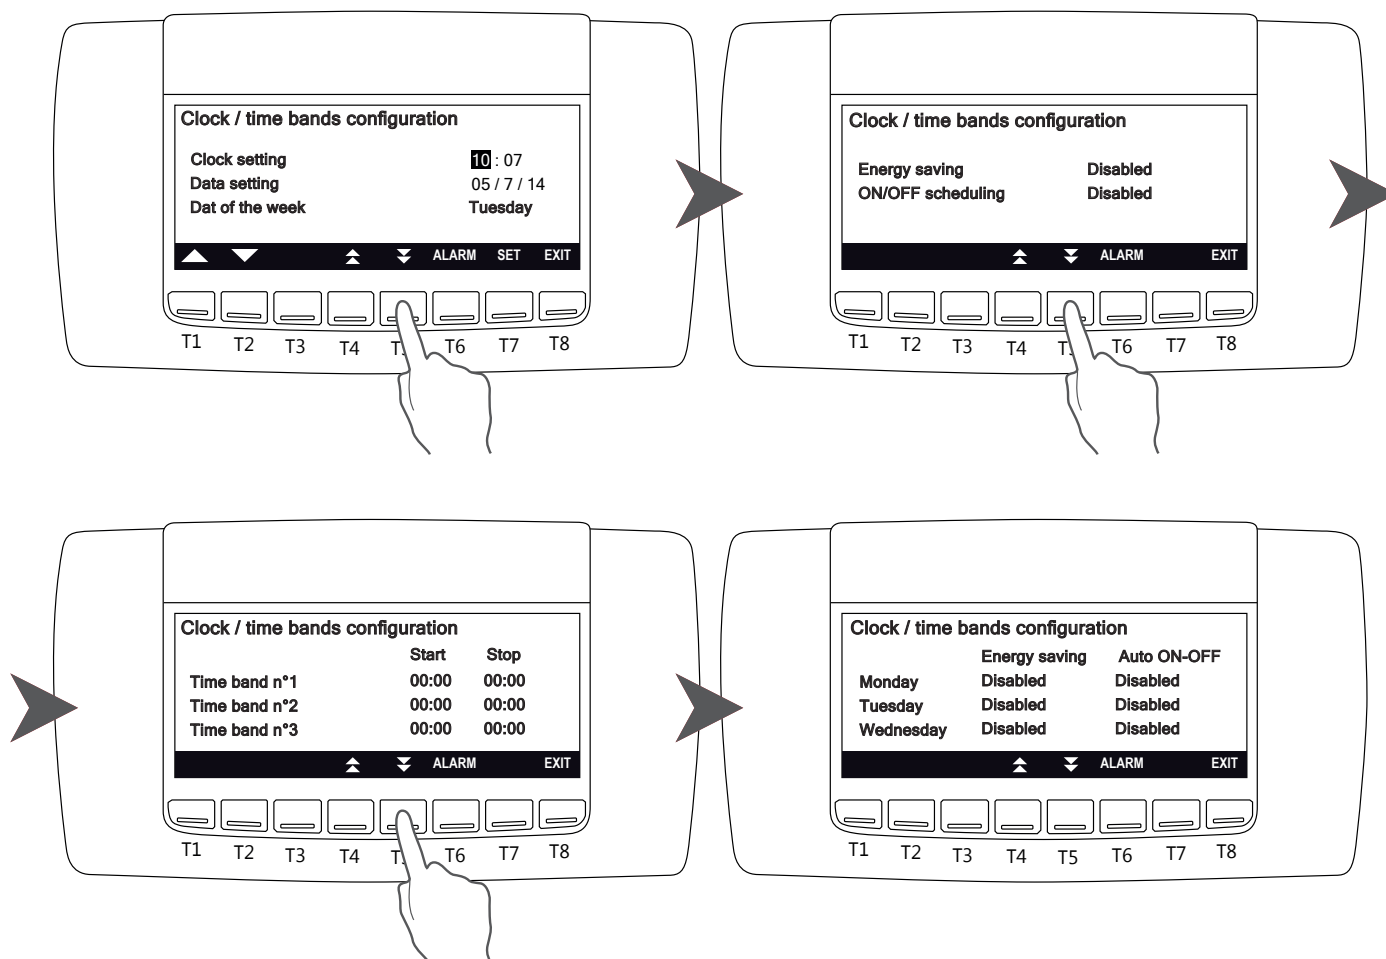


6.7.3 Compressor maintenance



To enter this menu select  moving between the icons with the keys T1 and T2 and press **ENTER**.

It is possible to display the compressors working hour and the number of activations. Select the circuit with the keys T1 and T2 than press **ENTER** to display the parameters. The disabling function of the compressors **ENB/DIS** is only possible by service people.

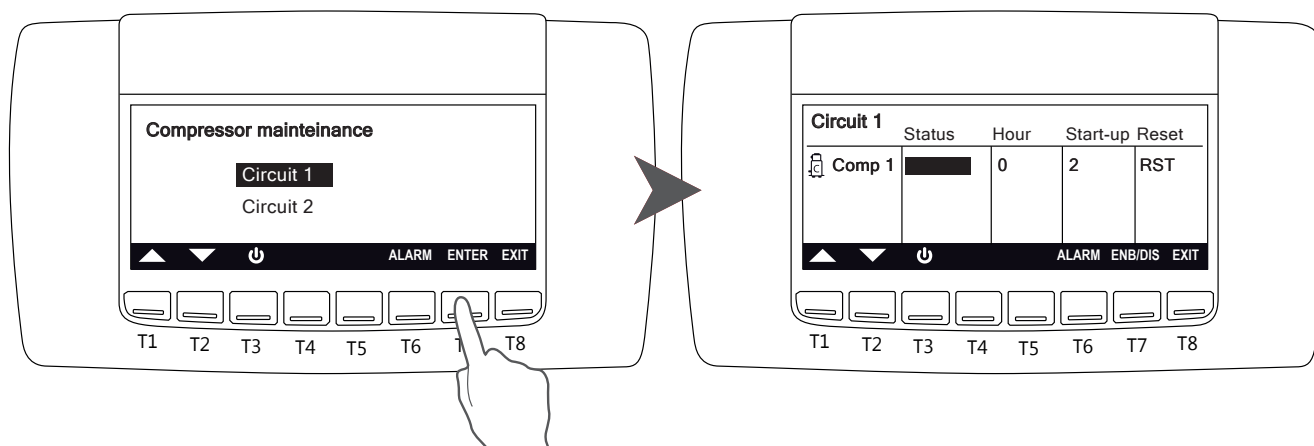


6.7.4 Water pumps




To enter this menu select  moving between the icons with the keys T1 and T2 and press **ENTER**.

It is possible to display the working hours of water pumps. The function **RESET** is only possible by service people.

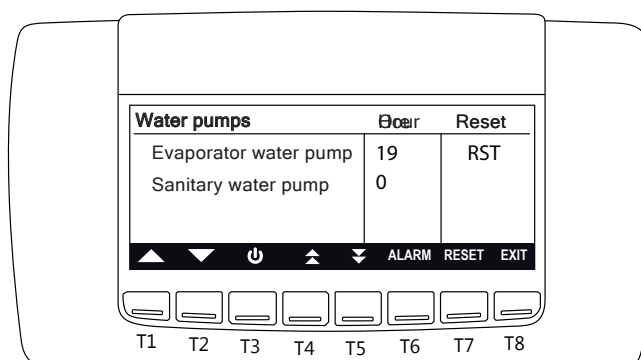


6.7.5 Circuit maintenance



To enter this menu select  moving between the icons with the keys T1 and T2 and press **ENTER**.


It is possible to display the status of the circuits. The function **ENB/DIS** is only possible by service people.

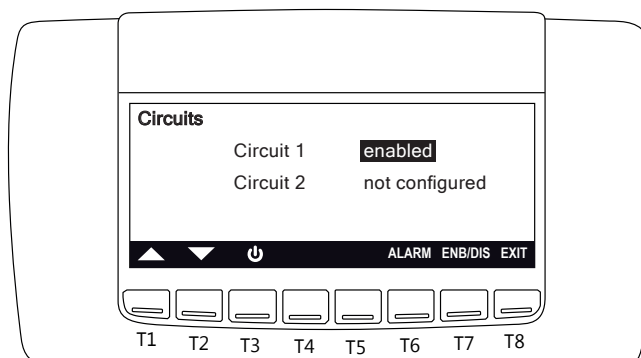


6.7.6 Alarms

To enter this menu select  moving between the icons with the keys T1 and T2 and press **ENTER**.



For the management of alarms see par. 6.5.

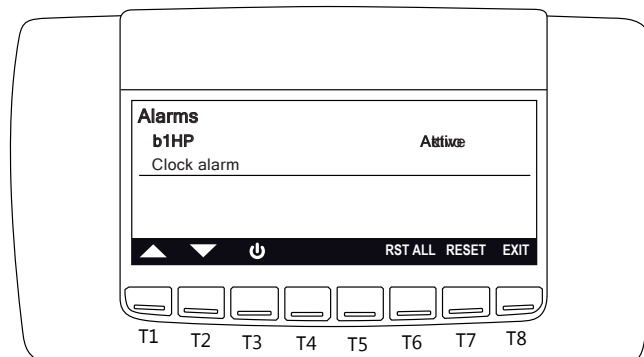


6.7.7 Alarm log

To enter this menu select  moving between the icons with the keys T1 and T2 and press **ENTER**.

Pressing T4 and T5 it is possible to read the last 99 alarms. The function of reset of all alarms **RST ALL** is only possible by service people.

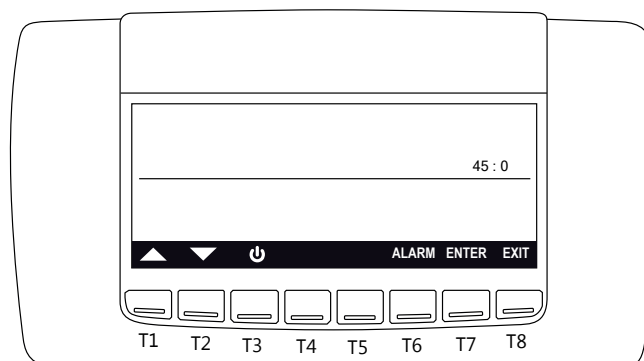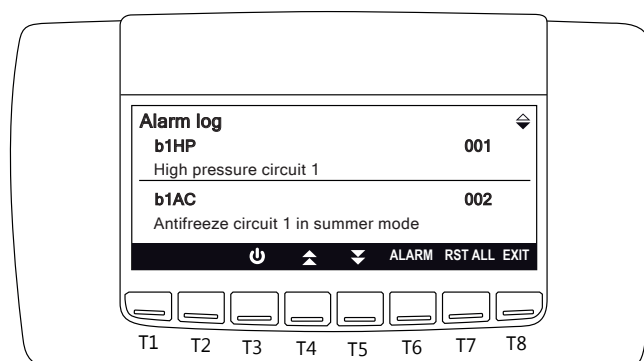


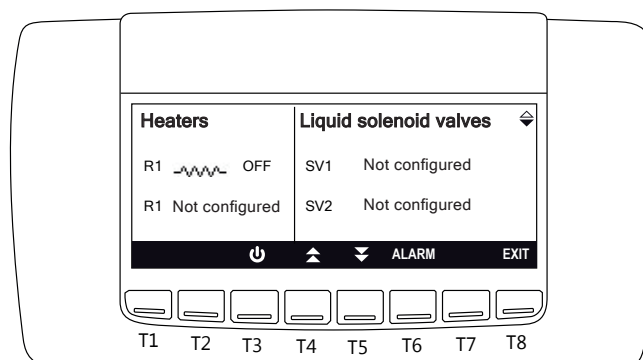
Press T4 and T5 to display all the available parameters.

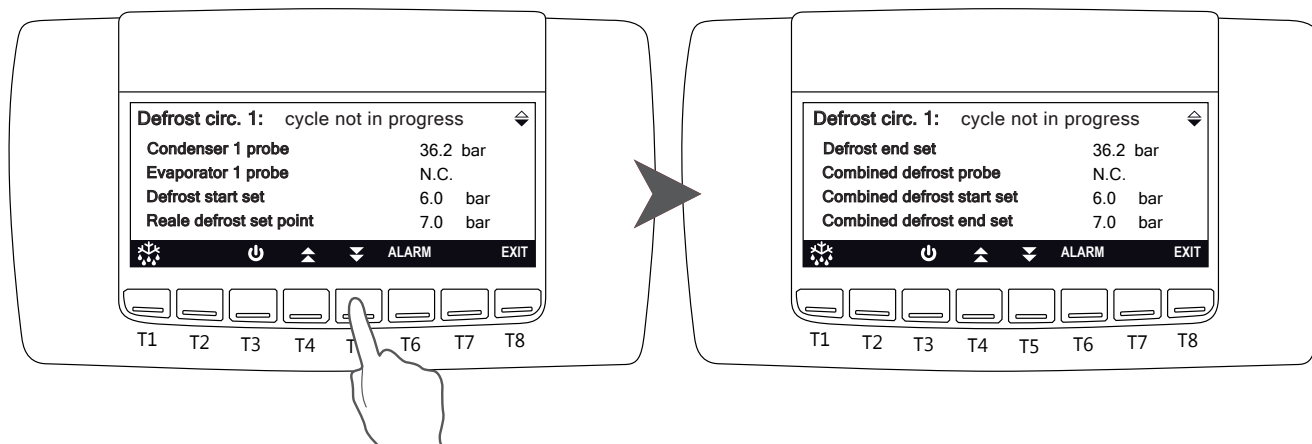

6.7.9 Eletrical heater




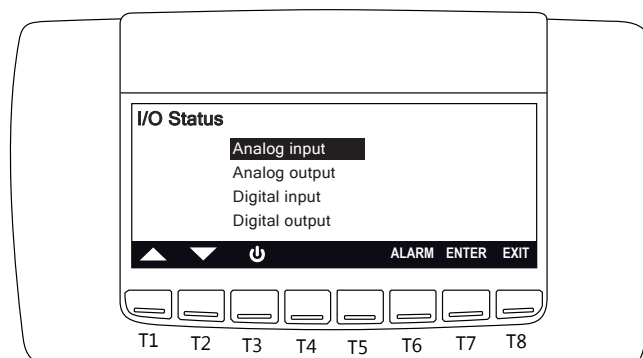
To enter this menu select  moving between the icons with the keys T1 and T2 and press **ENTER**. It is possible to read the status of the electrical heaters.



6.7.10 I/O Status (Input/Output)



To enter this menu select  moving between the icons with the keys T1 and T2 and press **ENTER**. It is possible to display: probes status, analog input and output, digital input and output.




6.7.11 Screw compressor (If available)




To enter this menu select  moving between the icons with the keys T1 and T2 and press **ENTER**.


In the main screen it is possible to display the discharge temperature and the liquid injection set point. Press T1 and T2 keys to select the required circuit than press **ENTER** key to read the discharge temperature and the status of the valves.

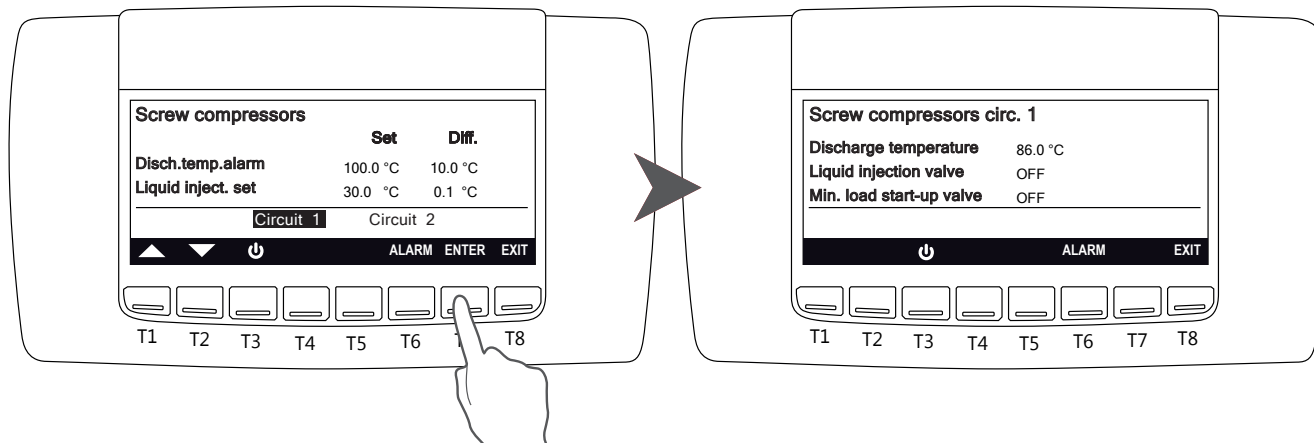

6.7.11 Control panel



To enter this menu select  moving between the icons with the keys T1 and T2 and press **ENTER**.

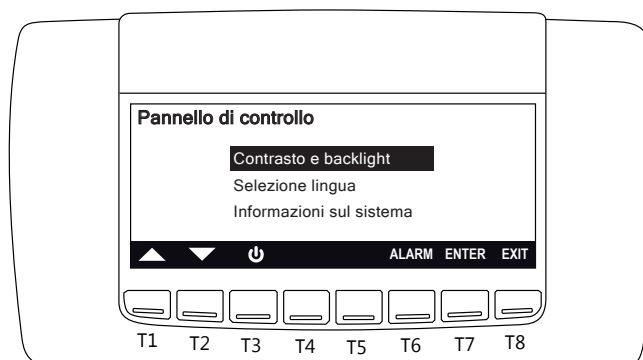

6.8 Acoustic signal silencing

Pressing and releasing one of the keys; the buzzer is switched off, even if the alarm condition remains in place.

6.9 Emergency Stop

The emergency stop gives the possibility to stop the unit for the minimum possible time.

If an emergency stop is required, follows this procedure:

- Turn the main switch (red and yellow) OFF; the unit immediately stops.
- Press the red emergency stop button as well.

6.9.1 Start after an emergency stop



Before restarting the unit, verify that the cause of the emergency stop has been eliminated

Restarting the unit proceeding as follows:

Turn the main switch ON; (this does not switch the unit ON and does not allow a restarting after a second voluntary action); Rotate the emergency stop button. The unit is thus restarted).

7. MAINTENANCE OF THE UNIT

7.1 General warnings



Starting from 01/01/2016 the new European Regulation 517_2014, "Obligations concerning the containment, use, recovery and destruction of fluorinated greenhouse gases used in stationary refrigeration, air conditioning and heat pumps", became effective. This unit is subject to the following regulatory obligations, which have to be fulfilled by all operators:

- (a) Keeping the equipment records
- (b) Correct installation, maintenance and repair of equipment
- (c) Leakage control
- (d) Refrigerant recovery and disposal management
- (e) Presentation to the Ministry of the Environment of the annual declaration concerning the atmospheric emissions of fluorinated greenhouse gases.

Maintenance can:

- Keep the equipment operating efficiently
- Prevent failures
- Increase the equipment life



It is advisable to maintain a record book for the unit which details all operations performed on the unit as this will facilitate troubleshooting.



Maintenance must be performed in compliance with all requirements of the previous paragraphs.



Use personal protective equipment required by regulations as compressor casings and discharge pipes are at high temperatures. Coil fins are sharp and present a cutting hazard.



If the unit is not to be used during the winter period, the water contained in the pipes may freeze and cause serious damage. In this event, fully drain the water from the pipes, checking that all parts of the circuit are empty including any internal or external traps and siphons.



If the unit is not used for long or during the seasonal stops, do not forget to close the shut-off valve on compressor discharge side.



Inside the unit, there can be high voltage zones. Any intervention on them, must be done by authorized personnel qualified in compliance with the local regulations in force.



The surfaces of the components in the compressor discharge side and in the refrigerant liquid line could reach very high temperatures and any contact can cause burns.



Before carrying out any kind of work on the machine, it is necessary to cut off the power supply from the electric panel, by turning the main switch to the OFF position



To carry on any intervention requiring the opening of the cooling circuit, follow this procedure:

- 1) activate the crankcase heater of the compressor for 4 hours minimum-
- 2) recover the refrigerant by means of an approved cylinder
- 3) make the vacuum in the circuit
- 4) flow the circuit with inert gas (nitrogen)
- 5) use orbital blades to dissect the pipes



Smoking is forbidden during maintenance operations.

7.2 Drive access

Access to the unit once installed, should only be possible to authorized operators and technicians. The owner of the equipment is the company legal representative, entity or person owns the property where the machine is installed.

They are fully responsible for all safety rules given in this manual and regulations. If it is not possible to prevent access to the machine by outsiders, a fenced area around the machine at least 1.5 meters away from external surfaces in which operators and technicians only can operate, must be provided.

7.3 Routine maintenance

The Owner must take care that the unit is adequately maintained, according to the indications contained in the Handbook and what required by current local laws and regulations.

The Owner must take care that the unit is periodically suitably inspected and maintained, according to the system type, size, age and functions and to the indication in the Handbook.



If leak detection instruments are installed on the system, they must be inspected at least once a year, to check that they work properly.

During its operation life the unit must be inspected and checked as stated by the current local laws and regulation. In particular, unless more restrictive specifications, follow the recommendation on the following table (see. EN 378-4. encl. D).

CASE	Sight Inspection (par. 4.2, p.ti a - l)	Pressure test	Leak detection
A	X	X	X
B	X	X	X
C	X		X
D	X		X

A	Inspection, after an intervention, with possible effects on the mechanical resistance or after a change of purpose or after a stop longer than 2 years; all unfit components must be replaced. Do not carry on checks with higher pressures than design ones.
B	Inspection following an intervention, or a relevant modification of the system or its components. The check can be restricted to the components involved in the intervention, but if a refrigerant leak is detected, a leak detection must be made on the all system.
C	Inspection following a change of the unit position. If there is the chance to have effects on the mechanical resistance, refer to point A.
D	Refrigerant leak detection after a justified suspicious. The system must be checked to find any leaks, using direct measures (devices able to find the leak) or indirect ones (deduction of the leak presence analysing the operational parameters), focusing attention on those parts which are more easily exposed to leaks (junctions, for example).



If it is detected a fault that endangers the reliable operation of the unit, it's necessary to rectified it before restart the unit.

7.4 Periodical checks



The start-up operations should be performed in compliance with all requirements of the previous paragraphs.



All of the operations described in this chapter **MUST BE PERFORMED BY TRAINED PERSONNEL ONLY**. Before commencing service work on the unit ensure that the electric supply is disconnected. The top case and discharge line of compressor are usually at high temperature. Care must be taken when working in their surroundings. Aluminium coil fins are very sharp and can cause serious wounds. Care must be taken when working in their surroundings. After servicing, replace the cover panels, fixing them with locking screws.

7.4.1 Electrical system and control devices

Actions	Frequency						
	Daily	Monthly	Every 2 months	Every 6 months	Once a year	Every 5 years	If required
Check that the unit works properly and that there are no alarms	X						
Visually inspect the unit		X					
Check unit noise and vibration		X					
Check safety devices and interlocks				X			
Check the unit performances				X			
Check the absorbed current of the components (compressors, fans, pumps, etc.)				X			
Check the supply voltage of the unit				X			
Check the connection of cables to the pre-arranged clamps				X			
Check the integrity of the insulating coating of the electrical cables					X		
Check contactors conditions and functioning					X		
Check microprocessor and display functioning			X				
Check microprocessor set parameter values					X		
Eliminate any dust from electrical and electronic components				X			
Check probes and transducers functioning and calibration					X		
Check evaporator refrigerant level sensor functioning (if present)					X		
Check evaporator refrigerant level sensor calibration (if present)					X		
Check the calibration of the refrigerant leakage sensor					X		

7.4.2 Condensing coils fans and cooling circuit

Actions	Frequency						
	Daily	Monthly	Every 2 months	Every 6 months	Once a year	Every 5 years	If required
Visually inspect condensing coil		X					
Clean finned coils ⁽¹⁾				X			
Check the water flow and/or any leaks		X					
Check that the flow switch is working properly				X			
Clean the metallic filter on the water pipe ⁽³⁾				X			
Check fans noise and vibration		X					
Check fans supply voltage				X			
Check fans electrical connection					X		
Check proper operation and calibration of the fans speed regulation system					X		
Check 4 way valve proper operation (if present)					X		
Check 3 way valve proper operation (if present)					X		
Check presence of air the hydraulic circuit		X					
Check the color of the humidity display on the liquid line				X			
Check if there are any freon leaks ⁽²⁾							X



⁽¹⁾ If the unit is installed in strongly windy areas, near coasts or deserts or in areas subjects to wind and/or sand storms, or near airports, industries or in places with high levels of air pollution in general inspect the unit more frequently (**every three months**) to check the real condition of the surface protection. follow the instructions given in the paragraph "Cleaning the microchannel condensing coils".



⁽²⁾ In order to carry out operations on the refrigerant, it is necessary to observe the European Regulation 517_2014, "Obligations regarding the containment, use, recovery and destruction of fluorinated greenhouse gases used in stationary refrigeration, air conditioning and heat pump equipment".



⁽³⁾ It can be carried out with a higher frequency (also weekly) depending on the Δt .

7.4.3 Compressor

Actions	Frequency						
	Daily	Monthly	Every 2 months	Every 6 months	Once a year	Every 5 years	If required
Visually inspect compressors		X					
Check compressor noise and vibration		X					
Check compressors supply voltage				X			
Check the compressors electrical connections					X		
Check the oil level in the compressors using the oil level indicator light.				X			
Check that the crankcase heaters are powered and working properly.		X					
Check the conditions of the compressors electrical cables and their connection to their clamps				X			



Monthly and daily procedure can be directly done by the Owner. The other interventions must be done by qualified and suitably trained personnel.



Do not start any cleaning operation before disconnecting the unit from the electrical power supply, turning the main switch to OFF Position. Do not touch the equipment with barefoot or wet /damp parts of the body.



Any intervention on the cooling circuit must be done by qualified and suitable trained technicians, licensed in compliance with current local laws and regulation.

7.4.4 Microchannel condensing coils cleaning

In order to grant the optimal unit operation and to keep the unit performances unchanged, periodically inspect the cleaning condition of the micro channel condensing coils and proceed with cleaning operation at least once per year if the unit is not installed in an high polluted zone, far from industrial areas or high populated centres. If it is instead installed in areas with high powders or Pollens concentration or near airports, industries or, in general, in high polluted areas, inspection and cleaning must be done every three Months.



It is important cleaning the surface of the microchannel coil, removing any solid residue which could impede the correct airflow worsening in that way the heat exchange. A frequent cleaning helps in keeping high unit performance values increasing condensing coil and unit itself lifetime.

To clean a not treated microchannel coil first of all remove the dirty on the exchangers surface using an industrial vacuum cleaner or compressed air. Only after the removal of any solid residue on the coil surface, it is possible starting the washing, which must be done with pure water without the addition of any chemical substances or other detergents that could damage the superficial oxide layer which protects the exchanger and, if damaged, could favour the activation of corrosion phenomena.



The use of pressure washers and chemical substances (or other detergents) to wash the surface of the microchannel coils is forbidden. If any damage will be caused by the high pressure jet, no warranty cover will be recognized on the unit.



When intervene on the unit, keep attention on avoiding to damage the coil surface by hitting it with the metal nozzle of the tools used for cleaning.

7.4.5 Check and calibration of the refrigerant leak detector

The maintenance (sight, operational and system one) of the detector must be done once a year to keep unchanged its safety and measurement performance and to grant the refrigerant detection alarm. The maintenance must be carefully done by skilled and qualified personnel. The system control, carried out by qualified personnel, must be done every 12 months at least and involves minimum the following operations:

- Functional check
- Failure relay check
- Alarm relay check
- Point 0 check

Control and calibration check with test gas; to carry on such a test, you can buy the calibration kit or send the detector to the Manufacturer for the calibration.

To carry on the test, you need to use the dedicated kit by the Manufacturer; In any case refer to the handbook of the detector supplied with the unit.

The procedure indicated by the Manufacturer must be strictly followed. If the test is successfully completed, the detector can be installed and use once more.

If after the calibration is sensibility fall below the 55%, the detector must be replaced as suggested by the manufacturer.

7.4.6 Microchannel coils treated with AiAX coating cleaning (optional ECP / PCP)

To clean the microchannel coils treated with AiAX coating, first of all remove the dirty on the exchangers surface using an industrial vacuum cleaner or compressed air. Only after the removal of any solid residue on the coil surface, it is possible starting the washing, which must be done with pure water, or water added with standard cleansing agents with PH between 4 and 10. In this case proceed with an abundant final rinse to remove any trace of the used detergent from the coil surface.

7.4.7 End of seasons

If the unit is to be left out of commission for a long period, the hydraulic circuit should be drained down. This operation is compulsory if the ambient temperature is expected to drop below the freezing point of the fluid in the circuit (typical seasonal operation). Before a new filling, the system must be washed.

7.4.8 Unit OFF

To stop the unit, press the ON/OFF key on the microprocessor, turning it on OFF position. If the unit will be OFF for more than 24 h turn the main switch to OFF position to cut the unit electrical power.

If any malfunction has occurred during the unit operation, solve it asap, in order to avoid that it will occur again at next operation.

7.5 Refrigerant circuit repair



Before any intervention with devices able to create sparks, heat, naked flames etc. totally empty and blow the circuit from any refrigerant.

For leak detection, the system should be charged with nitrogen using a gas bottle with a pressure reducing valve, until 15 bar pressure is reached. Any leakage is detected using a bubble leak finder. If bubbles appear discharge the nitrogen from the circuit before brazing using the proper alloys.



Never use oxygen instead of nitrogen: explosions may occur.

Site assembled refrigerant circuits must be assembled and maintained carefully, in order to prevent malfunctions.

Therefore:

- Avoid oil replenishment with products that are different from that specified and that are pre-loaded into the compressor.
- In the event of a gas leakage on machines using refrigerant R407C, even if it is only a partial leak, do not top up. The entire charge must be recovered, the leak repaired and a new refrigerant charge weighed in to the circuit.
- When replacing any part of the refrigerant circuit, do not leave it exposed for more than 15 minutes.
- It is important when replacing a compressor that the task be completed within the time specified above after removing the rubber sealing caps.
- When replacing the compressor following a burn out, it is advisable to wash the cooling system with appropriate products including a filter for acid.
- When under vacuum do not switch on the compressor.

8. DECOMMISSIONING

8.1 Disconnect the unit



All decommissioning operations must be performed by authorized personnel in accordance with the national legislation in force in the country where the unit is located.

- Avoid spills or leaks into the environment.
- Before disconnecting the machine please recover:
 - the refrigerant gas;
 - Glycol mixture in the hydraulic circuit;
 - the compressor lubricating oil.

Before decommissioning the machine can be stored outdoors, providing that it has the electrical box, refrigerant circuit and hydraulic circuit intact and closed.

8.2 Disposal, recovery and recycling

The frame and components, if unusable, should be taken apart and sorted by type, especially copper and aluminum that are present in large quantities in the machine.

All materials must be recovered or disposed in accordance with national regulations.



The refrigerant circuit of the unit contains lubricant oil that binds the disposal mode of components .

8.3 RAEE Directive (only UE)



The crossed-out bin symbol on the label indicates that the product complies with regulations on waste electrical and electronic equipment.
The abandonment of the equipment in the environment or its illegal disposal is punishable by law.

This product is included in the application of Directive 2012/19/EU on the management of waste electrical and electronic equipment (WEEE).

The unit should not be treated with household waste as it is made of different materials that can be recycled at the appropriate facilities. Inform through the municipal authority about the location of the ecological platforms that can receive the product for disposal and its subsequent proper recycling.

The product is not potentially dangerous for human health and the environment, as it does not contain dangerous substances as per Directive 2011/65/EU (RoHS), but if abandoned in the environment it has a negative impact on the ecosystem.

Read the instructions carefully before using the unit for the first time. It is recommended not to use the product for any purpose other than that for which it was designed, as there is a risk of electric shock if used improperly.

9. DIAGNOSIS AND TROUBLESHOOTING

9.1 Fault finding



All units are checked and tested at the factory before shipment, however, during operation an anomaly or failure can occur.



BE SURE TO RESET AN ALARM ONLY AFTER YOU HAVE REMOVED THE CAUSE OF THE FAULT; REPEATED RESET MAY RESULT IN IRREVOCABLE DAMAGE TO THE UNIT AND IMMEDIATELY VOID THE WARRANTY


Code	Alarm Description	Cause	Solution
da ACF1 a ACF15	Configuration alarm	Wrong configuration of microprocessor control system.	Contact the company.
AEE	Eeprom alarm	Severe hardware damage in the microprocessor control system.	Switch OFF the unit and, after few second switch ON the unit; if the alarm appears again contact the service.
AEFL	User water flow switch alarm	Presence of air or dirtiness in the user hydraulic system.	Bleed carefully the user hydraulic system or check and clean the water strainer.
AEUn	Compressor unloading alarm (only units with 2 compressors)	User water temperature is too high.	Wait until the user water temperature is lower.
b1 Cu b2 Cu	Unloading signal compressor circuit 1 – circuit 2 (units with 2 compressors each circuit)	To high condensation pressure	Wait for the condensation pressure to drop.
b1 Eu b2 Eu	Low temperature unloading signal circuit 1 – circuit 2	Too low outlet temperature	Wait for the outlet temperature to rise
da AP1 a AP10	Alarm user inlet water temperature sensor.	Wrong electrical connection, Sensor defect.	Check the electrical connection of the sensor to the terminal board, if correct call the service to replace the sensor.
AtE1	Evaporator water pump 1 overload		
AtE2	Evaporator water pump 2 overload		

Code	Alarm Description	Cause	Solution
B1 HP B2 HP	High pressure switch circuit 1 circuit 2	In heating mode: Insufficient user circuit water flow; Insufficient domestic hot water circuit water flow. In cooling mode: Insufficient air flow at the source fan; Insufficient domestic hot water circuit water flow.	Restore the correct user circuit water flow. Restore the correct domestic hot water circuit water flow. Restore the correct air flow to source fan. Restore the correct domestic hot water circuit water flow.
b1AC b2AC	Anti-freeze alarm circuit 1 - circuit 2 (cooling mode)	Too low water temperature	Check user temperature set point; Check user water flow.
b1AH b2AH	Anti-freeze alarm circuit 1 - circuit 2 (heating mode)	Too low water temperature	Check user temperature set point.
b1dF b2dF	Wrong defrost circuit 1 - circuit 2 (maximum time admitted)	Defrost time too long; Outside temperature outside the working limits; Refrigerant charge leakage.	Check defrost set point; Restore normal working conditions; Find leakage and repair.
b1hP b2hP	High pressure transducer alarm circuit 1 - circuit 2	Transducer defect	Replace the faulty transducer.
B1LP B2LP	Low pressure switch circuit 1 - circuit 2	Refrigerant charge leakage.	Find leakage and repair.
b1IP b2IP	Low pressure transducer alarm circuit 1 - circuit 2	Transducer defect	Replace the faulty transducer.
b1tF b2tF	Overload source fan alarm circuit 1 - circuit 2	Fan input current outside operation limits.	Check the proper operation of the source fan and, in case replace it.
C1tr	Compressor 1 overload	Compressor input current outside operation limits.	Replace the compressor.
C2tr	Compressor 2 overload	Compressor input current outside operation limits.	Replace the compressor.
C3tr	Compressor 3 overload	Compressor input current outside operation limits.	Replace the compressor.
C4tr	Compressor 4 overload	Compressor input current outside operation limits.	Replace the compressor.

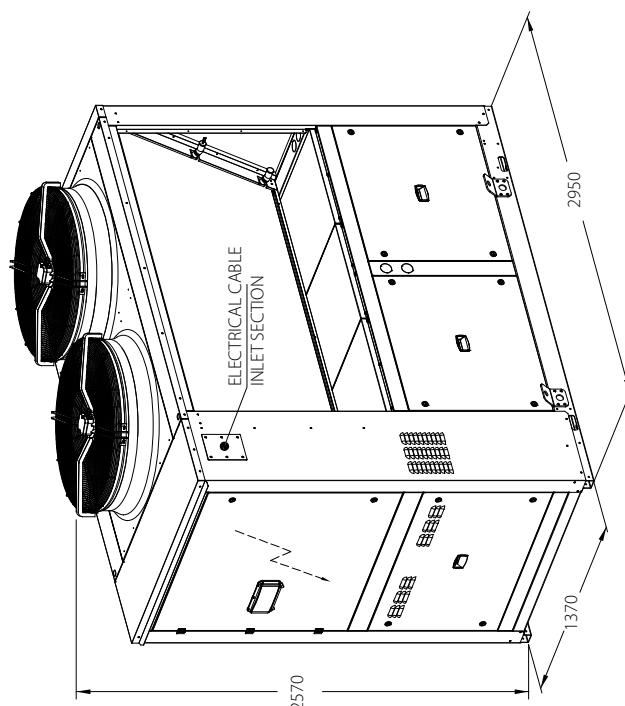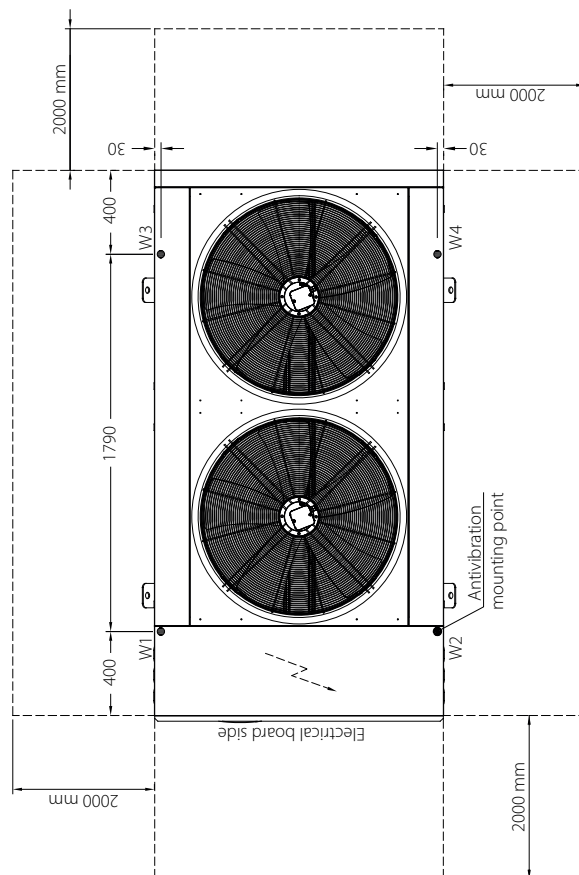



	RAS 521 MC Kp	RAS 591 MC Kp	RAS 721 MC Kp	RAS 871 MC Kp	RAS 1001 MC Kp
Global weight (Kg)	1098	1100	1212	1310	1316
Point W1 (Kg)	338	339	358	379	380
Point W2 (Kg)	338	339	358	379	380
Point W3 (Kg)	211	211	248	276	278
Point W4 (Kg)	211	211	248	276	278

RAS 1402-2902 MC Kp

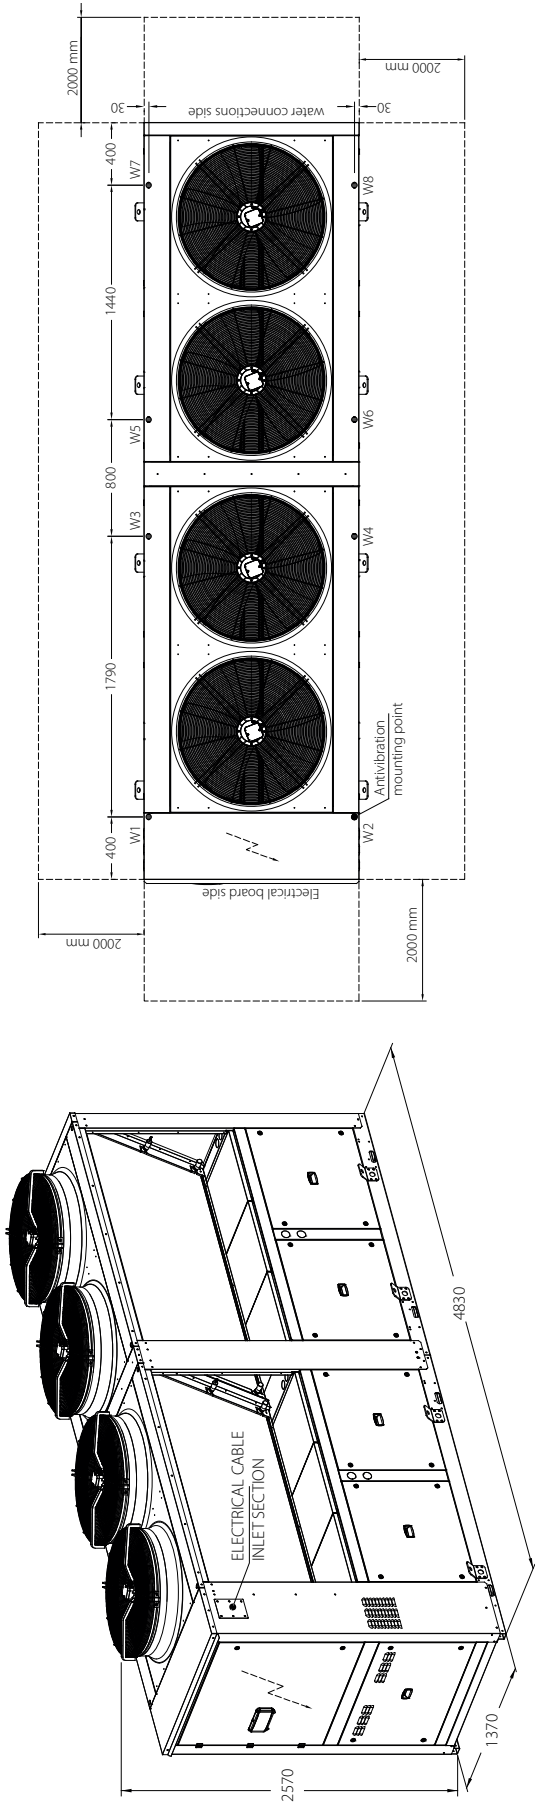



	RAS 1402 MC Kp	RAS 1702 MC Kp	RAS 2102 MC Kp	RAS 2402 MC Kp	RAS 2902 MC Kp
Global weight (Kg)	2016	2112	2178	2544	2630
Point W1 (Kg)	295	307	315	370	379
Point W2 (Kg)	298	307	315	370	379
Point W3 (Kg)	261	272	281	325	345
Point W4 (Kg)	261	272	281	325	345
Point W5 (Kg)	239	249	260	299	309
Point W6 (Kg)	239	249	260	299	309
Point W7 (Kg)	312	228	233	278	282
Point W8 (Kg)	312	228	233	278	282

RAS 3402 MC Kp

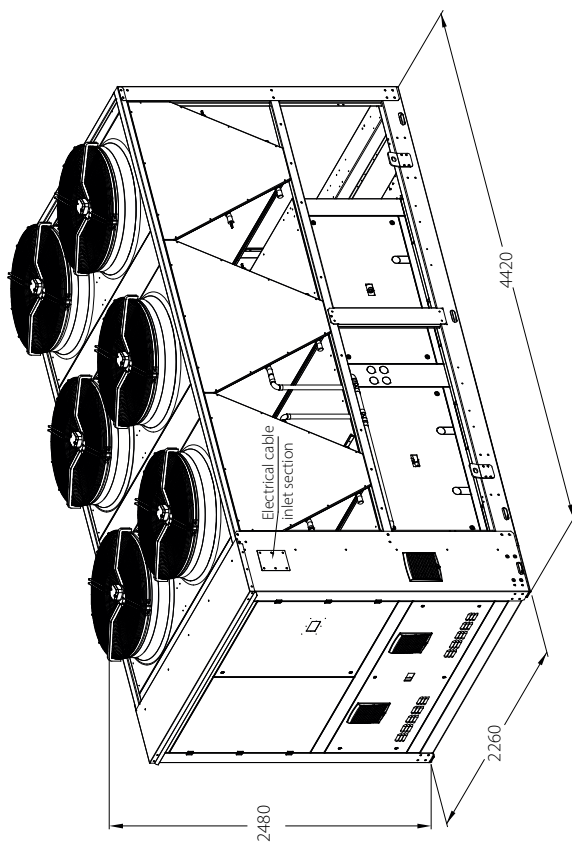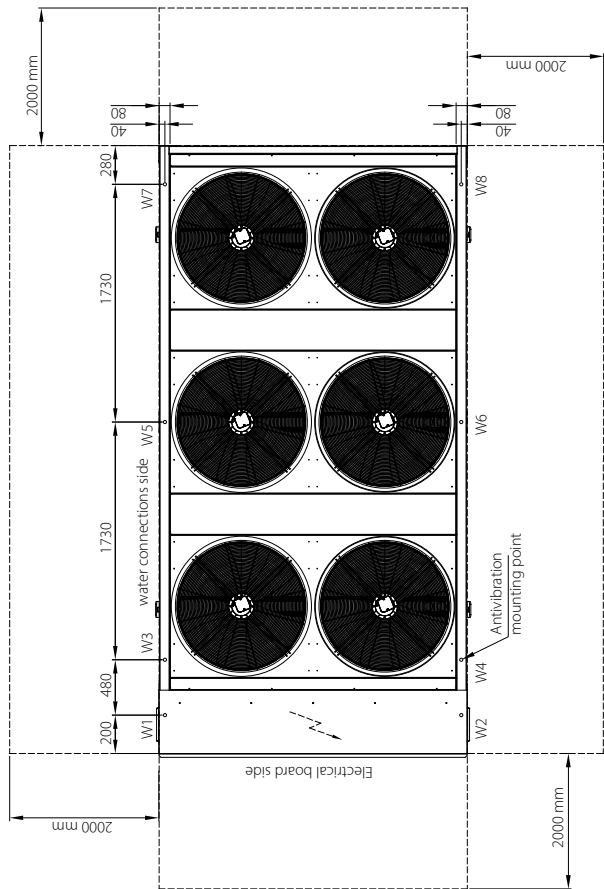


	RAS 3402 MC Kp
Global weight (Kg)	3132
Point W1 (Kg)	395
Point W2 (Kg)	410
Point W3 (Kg)	399
Point W4 (Kg)	420
Point W5 (Kg)	381
Point W6 (Kg)	403
Point W7 (Kg)	345
Point W8 (Kg)	379

RAS 521-1001 MC VB Kp

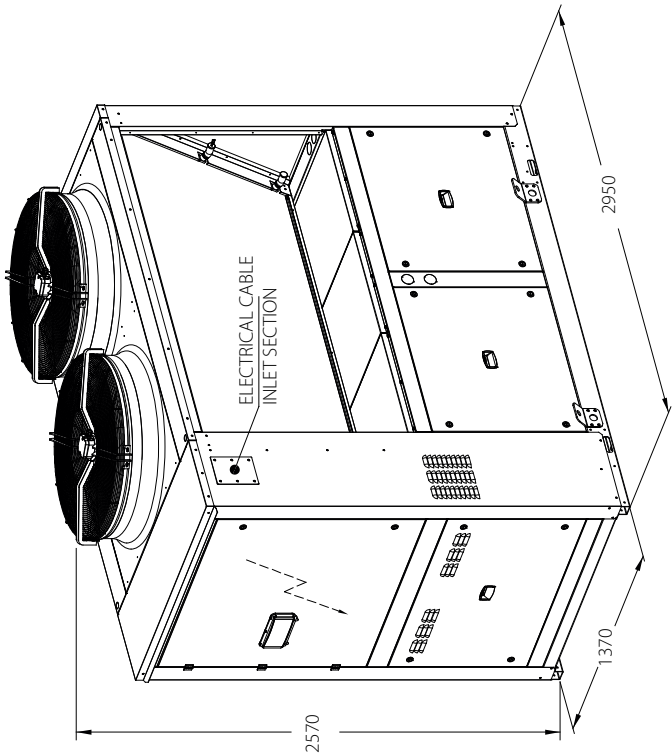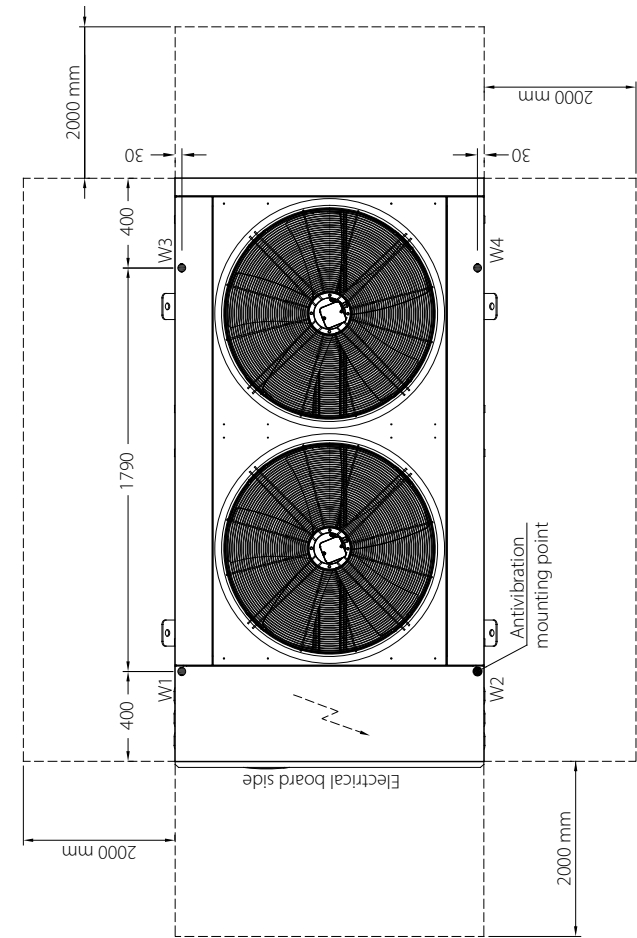



	RAS 521 MC VB Kp	RAS 591 MC VB Kp	RAS 721 MC VB Kp	RAS 871 MC VB Kp	RAS 1001 MC VB Kp
Global weight (Kg)	1056	1060	1170	1248	1258
Point W1 (Kg)	331	330	358	372	376
Point W2 (Kg)	331	330	358	372	376
Point W3 (Kg)	197	194	227	252	253
Point W4 (Kg)	197	194	227	252	253

RAS 1402-2902 MC VB Kp

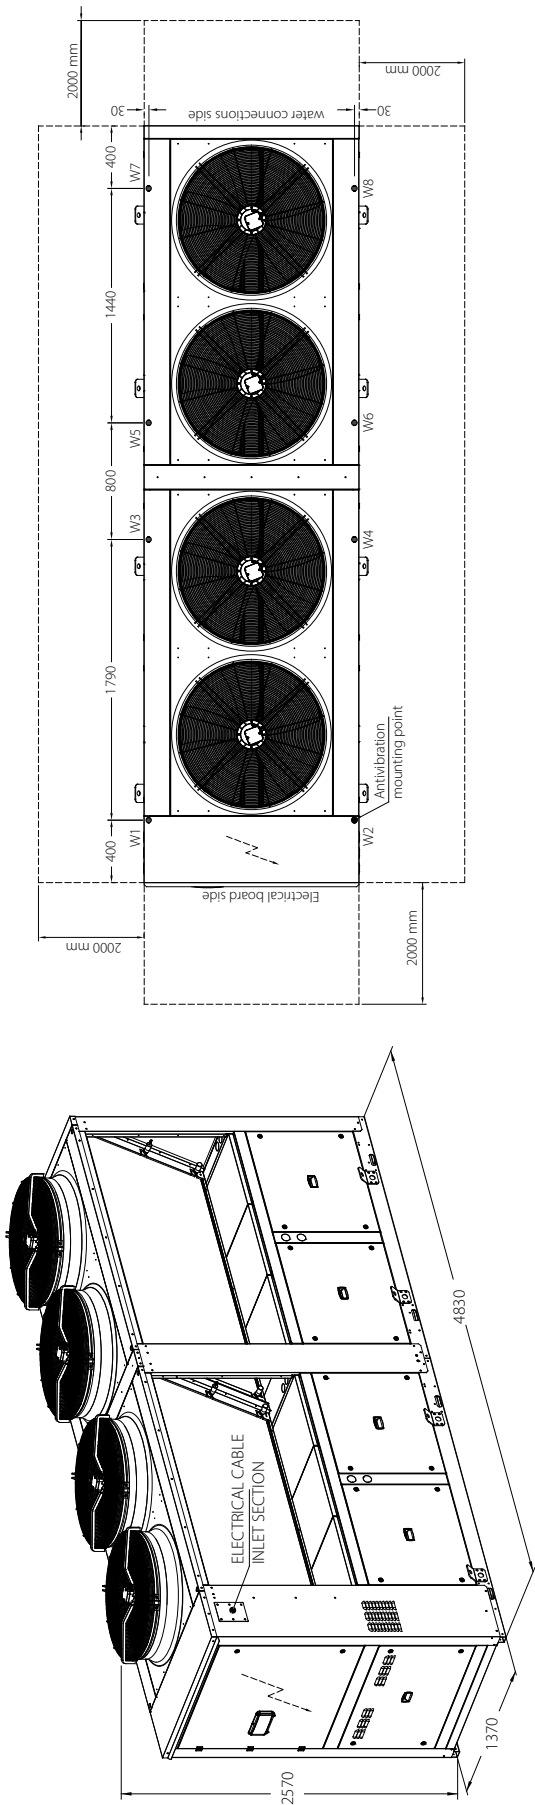


	RAS 1402 MC VB Kp	RAS 1702 MC VB Kp	RAS 2102 MC VB Kp	RAS 2402 MC VB Kp	RAS 2902 MC VB Kp
Global weight (Kg)	1956	2110	2188	2540	2632
Point W1 (Kg)	278	297	306	346	357
Point W2 (Kg)	278	297	306	346	357
Point W3 (Kg)	254	273	283	297	312
Point W4 (Kg)	254	273	283	297	312
Point W5 (Kg)	227	250	259	295	301
Point W6 (Kg)	227	250	259	295	301
Point W7 (Kg)	219	235	246	332	346
Point W8 (Kg)	219	235	246	332	346

RAS 3402-3702 MC VB Kp

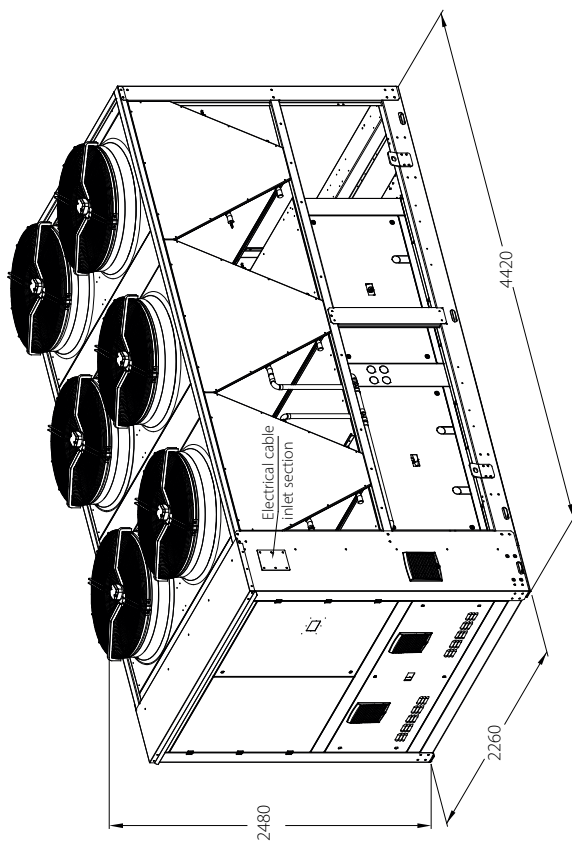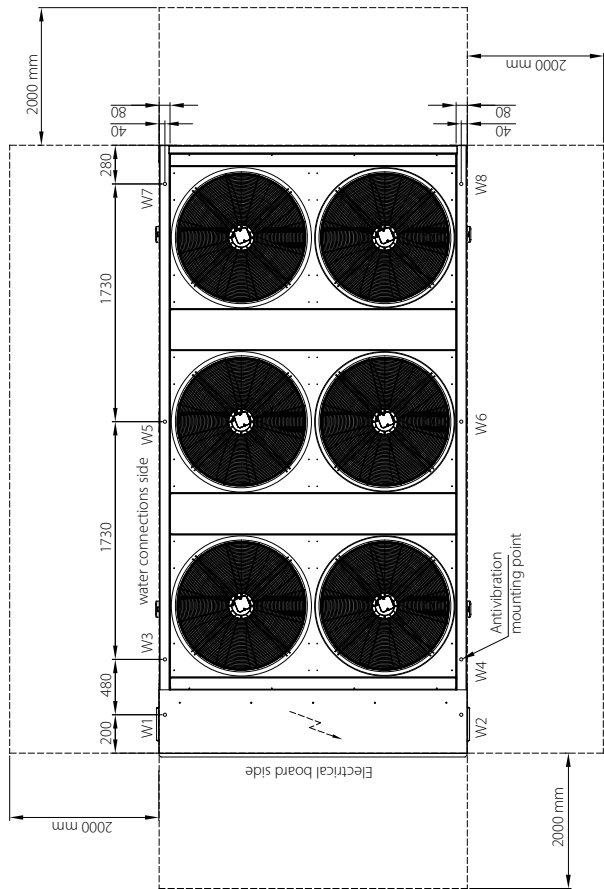

	RAS 3402 MC VB Kp	RAS 3702 MC VB Kp
Global weight (Kg)	3134	3152
Point W1 (Kg)	395	400
Point W2 (Kg)	412	412
Point W3 (Kg)	399	404
Point W4 (Kg)	420	420
Point W5 (Kg)	381	384
Point W6 (Kg)	403	403
Point W7 (Kg)	345	350
Point W8 (Kg)	379	379


RAS 521-721 F Kp

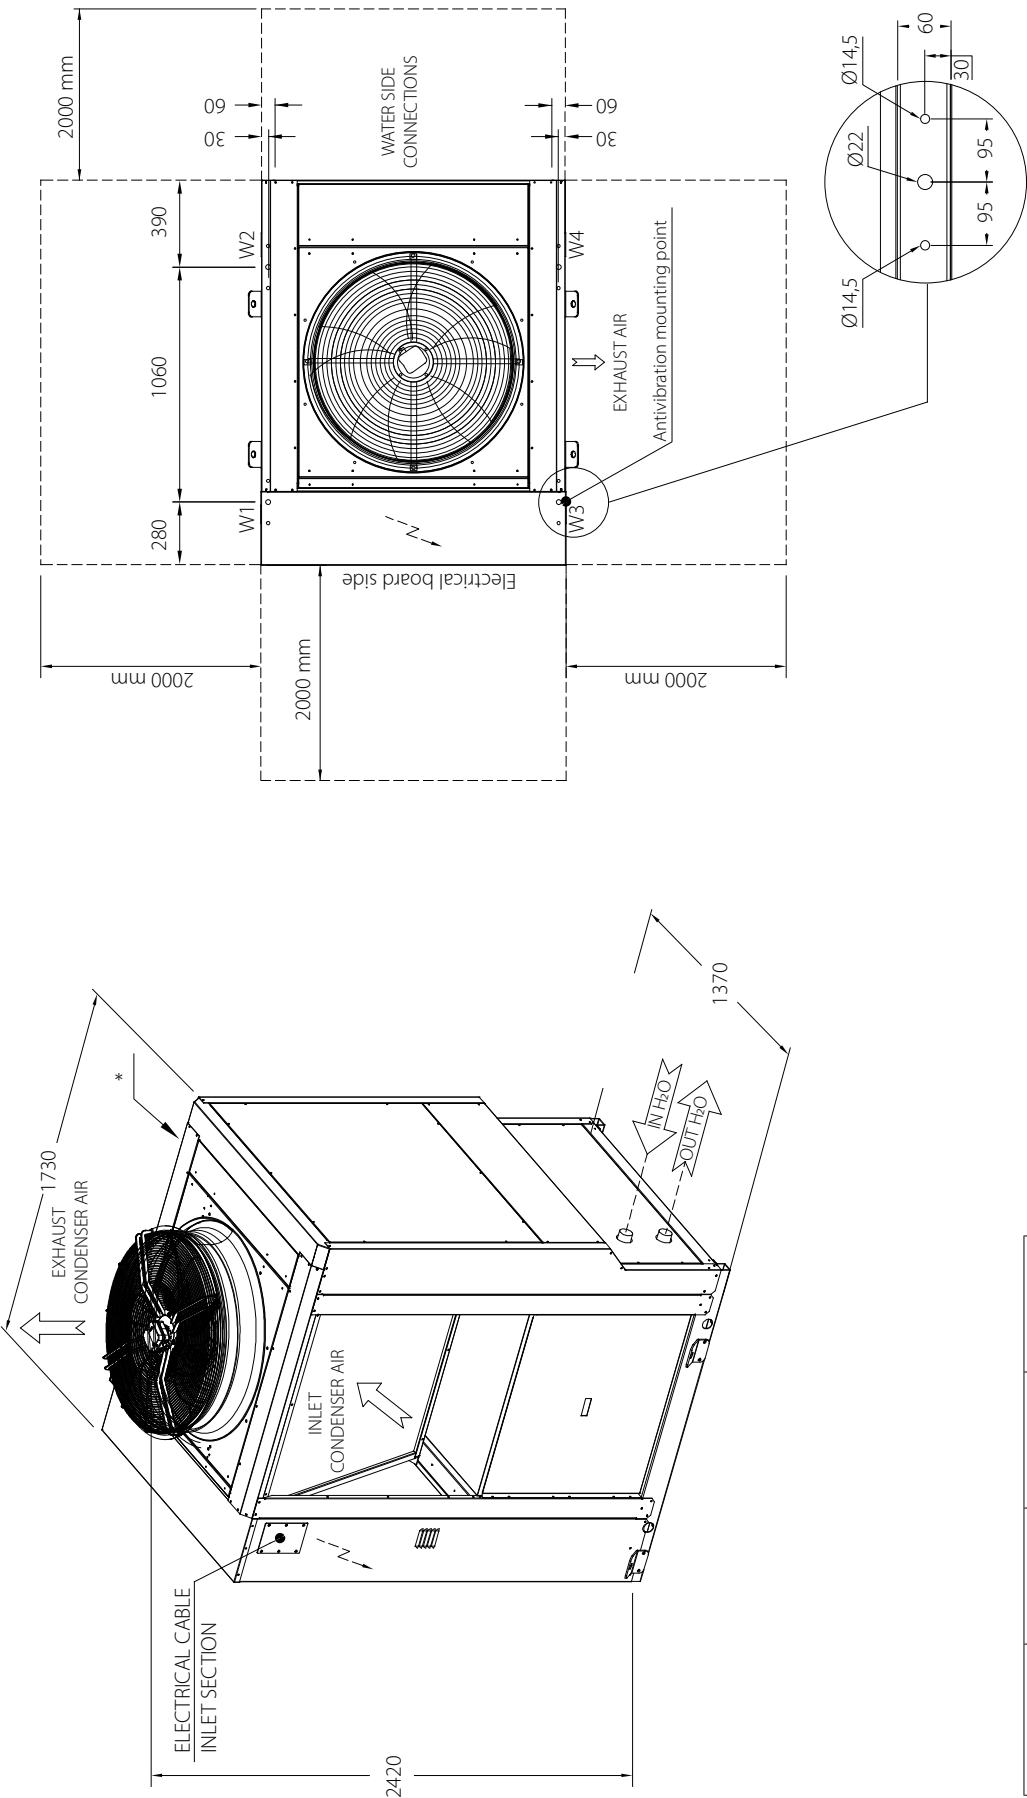

	RAS 521 F Kp	RAS 591 F Kp	RAS 721 F Kp
Global weight (Kg)	1088	1124	1150
Point W1 (Kg)	303	311	317
Point W2 (Kg)	241	251	258
Point W3 (Kg)	303	311	317
Point W4 (Kg)	241	251	258
*	Ø 1/2" Gas	Ø 3/4" Gas	Ø 3/4" Gas

* Discharge pipe for HP safety valve


RAS 871-1402 F Kp

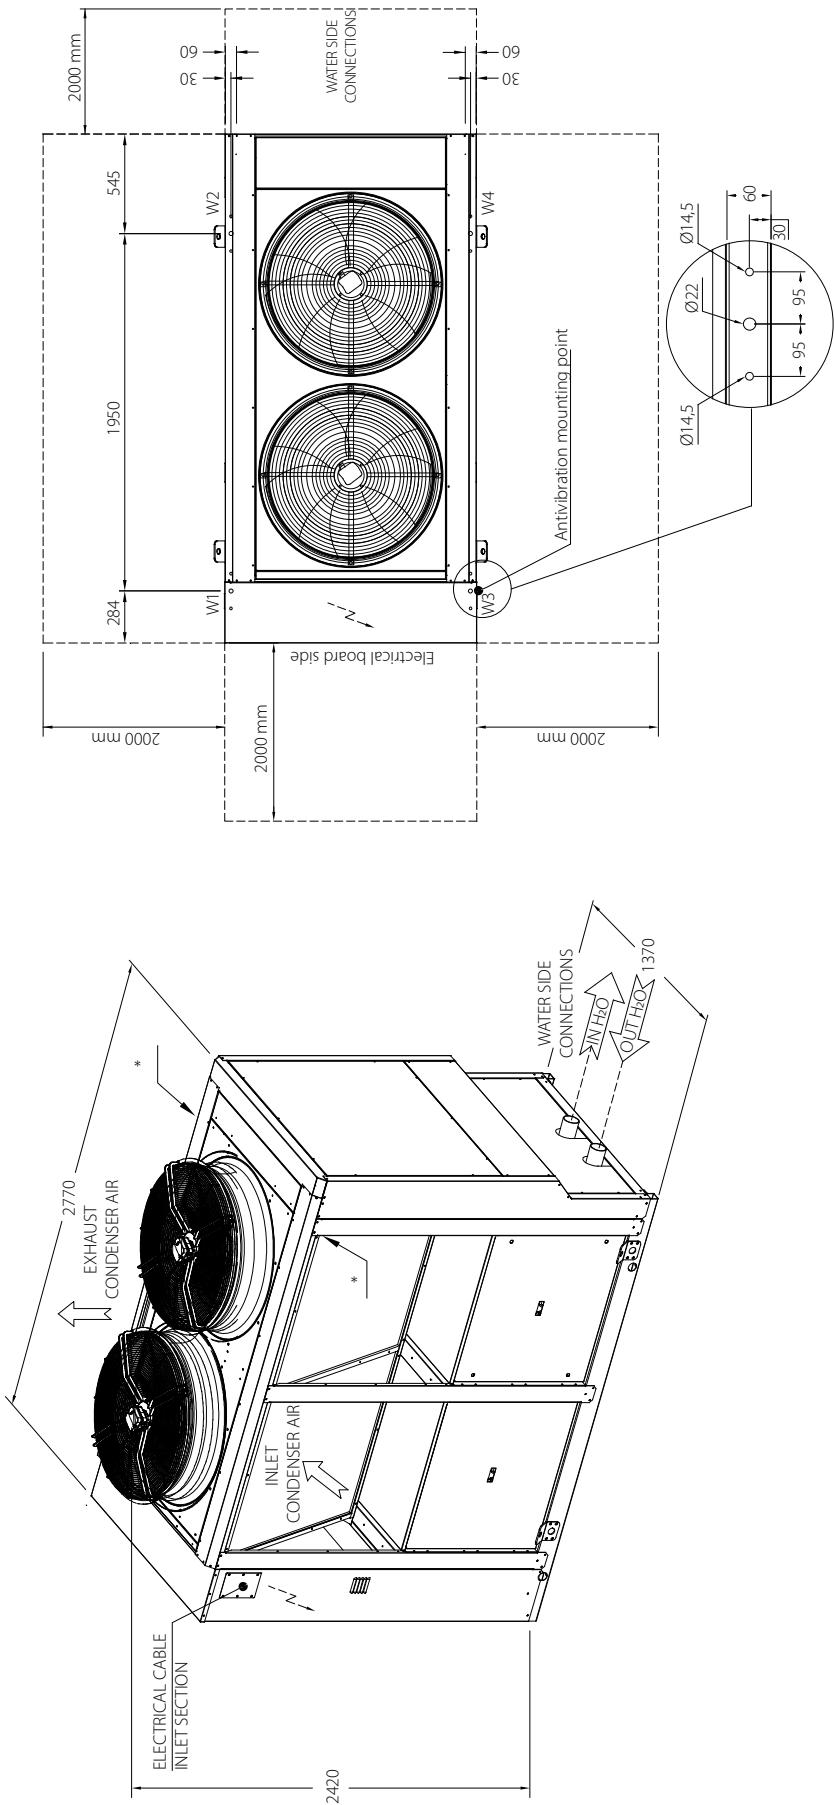

	RAS 871 F Kp	RAS 1001 F Kp	RAS 1402 F Kp
Global weight (Kg)	1492	1558	1776
Point W1 (Kg)	379	391	459
Point W2 (Kg)	365	388	429
Point W3 (Kg)	379	391	459
Point W4 (Kg)	365	388	429
*	Ø 3/4" Gas	Ø 1" 1/4 Gas	2x Ø 3/4" Gas

* Discharge pipe for HP safety valve


RAS 1702-2102 F Kp

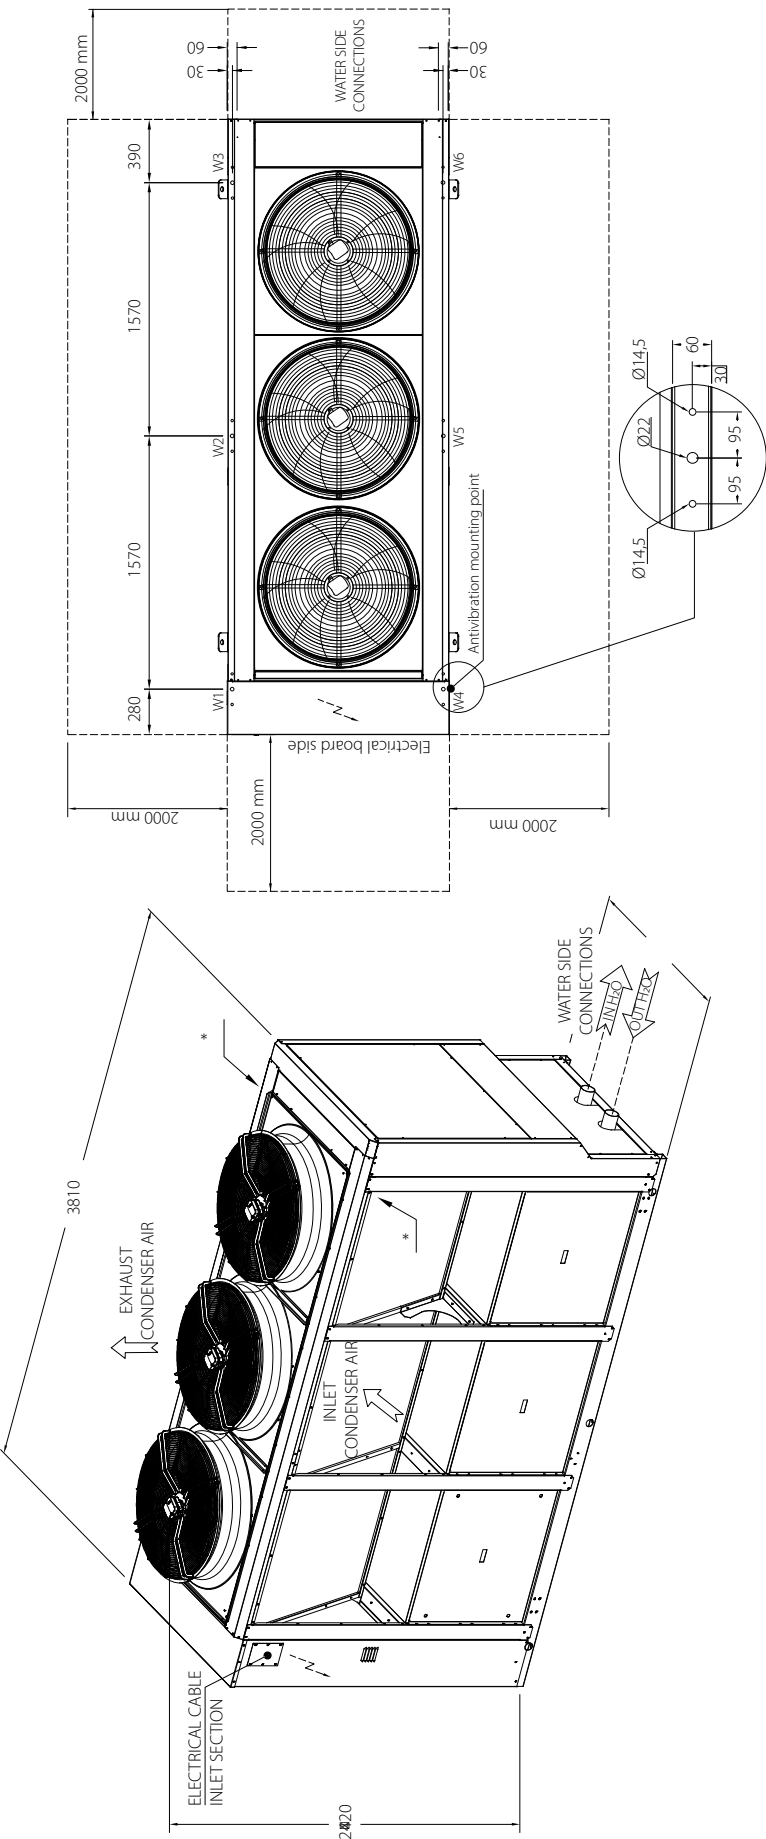

	RAS 1702 F Kp	RAS 2102 F Kp
Global weight (Kg)	2246	2280
Point W1 (Kg)	398	421
Point W2 (Kg)	377	377
Point W3 (Kg)	348	342
Point W4 (Kg)	398	421
Point W5 (Kg)	377	377
Point W6 (Kg)	348	342
*	2x Ø 3/4" Gas	2x Ø 3/4" Gas

* Discharge pipe for HP safety valve



RAS 2402-3402 F Kp

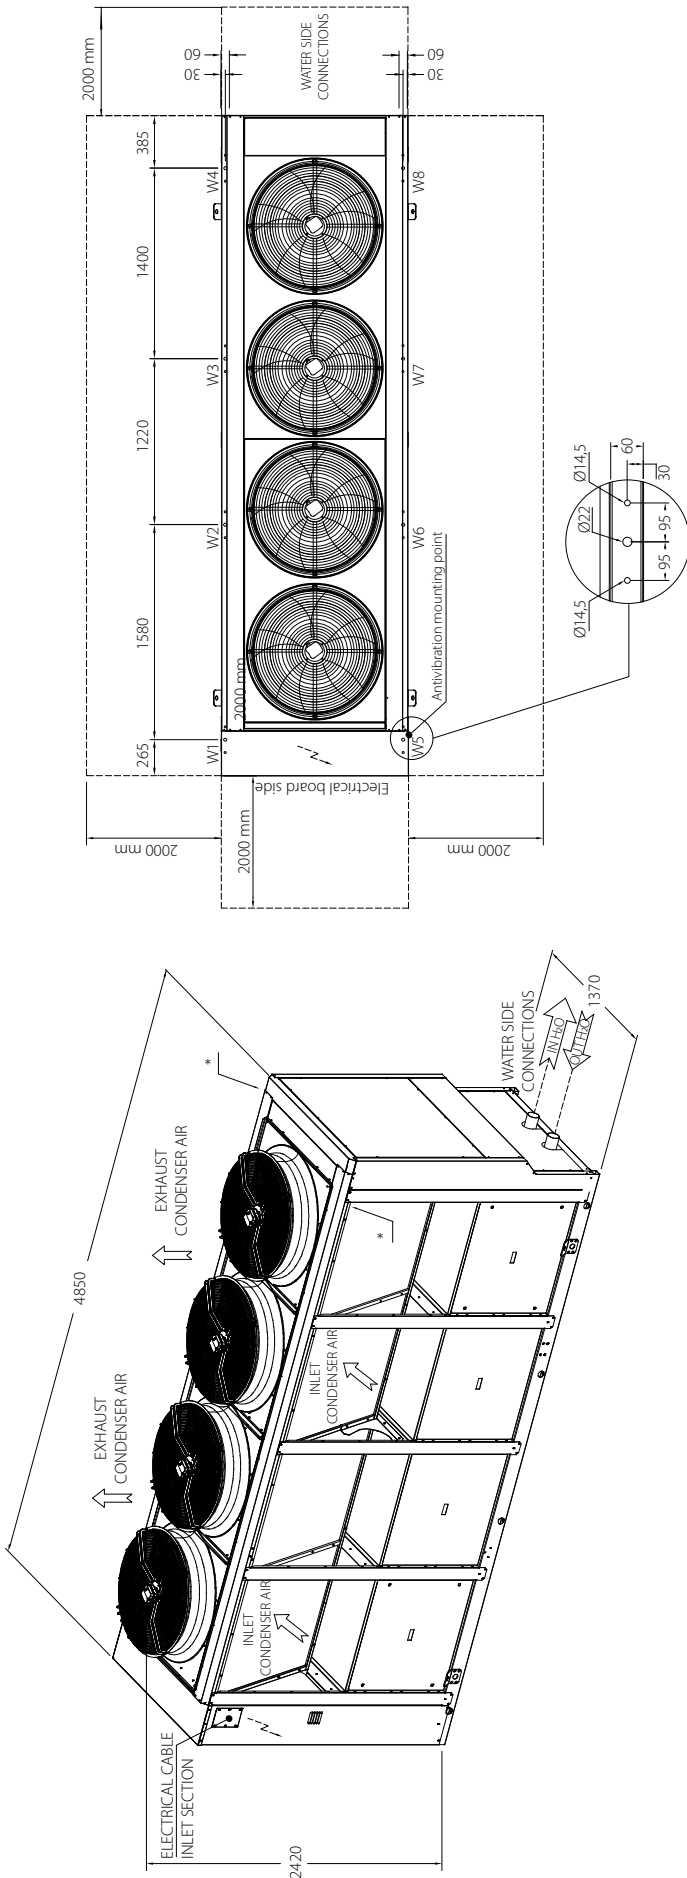

	RAS 2402 F Kp	RAS 2902 F Kp	RAS 3402 F Kp
Global weight (Kg)	2794	2974	3178
Point W1 (Kg)	385	417	445
Point W2 (Kg)	363	385	401
Point W3 (Kg)	334	346	370
Point W4 (Kg)	315	339	373
Point W5 (Kg)	385	417	445
Point W6 (Kg)	363	385	401
Point W7 (Kg)	334	346	370
Point W8 (Kg)	315	339	373
*	Ø 3/4" Gas	Ø 1" 1/4 Gas	2x Ø 3/4" Gas



* Discharge pipe for HP safety valve

GPS / PAS 451 - 521 Kp

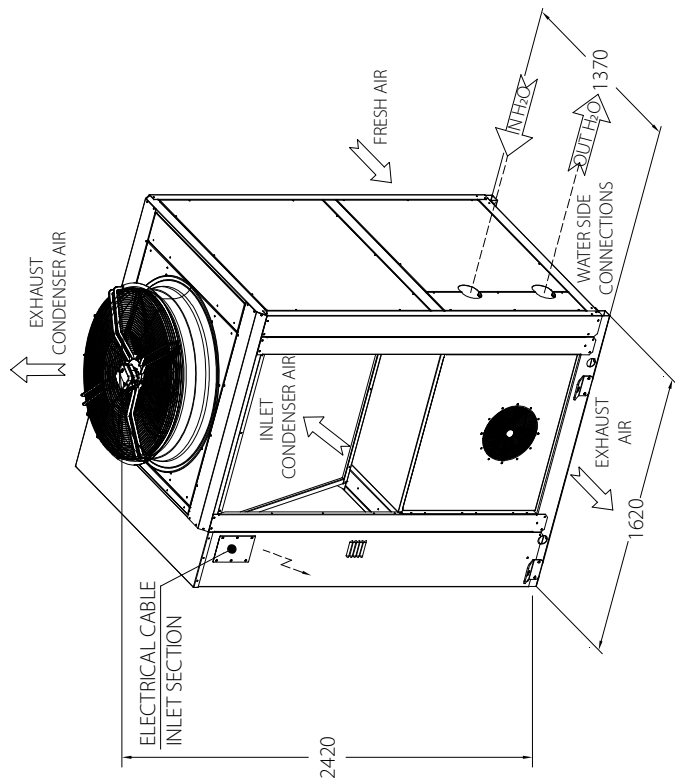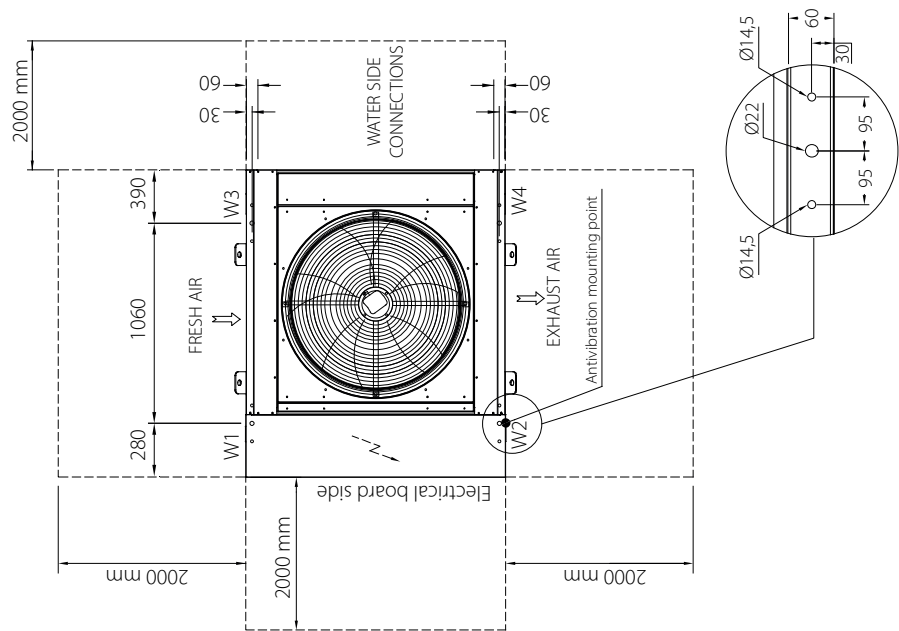



	PAS 451 Kp	PAS 521 Kp
Global weight (Kg)	884	948
Point W1 (Kg)	256	270
Point W2 (Kg)	266	270
Point W3 (Kg)	186	204
Point W4 (Kg)	186	204

GPS / PAS 651 - 731 - 881 - 1001 - 1201 Kp

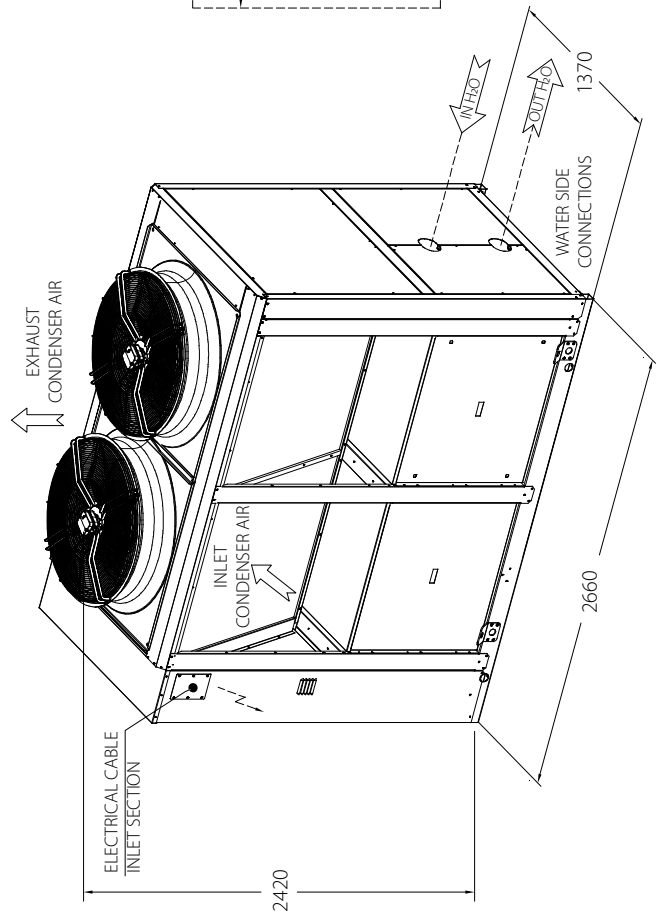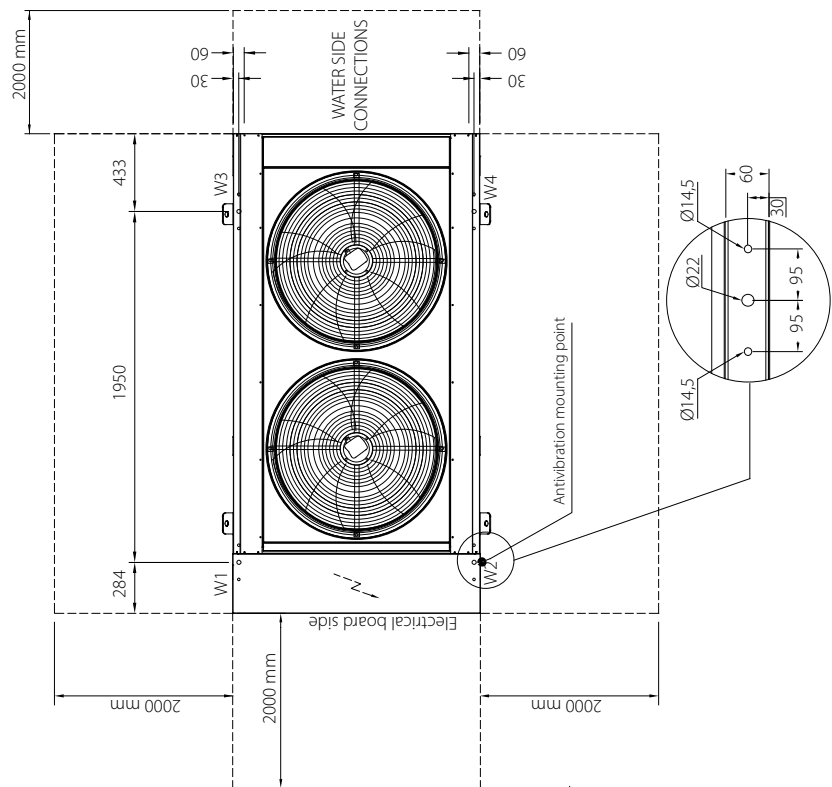



	PAS 651 Kp	PAS 731 Kp	PAS 881 Kp	PAS 1001 Kp	PAS 1201 Kp
Global weight (Kg)	1262	1284	1356	1422	1472
Point W1 (Kg)	341	347	375	389	401
Point W2 (Kg)	341	347	375	389	401
Point W3 (Kg)	290	295	303	322	335
Point W4 (Kg)	290	295	303	322	335

GPS / PAS 1502 - 1702 Kp

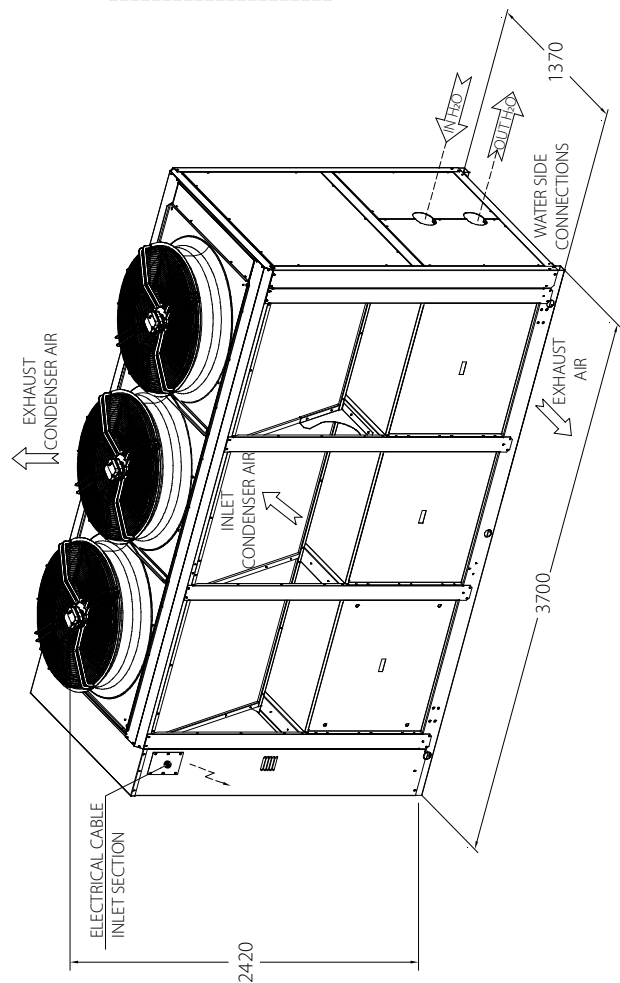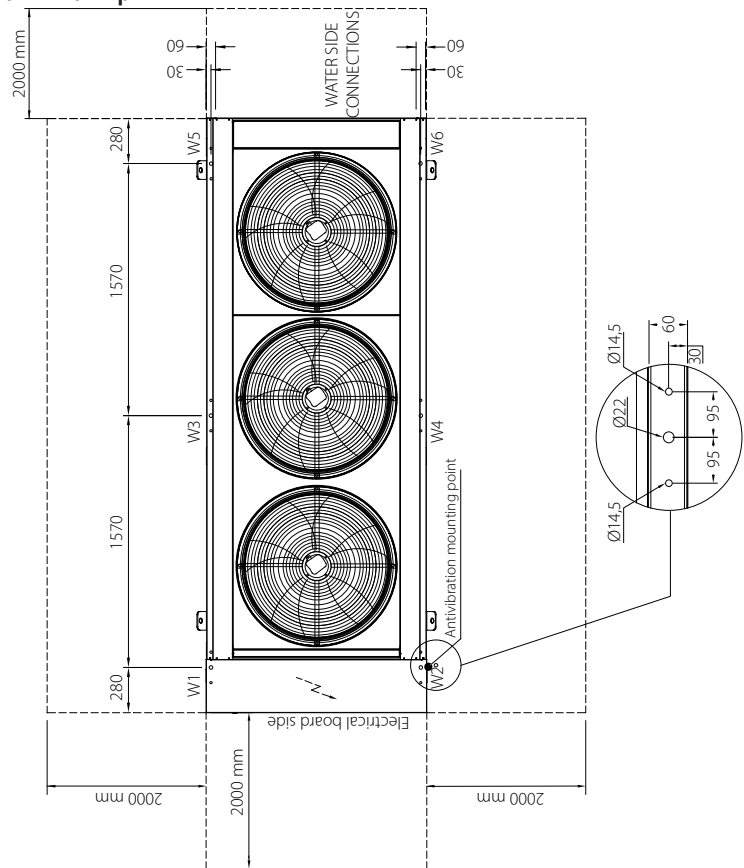


	PAS 1502 Kp	PAS 1702 Kp
Global weight (Kg)	1812	1890
Point W1 (Kg)	332	347
Point W2 (Kg)	332	347
Point W3 (Kg)	299	295
Point W4 (Kg)	299	295
Point W5 (Kg)	275	295
Point W6 (Kg)	275	295

GPS / PAS 2102 - 2502 Kp

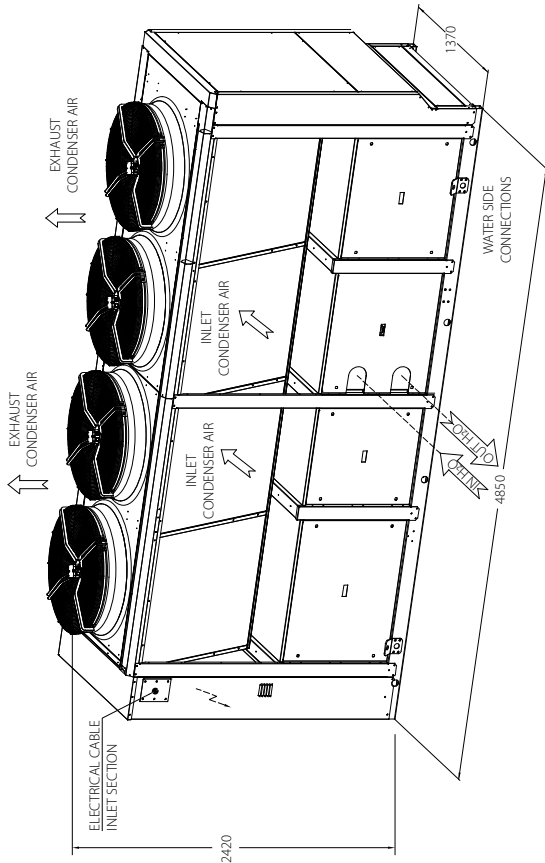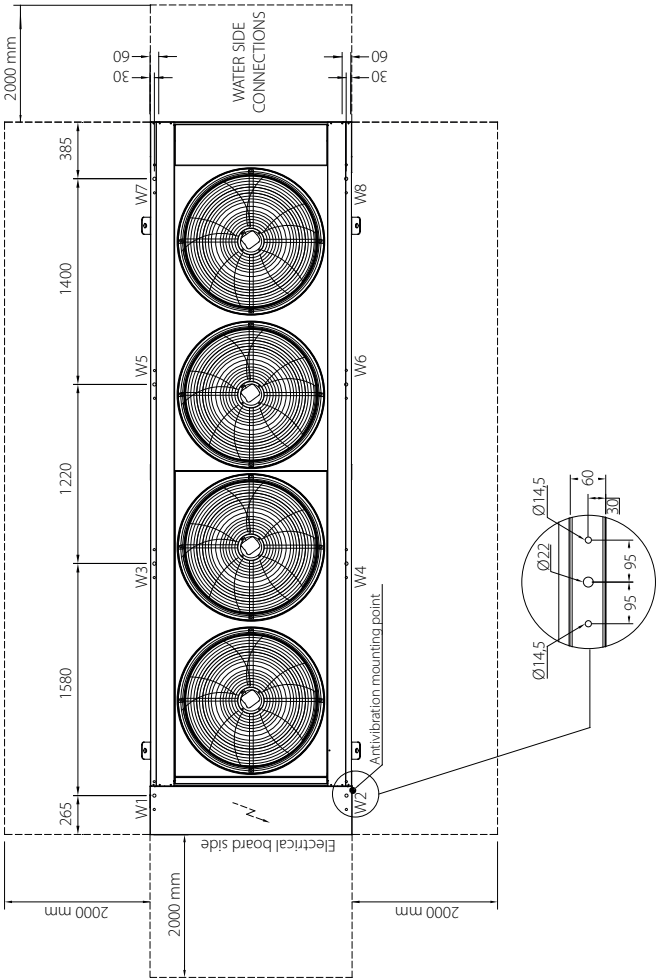

	PAS 2102 Kp	PAS 2502 Kp
Global weight (Kg)	2260	2388
Point W1 (Kg)	332	351
Point W2 (Kg)	332	351
Point W3 (Kg)	299	310
Point W4 (Kg)	299	310
Point W5 (Kg)	275	287
Point W6 (Kg)	275	287
Point W7 (Kg)	224	246
Point W8 (Kg)	224	246

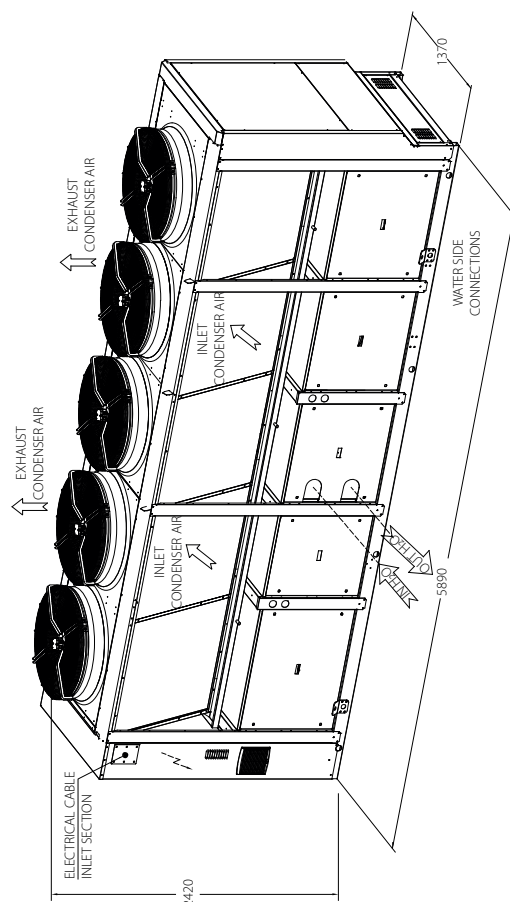[illegible]

		PAS 2902 Kp	PAS 3402 Kp
Global Weight (Kg)		2940	3138
Point W1 (Kg)		434	479
Point W2 (Kg)		434	479
Point W3 (Kg)		321	343
Point W4 (Kg)		321	343
Point W5 (Kg)		316	332
Point W6 (Kg)		316	332
Point W7 (Kg)		399	415
Point W8 (Kg)		399	415

11. SAFETY DATA SHEET OF REFRIGERANT

Safety Data Sheet according to Regulation (EC) No. 1907/2006 (REACH) with its amendment Regulation (EU) 2015/830	Revision date: 08/01/2019 Version: 2.0
---	---

R 290

Section 1 : Identification of the substance/mixture and of the company/undertaking

1.1 Product identifier

Trade name: Propano (R290)
 SDS no.: 104-RR
 Chemical description: Propane (R290)
 CAS No: 74-98-6
 EC-No. : 200-827-9
 EC Index-No. : 601-003-00-5
 Registration-No.: 01-2119486944-21
 Chemical formula: C₃H₈

1.2 Relevant identified uses of the substance or mixture and uses advised against

Relevant identified uses Industrial and professional. Perform risk assessment prior to use.
 Test gas/Calibration gas.
 Laboratory use.
 Chemical reaction / Synthesis.
 Use as a fuel.
 Contact supplier for more information on uses.

Section 2 : Hazards identification

2.1 Classification of the substance or mixture

Classification according to Regulation (EC) No. 1272/2008 [CLP]

Physical hazards: Flammable gases, Category 1 H220
 Gases under pressure : Liquefied gas H280

2.2 Label elements

Labelling according to Regulation (EC) No. 1272/2008 [CLP]

Hazard pictograms:



GHS04



GHS02

Signal word: Danger
 Hazard statements: - H 220 : Extremely flammable gas.
 - H 280 : Contains gas under pressure; may explode if heated.
 Precautionary statements: Prevention: P210 - Keep away from heat, hot surfaces, sparks, open flames and other ignition sources. No smoking.
 Response: P377 - Leaking gas fire: Do not extinguish, unless leak can be stopped safely.
 P381 - In case of leakage, eliminate all ignition sources.
 Storage : P403 - Store in a well-ventilated place.

2.3 Other hazards

Contact with liquid may cause cold burns/frostbite

Safety Data Sheet according to Regulation (EC) No. 1907/2006 (REACH) with its amendment Regulation (EU) 2015/830	Revision date: 08/01/2019 Version: 2.0
---	---

R 290

Section 3 : Composition/information on ingredients

3.1 Substances

Name	Product identifier	Concentration	Classification according to Regulation (EC) No. 1272/2008 [CLP]
Propane	(CAS-No.) 74-98-6 (EC-No.) 200-827-9 (EC Index-No.) 601-003-00-5 (Registration-No.) 01-2119486944-21	100%	Flam. Gas 1, H220 Press. Gas (Liq.), H280

Contains no other components or impurities which will influence the classification of the product.

3.2 Mixtures

: Not applicable

Section 4 : First aid measures

4.1 Description of first aid measures

- Inhalation : Remove victim to uncontaminated area wearing self contained breathing apparatus. Keep victim warm and rested. Call a doctor. Perform cardiopulmonary resuscitation if breathing stopped.
- Skin contact : For liquid spillage - flush with water for at least 15 minutes.
- Eye contact : Immediately flush eyes thoroughly with water for at least 15 minutes.
- Ingestion : Ingestion is not considered a potential route of exposure.

4.2 Most important symptoms and effects, both acute and delayed

: In high concentrations may cause asphyxiation. Symptoms may include loss of mobility/consciousness. Victim may not be aware of asphyxiation.
In low concentrations may cause narcotic effects. Symptoms may include dizziness, headache, nausea and loss of co-ordination.

4.3 Indication of any immediate medical attention and special treatment needed

: None.

Section 5 : Firefighting measures

5.1 Extinguishing media

- Suitable extinguishing media : Water spray or fog.
Dry powder.
- Unsuitable extinguishing media : Do not use water jet to extinguish.
Carbon dioxide.

5.2 Special hazards arising from the substance or mixture

- Specific hazards : Exposure to fire may cause containers to rupture/explode.
- Hazardous combustion products : Incomplete combustion may form carbon monoxide.

Safety Data Sheet

according to Regulation (EC) No. 1907/2006 (REACH)
with its amendment Regulation (EU) 2015/830

Revision date: 08/01/2019
Version: 2.0

R 290**5.3. Advice for firefighters**

- Specific methods** : Use fire control measures appropriate for the surrounding fire. Exposure to fire and heat radiation may cause gas receptacles to rupture. Cool endangered receptacles with water spray jet from a protected position. Prevent water used in emergency cases from entering sewers and drainage systems.
If possible, stop flow of product.
Use water spray or fog to knock down fire fumes if possible.
Do not extinguish a leaking gas flame unless absolutely necessary. Spontaneous/explosive reignition may occur. Extinguish any other fire.
Move containers away from the fire area if this can be done without risk.
- Special protective equipment for fire fighters** : In confined space use self-contained breathing apparatus.
Standard protective clothing and equipment (Self Contained Breathing Apparatus) for fire fighters.
Standard EN 137 - Self-contained open-circuit compressed air breathing apparatus with full face mask.
Standard EN 469 - Protective clothing for firefighters.
Standard - EN 659: Protective gloves for firefighters.

Section 6 : Accidental release measures**6.1. Personal precautions, protective equipment and emergency procedures**

- : Try to stop release.
Evacuate area.
Consider the risk of potentially explosive atmospheres.
Wear self-contained breathing apparatus when entering area unless atmosphere is proved to be safe.
Eliminate ignition sources.
Ensure adequate air ventilation.
Prevent from entering sewers, basements and workpits, or any place where its accumulation can be dangerous.
Act in accordance with local emergency plan.
Stay upwind.

6.2. Environmental precautions

- : Try to stop release.

6.3. Methods and material for containment and cleaning up

- : Ventilate area.

6.4. Reference to other sections

- : See also sections 8 and 13.

Section 7 : Handling and storage**7.1. Precautions for safe handling**

- Safe use of the product** : The product must be handled in accordance with good industrial hygiene and safety procedures.
Only experienced and properly instructed persons should handle gases under pressure.
Consider pressure relief device(s) in gas installations.
Ensure the complete gas system was (or is regularly) checked for leaks before use.
Do not smoke while handling product.
Use only properly specified equipment which is suitable for this product, its supply pressure and temperature. Contact your gas supplier if in doubt.
Assess the risk of potentially explosive atmospheres and the need for explosion-proof equipment.
Purge air from system before introducing gas.
Take precautionary measures against static discharge.
Keep away from ignition sources (including static discharges).

Safety Data Sheet according to Regulation (EC) No. 1907/2006 (REACH) with its amendment Regulation (EU) 2015/830	Revision date: 08/01/2019 Version: 2.0
---	---

R 290

Safe handling of the gas receptacle

Consider the use of only non-sparking tools.
 Do not breathe gas.
 Avoid release of product into atmosphere.
 : Refer to supplier's container handling instructions.
 Do not allow backfeed into the container.
 Protect cylinders from physical damage; do not drag, roll, slide or drop.
 When moving cylinders, even for short distances, use a cart (trolley, hand truck, etc.) designed to transport cylinders.
 Leave valve protection caps in place until the container has been secured against either a wall or bench or placed in a container stand and is ready for use.
 If user experiences any difficulty operating cylinder valve discontinue use and contact supplier.
 Never attempt to repair or modify container valves or safety relief devices.
 Damaged valves should be reported immediately to the supplier.
 Keep container valve outlets clean and free from contaminants particularly oil and water.
 Replace valve outlet caps or plugs and container caps where supplied as soon as container is disconnected from equipment.
 Close container valve after each use and when empty, even if still connected to equipment.
 Never attempt to transfer gases from one cylinder/container to another.
 Never use direct flame or electrical heating devices to raise the pressure of a container.
 Do not remove or deface labels provided by the supplier for the identification of the cylinder contents.
 Suck back of water into the container must be prevented.

7.2. Conditions for safe storage, including any incompatibilities

: Observe all regulations and local requirements regarding storage of containers.
 Containers should not be stored in conditions likely to encourage corrosion.
 Container valve guards or caps should be in place.
 Containers should be stored in the vertical position and properly secured to prevent them from falling over.
 Stored containers should be periodically checked for general condition and leakage.
 Keep container below 50°C in a well ventilated place.
 Store containers in location free from fire risk and away from sources of heat and ignition.
 Keep away from combustible materials.
 Segregate from oxidant gases and other oxidants in store.
 All electrical equipment in the storage areas should be compatible with the risk of a potentially explosive atmosphere.

7.3. Specific end use(s)

: None.

Section 8: Exposure controls/personal protection

8.1. Control parameters

OEL (Occupational Exposure Limits) : No data available.
 DNEL (Derived-No Effect Level) : No data available.
 PNEC (Predicted No-Effect Concentration) : No data available.

Safety Data Sheet according to Regulation (EC) No. 1907/2006 (REACH) with its amendment Regulation (EU) 2015/830	Revision date: 08/01/2019 Version: 2.0
---	---

R 290

8.2. Exposure controls

8.2.1. Appropriate engineering controls

: Provide adequate general and local exhaust ventilation.
 Systems under pressure should be regularly checked for leakages.
 Ensure exposure is below occupational exposure limits (where available).
 Gas detectors should be used when flammable gases/vapours may be released.
 The substance is not classified for human health hazards or for environment effects and it is not PBT or vPvB so that no exposure assessment or risk characterisation is required. For tasks where the intervention of workers is required, the substance must be handled in accordance with good industrial hygiene and safety procedures.
 Consider the use of a work permit system e.g. for maintenance activities.

8.2.2. Individual protection measures, e.g. personal protective equipment

: A risk assessment should be conducted and documented in each work area to assess the risks related to the use of the product and to select the PPE that matches the relevant risk. The following recommendations should be considered:

- Eye/face protection : PPE compliant to the recommended EN/ISO standards should be selected.
 : Wear safety glasses with side shields.
 Wear goggles when transfilling or breaking transfer connections.
 Standard EN 166 - Personal eye-protection - specifications.
- Skin protection : Wear working gloves when handling gas containers.
 - Hand protection : Standard EN 388 - Protective gloves against mechanical risk.
 - Other : Consider the use of flame resistant anti-static safety clothing.
 Standard EN ISO 14116 - Limited flame spread materials.
 Standard EN 1149-5 - Protective clothing: Electrostatic properties.
 Wear safety shoes while handling containers.
 Standard EN ISO 20345 - Personal protective equipment - Safety footwear.
- Respiratory protection : Gas filters may be used if all surrounding conditions e.g. type and concentration of the contaminant(s) and duration of use are known.
 Recommended: Filter AX (brown).
 Consult respiratory device supplier's product information for the selection of the appropriate device.
 Gas filters do not protect against oxygen deficiency.
 Standard EN 14387 - Gas filter(s), combined filter(s) and standard EN136, full face masks.

- Thermal hazards : None necessary.

8.2.3. Environmental exposure controls

: Refer to local regulations for restriction of emissions to the atmosphere. See section 13 for specific methods for waste gas treatment.

Safety Data Sheet

according to Regulation (EC) No. 1907/2006 (REACH)
with its amendment Regulation (EU) 2015/830

Revision date: 08/01/2019
Version: 2.0

R 290**Section 9: Physical and chemical properties****9.1. Information on basic physical and chemical properties**

Appearance

- Physical state at
20°C / 101.3kPa : Gas

- Colour : Colourless.

Odour : Stenchant often added. Sweetish. Poor warning properties at low concentrations.

Odour threshold : Odour threshold is subjective and inadequate to warn of overexposure.

pH : Not applicable.

Melting point / Freezing point : -188 °C

Boiling point : -42,1 °C

Flash point : Not applicable for gases and gas mixtures.

Evaporation rate : Not applicable for gases and gas mixtures.

Flammability (solid, gas)

Explosive limits : 1,7 - 10,8 vol %

Vapour pressure [20°C] : 8,3 bar(a)

Vapour pressure [50°C] : 17 bar(a)

Relative density, liquid
(water=1) : 0,58

Relative density, gas (air=1) : 1,5

Water solubility : 75 mg/l

Partition coefficient : 2,36

n-octanol/water (Log Kow)

Auto-ignition temperature : 470 °C

Viscosity : Not applicable.

Explosive properties : Not applicable.

Oxidising properties : None.

9.2. Other information

Molar mass : 44 g/mol

Critical temperature [°C] : 96,7 °C

Other data : Gas/vapour heavier than air. May accumulate in confined spaces, particularly at or below ground level.

Section 10: Stability and reactivity**10.1. Reactivity**

: No reactivity hazard other than the effects described in sub-sections below.

10.2. Chemical stability

: Stable under normal conditions.

10.3. Possibility of hazardous reactions

: May react violently with oxidants.

Can form explosive mixture with air.

10.4. Conditions to avoid

: Keep away from heat/sparks/open flames/hot surfaces. – No smoking.

10.5. Incompatible materials

: Air, Oxidisers.

For additional information on compatibility refer to ISO 11114.

Safety Data Sheet

according to Regulation (EC) No. 1907/2006 (REACH)
with its amendment Regulation (EU) 2015/830

Revision date: 08/01/2019
Version: 2.0

R 290**10.6. Hazardous decomposition products**

: Under normal conditions of storage and use, hazardous decomposition products should not be produced.

Section 11: Toxicological information**11.1. Information on toxicological effects**

Acute toxicity : No known toxicological effects from this product.

LC50 inhalation rat (ppm) : 20000 ppm/4h

Skin corrosion/irritation : No known effects from this product.

Serious eye damage/irritation : No known effects from this product.

Respiratory or skin sensitisation : No known effects from this product.

Germ cell mutagenicity : No known effects from this product.

Carcinogenicity : No known effects from this product.

Toxic for reproduction : Fertility : No known effects from this product.

Toxic for reproduction : unborn child : No known effects from this product.

STOT-single exposure : No known effects from this product.

STOT-repeated exposure : No known effects from this product.

Aspiration hazard : Not applicable for gases and gas mixtures.

Section 12: Ecological information**12.1. Toxicity**

EC50 48h - Daphnia magna [mg/l] : 27,1 mg/l

EC50 72h - Algae [mg/l] : 11,9 mg/l

CL50 96h - Fish [mg/l] : 49,9 mg/l

12.2. Persistence and degradability

Assessment : The substance is readily biodegradable. Unlikely to persist.

12.3. Bioaccumulative potential

Assessment : Not expected to bioaccumulate due to the low log Kow (log Kow < 4).
Refer to section 9.

12.4. Mobility in soil

Assessment : Because of its high volatility, the product is unlikely to cause ground or water pollution.

12.5. Results of PBT and vPvB assessment

Assessment : Not classified as PBT or vPvB.

12.6. Other adverse effects

Effect on the ozone layer : None.

Global warming potential [CO₂=1] : 3

Effect on global warming : No known effects from this product.

Safety Data Sheet
 according to Regulation (EC) No. 1907/2006 (REACH)
 with its amendment Regulation (EU) 2015/830

Revision date: 08/01/2019

Version: 2.0

R 290**Section 13: Disposal considerations****13.1. Waste treatment methods**

Do not discharge into areas where there is a risk of forming an explosive mixture with air.
 Waste gas should be flared through a suitable burner with flash back arrestor.
 Do not discharge into any place where its accumulation could be dangerous.
 Ensure that the emission levels from local regulations or operating permits are not exceeded.
 Refer to the EIGA code of practice Doc.30 "Disposal of Gases", downloadable at <http://www.eiga.org> for more guidance on suitable disposal methods.
 : 16 05 04 *: Gases in pressure containers (including halons) containing hazardous substances.

List of hazardous waste codes
 (from Commission Decision 2000/532/EC as
 amended)

13.2. Additional information

: None.

Section 14: Transport information**14.1. UN number**

UN-No. : 1978

14.2. UN proper shipping name

Transport by road/rail (ADR/RID) : PROPANE
 Transport by air (ICAO-TI / IATA-DGR) : PROPANE
 Transport by sea (IMDG) : PROPANE

14.3. Transport hazard class(es)

Labelling :



2.1 : Flammable gases.

Transport by road/rail (ADR/RID)

Class : 2
 Classification code : 2F
 Hazard identification number : 23
 Tunnel Restriction : B/D - Tank carriage : Passage forbidden through tunnels of category B, C, D and E. Other carriage : Passage forbidden through tunnels of category D and E

Transport by air (ICAO-TI / IATA-DGR)

Class / Div. (Sub. risk(s)) : 2.1

Transport by sea (IMDG)

Class / Div. (Sub. risk(s)) : 2.1
 Emergency Schedule (EmS) - Fire : F-D
 Emergency Schedule (EmS) - Spillage : S-U

Safety Data Sheet

according to Regulation (EC) No. 1907/2006 (REACH)
with its amendment Regulation (EU) 2015/830

Revision date: 08/01/2019

Version: 2.0

R 290**14.4. Packing group**

Transport by road/rail (ADR/RID) : Not applicable
 Transport by air (ICAO-TI / IATA-DGR) : Not applicable
 Transport by sea (IMDG) : Not applicable

14.5. Environmental hazards

Transport by road/rail (ADR/RID) : None.
 Transport by air (ICAO-TI / IATA-DGR) : None.
 Transport by sea (IMDG) : None.

14.6. Special precautions for user**Packing Instruction(s)**

Transport by road/rail (ADR/RID) : P200
 Transport by air (ICAO-TI / IATA-DGR)
 Passenger and Cargo Aircraft : Forbidden.
 Cargo Aircraft only : 200.
 Transport by sea (IMDG) : P200
 Special transport precautions : Avoid transport on vehicles where the load space is not separated from the driver's compartment.
 Ensure vehicle driver is aware of the potential hazards of the load and knows what to do in the event of an accident or an emergency.
 Before transporting product containers:
 - Ensure there is adequate ventilation.
 - Ensure that containers are firmly secured.
 - Ensure cylinder valve is closed and not leaking.
 - Ensure valve outlet cap nut or plug (where provided) is correctly fitted.
 - Ensure valve protection device (where provided) is correctly fitted.

14.7. Transport in bulk according to Annex II of Marpol and the IBC Code

: Not applicable.

Section 15: Regulatory information**15.1. Safety, health and environmental regulations/legislation specific for the substance or mixture****EU-Regulations**

Restrictions on use : None.
 Seveso Directive : 2012/18/EU (Seveso III) : Listed.

National regulations

National legislation : Ensure all national/local regulations are observed.
 Kenn-Nr. : 560

15.2. Chemical safety assessment

: A CSA has been carried out.
 Refer to section 8.2.

Safety Data Sheet according to Regulation (EC) No. 1907/2006 (REACH) with its amendment Regulation (EU) 2015/830	Revision date: 08/01/2019 Version: 2.0
---	---

R 290**Section 16: Other information**

Training advice	: Ensure operators understand the flammability hazard. The hazard of asphyxiation is often overlooked and must be stressed during operator training.
Further information	: This Safety Data Sheet has been established in accordance with the applicable European Union legislation.
DISCLAIMER OF LIABILITY	: Before using this product in any new process or experiment, a thorough material compatibility and safety study should be carried out. Details given in this document are believed to be correct at the time of going to press. Whilst proper care has been taken in the preparation of this document, no liability for injury or damage resulting from its use can be accepted.

12. SAFETY DATA SHEET REFRIGERATION LUBRICANT PAG 46-68-100-125-150- UNIVERSAL

Safety data sheet Refrigeration Lubricant PAG 46-68-100-125-150- Universal	2/2/2018 revision 4
--	------------------------

Section 1: identification of the substance/mixture and of the company/undertaking

1.1. Product identifier

Identification of the mixture: Commercial name: Refrigeration Lubricant PAG 46-68-100-125-150- Universal

1.2. Relevant identified uses of the substance or mixture and uses advised against

Identified uses: PAG lubricant for air conditioning systems

Section. 2: Hazard identification

2.1. Classification of substance or mixture

Regulation CE 1272/2008 (CLP): The product is not considered dangerous according to EC Regulation 1272/2008 (CLP).
Physico-chemical effects damaging to human health and the environment: No other danger

2.2. Label elements

The product is not considered dangerous according to EC Regulation CE 1272/2008 (CLP).
Hazard pictograms: None
Indications of danger: None
Precautionary statement disposal: None
Special disposal: None
Special measures according to Annex XVII of REACH and subsequent adjustments: None

2.3. Other hazards

: None identified

Section 3: composition/information on ingredients

3.1. Substances

N.A.

3.2. Mixtures

Hazardous components according to CLP Regulation and classification: None.

Section 4: first aid measures

4.1. Description of first aid measures

Skin contact: Wash skin thoroughly with soap and water.
Eye contact: Any material that contacts the eye should be washed out immediately with water. Call a doctor
Ingestion: Do not induce vomiting at all. IMMEDIATELY GO TO MEDICAL CHECK-UP.
Inhalation: Take the victim outdoors and keep him warm and at rest.

4.2. Most important symptoms and effects, both acute and delayed

None

4.3. Indication of any immediate medical attention and special treatment needed

Treatment: None

Safety data sheet Refrigeration Lubricant PAG 46-68-100-125-150- Universal	2/2/2018 revision 4
--	------------------------

Section 5: Firefighting measures

5.1. Extinguishing media

Suitable extinguishing media:

Water.

CO₂.

Unsuitable extinguishing media: Not determined.

5.2. Special hazards arising from the substance or mixture

Do not inhale the gases produced by the explosion and combustion.

Combustion produces dense smoke.

5.3. Advice for firefighters

Use suitable respiratory equipment.

Separately collect contaminated water used to extinguish the fire. Do not discharge into the drain system.

If safety is practicable, move undamaged containers out of the hazard area.

Section 6: Accidental release measures

6.1. Personal precautions, Protective equipment and emergency procedures

Wear personal protective equipment.

Move people to a safe place.

See protective measures exposed to point 7 and 8.

6.2. Environmental precautions

Prevent penetration into soil/subsoil. Prevent runoff into surface water or drainage system.

Keep contaminated washing water and eliminate it.

In the event of a gas leak or penetration into watercourses, soil or drainage system, inform the responsible authorities.

Material suitable for collection: absorbent material, organic, sand

6.3. Method and material for containment and cleaning up

Wash with water.

6.4. Reference to other section

See section 8 and 13 for other information

Section 7: handling and storage

7.1. Precaution for safe handling

Avoid contact with skin and eyes, inhalation of vapours and fogs.

Do not eat or drink during work.

Please also refer to section 8 for recommended protective equipment.

7.2. Conditions for safe storage, including any incompatibilities

Keep container well closed. To maintain product quality, do not store in heat or direct sunlight. Store in a dry, cool and well-ventilated place.

Keep away from food, drink and feed.

Incompatible materials: No particular substances. See also paragraph 10 hereafter.

Indication for rooms: Properly ventilated rooms.

7.3. Specific end use(s)

No information available.

Safety data sheet Refrigeration Lubricant PAG 46-68-100-125-150- Universal	2/2/2018 revision 4
--	------------------------

Section 8: Exposure controls/personal protection**8.1. Control parameters**

No work exposure limits are available

Exposure limit values DNEL

N.A.

PNEC exposure limit values

N.A.

8.2. Exposure controls

Eye protection: Not required for normal use. However, operate according to good working practices.

Skin protection: No special precautions required for normal use.

Hand protection: Not required for normal use.

Respiratory protection: Not required for normal use.

Thermal hazards: None

Environmental exposure controls: None

Suitable engineering checks: None

Section 9: Physical and chemical properties**9.1. Information on basic physical and chemical properties**

Appearance and colour: colourless liquid

Odour: characteristic

Odour threshold: N.A.

pH: N.O.

Melting/freezing point: N.O.

Boiling point and boiling range: >200 °C

Solid/gas flammability: N.O.

Upper/lower flammability limit or explosion: N.O.

Vapour density: N.O.

Flash point: >200°C

Evaporation speed: N.O.

Vapour pressure: N.O.

Relative density: 0.985-1.052 g/mL (15°C)

Water solubility: insoluble

Solubility in oil: N.O.

Partition coefficient (n-octanol/water): N.O.

Auto-ignition temperature: N.O.

Decomposition temperature: N.O.

Viscosity: 46-150 mm²/s (40°C)

Explosive properties: N.O.

Oxidizing properties: N.O.

9.2. Other information

Mixability: N.O.

Liposolubility: N.O.

Conductivity: N.O.

Characteristic properties of substance groups N.O.

C.O.V. (p/p): 0 %

Safety data sheet Refrigeration Lubricant PAG 46-68-100-125-150- Universal	2/2/2018 revision 4
--	------------------------

Section 10: Stability and reactivity

10.1. Reactivity

Steady under normal conditions

10.2. Chemical stability

Steady under normal conditions

10.3. Possibility of hazardous reactions

None

10.4. Conditions to avoid

Steady under normal conditions

10.5. Incompatible materials

None in particular.

10.6. Hazardous decomposition products

No data available

Section 11: Toxicological information

11.1. Informazione on toxicological effects

Toxicological information regarding the product:

Refrigeration Lubricant PAG 46-68-100-125-150- Universal

(a) acute toxicity

Classification: Not classified

Considerations: Not classified on available data

(b) skin corrosion/irritation

Classification: Not classified

Considerations: Not classified on available data

(c) Serious eye injury/serious eye irritation

Classification: Not classified

Considerations: Not classified on available data

d) respiratory or dermal sensitisation

Classification: Not classified

Considerations: Not classified on available data

(e) germ cell mutagenicity

Classification: Not classified

Considerations: Not classified on available data

f) Cancerogenicity

Classification: Not classified

Considerations: Not classified on available data

(g) toxicity for reproduction

Classification: Not classified

Considerations: Not classified on available data

(h) STOT - single exposure

Classification: Not classified

Considerations: Not classified on available data

i) STOT — repeated exposure

Classification: Not classified

Considerations: Not classified on available data

Safety data sheet Refrigeration Lubricant PAG 46-68-100-125-150- Universal	2/2/2018 revision 4
--	------------------------

j) Hazard in case of aspiration

Classification: Not classified

Considerations: Not classified on available data

Toxicological information regarding the main substances present in the product: N.A.

Section 12: Ecological information

12.1. Toxicity

Use according to good working practices, avoiding to waste the product in the environment.

Refrigeration Lubricant PAG 46-68-100-125-150- Universal

Classification: Not classified for environmental hazards

Considerations: Not classified on available data

12.2. Persistence and degradability

N.A.

12.3. Bioaccumulative Potencial

N.A.

12.4. Mobility

N.A.

12.5. Results of PBT and vPvB assessment

Substance vPvB: None - Substance PBT: None

12.6. Other adverse effects

None

Section 13: Disposal considerations

13.1. Waste treatment methods

Recover if possible. Operate according to current local and national regulations.

Section 14: Transport informations

14.1. UN Number

Not dangerous goods according to transport regulations.

14.2. UN shipping name

N.A.

14.3. Transport hazard classes

N.A.

14.4. Packaging group

N.A.

14.5. Environmental hazards

IMDG-Marine pollutant: No

14.6. User special precautions

N.A.

14.7. Transport in bulk according to Annex II of MARPOL and the IBC Code

N.A.

Safety data sheet Refrigeration Lubricant PAG 46-68-100-125-150- Universal	2/2/2018 revision 4
--	------------------------

Section 15: Regulatory information

15.1. Safety, health and environmental regulations/legislation specific for the substance or mixture

D.Lgs. 9/4/2008 n. 81
D.M. Lavoro 26/02/2004 (Occupational exposure limits)
Regulation (EC) n. 1907/2006 (REACH)
Regulation (EC) n. 1272/2008 (CLP)
Regulation (EC) n. 790/2009 (ATP 1 CLP) e (UE) n. 758/2013
Regulation (EC) 2015/830
Regulation (EC) n. 286/2011 (ATP 2 CLP)
Regulation (EC) n. 618/2012 (ATP 3 CLP)
Regulation (EC) n. 487/2013 (ATP 4 CLP)
Regulation (EC) n. 944/2013 (ATP 5 CLP)
Regulation (EC) n. 605/2014 (ATP 6 CLP)
Regulation (EC) n. 2015/1221 (ATP 7 CLP)
Regulation (EC) n. 2016/918 (ATP 8 CLP)
Regulation (EC) n. 2016/1179 (ATP 9 CLP)

Restrictions on the product or substances contained in accordance with Annex XVII of Regulation (EC) 1907/2006 (REACH) and subsequent adjustments:

Restrictions on the product: None.

Restrictions on contained substances: No restrictions.

Where applicable, please refer to the following regulations:

Ministerial circulars 46 and 61 (Aromatic amines).

Directive 2012/18/EU (Seveso III)

Regulation 648/2004/EC (Detergents).

D.L. 3/4/2006 n. 152 Environmental regulations

Directive 2004/42/EC (VOC Directive)

Directive EU 2012/18 (Seveso III):

Category Seveso III according to Annex 1, Part 1

None

15.2. Chemical safety assessment

No chemical safety assessment has been carried out for the mixture

Section 16: Other information

Paragraphs modified from the previous revision:

SECTION 6: measures in case of accidental release

SECTION 7: handling and storage

SECTION 9: physical and chemical properties

SECTION 10: stability and reactivity

SECTION 11: toxicological information

SECTION 12: ecological information

SECTION 15: Regulatory information

SECTION 16: other information

Safety data sheet Refrigeration Lubricant PAG 46-68-100-125-150- Universal	2/2/2018 revision 4
--	------------------------

This document has been written by a competent SDS technician who has received appropriate training.

Main bibliographical sources:

ECDIN - Environmental Chemicals Data and Information Network - Joint Research Centre, Commission of the European Communities

SAX's DANGEROUS PROPERTIES OF INDUSTRIAL MATERIALS - Eight Edition - Van Nostrand Reinold

CCNL - Annex 1

Higher Institute of Health - National Inventory of Chemical Substances

The information provided herein is based on our knowledge as at the above date. It refers only to the product indicated and does not constitute a guarantee of any particular quality.

The user is obliged to ensure the suitability and completeness of this information in relation to the specific use to be made of it.

This sheet cancels and replaces all previous editions.

ADR:	European Agreement concerning the International Carriage of Dangerous Goods by Road.
CAS:	Chemical Abstracts Service (division of the American Chemical Society).
CLP:	Classification, Labelling, Packaging.
DNEL:	Derived level without effect.
EINECS:	European Inventory of Existing European Chemical Substances on the Market.
GefStoffVO:	Ordinance on Dangerous Substances in Germany.
GHS:	Globally harmonised classification and labelling system for chemicals.
IATA:	International Air Transport Association.
IATA-DGR:	Dangerous Goods Regulation of the "International Air Transport Association" (IATA).
ICAO:	International Civil Aviation Organisation.
ICAO-TI:	Technical Instructions of the "International Civil Aviation Organisation" (ICAO).
IMDG:	International Maritime Dangerous Goods Code.
INCI:	International Nomenclature of Cosmetic Ingredients.
KSt:	Explosion Coefficient.
LC50:	Lethal concentration for 50% of the test population.
LD50:	Lethal dose for 50 per cent of the test population.
PNEC:	Expected concentration without effect.
RID:	Regulation concerning the international transport of dangerous goods by rail.
STEL:	Short term exposure limit.
STOT:	Organo-specific toxicity.
TLV:	Threshold limit value.
TWA:	Time weighted average
WGK:	Water hazard class (Germany).



EMICON AC SPA

Via A. Volta, 49 ▪ cap 47014 ▪ Meldola (FC)
Tel. +39 0543 495611 ▪ Fax +39 0543 495612
emicon@emiconac.it ▪ www.emiconac.it

P.IVA e C.F. 03402390409 ▪ R.E.A. 299199

Technical data shown in this booklet are not binding.

The Company shall have the right to introduce at any time whatever modifications necessary to the improvement of the product.
The reference languages for the whole documentation are Italian and English. The other languages are to be considered only as guidelines.
